

Rockchip RKMedia Development Guide

ID: RK-KF-YF-382

Release Version: V1.3.5

Release Date: 2021-08-13

Security Level: ☐Top-Secret ☐Secret ☐Internal ☒Public

DISCLAIMER

THIS DOCUMENT IS PROVIDED "AS IS". ROCKCHIP ELECTRONICS CO., LTD. ("ROCKCHIP") DOES NOT PROVIDE ANY WARRANTY OF ANY KIND, EXPRESSED, IMPLIED OR OTHERWISE, WITH RESPECT TO THE ACCURACY, RELIABILITY, COMPLETENESS, MERCHANTABILITY, FITNESS FOR ANY PARTICULAR PURPOSE OR NON-INFRINGEMENT OF ANY REPRESENTATION, INFORMATION AND CONTENT IN THIS DOCUMENT. THIS DOCUMENT IS FOR REFERENCE ONLY. THIS DOCUMENT MAY BE UPDATED OR CHANGED WITHOUT ANY NOTICE AT ANY TIME DUE TO THE UPGRADES OF THE PRODUCT OR ANY OTHER REASONS.

Trademark Statement

"Rockchip", "瑞芯微", "瑞芯" shall be Rockchip's registered trademarks and owned by Rockchip. All the other trademarks or registered trademarks mentioned in this document shall be owned by their respective owners.

All rights reserved. ©2021. Rockchip Electronics Co., Ltd.

Beyond the scope of fair use, neither any entity nor individual shall extract, copy, or distribute this document in any form in whole or in part without the written approval of Rockchip.

Rockchip Electronics Co., Ltd.

No.18 Building, A District, No.89, software Boulevard Fuzhou, Fujian, PRC

Website: www.rock-chips.com

Customer service Tel: +86-4007-700-590

Customer service Fax: +86-591-83951833

Customer service e-Mail: fae@rock-chips.com

Preface

Overview

This document mainly describes the RKMedia media development reference.

Product Version

Chipset	Kernel Version
RV1126/RV1109	Linux V4.19

Intended Audience

This document (this guide) is mainly intended for:

Technical support engineers

Software development engineers

Revision History

Version	Author	Date	Revision History
V0.0.1	Francis / Yongzhen	2020-08-31	Initial version
V1.0.0	Fenrir Lin	2020-09-03	Add data type and error code, and related link
V1.1.0	Francis/Allen	2020-11-18	<p>1.Add API description:</p> <p>(1) RK_MPI_MB_CreateBuffer</p> <p>(2) RK_MPI_MB_CreateImageBuffer</p> <p>(3) RK_MPI_MB_CreateAudioBuffer</p> <p>(4) RK_MPI_MB_ConvertToImgBuffer</p> <p>(5) RK_MPI_MB_ConvertToAudBuffer</p> <p>(6) RK_MPI_MB_SetSzie</p> <p>(7) RK_MPI_MB_SetTimestamp</p> <p>(8) RK_MPI_MB_GetFlag</p> <p>(9) RK_MPI_MB_GetTsvcLevel</p> <p>(10) RK_MPI_MB_IsViFrame</p> <p>(11) RK_MPI_MB_GetImageInfo</p> <p>(12) RK_MPI_MB_BeginCPUAccess</p> <p>(13) RK_MPI_MB_EndCPUAccess</p> <p>(14) RK_MPI_VI_StartRegionLuma</p> <p>(15) RK_MPI_VI_StopRegionLuma</p> <p>(16) RK_MPI_VENC_GetVencChnAttr</p> <p>(17) RK_MPI_VENC_SetVencChnAttr</p> <p>(18) RK_MPI_VENC_CreateJpegLightChn</p> <p>(19) RK_MPI_VENC_GetRcParam</p> <p>(20) RK_MPI_VENC_SetResolution</p> <p>(21) RK_MPI_VENC_GetRoiAttr</p> <p>(22) RK_MPI_VENC_RGN_SetPaletteId</p> <p>(23) RK_MPI_VENC_GetFd</p> <p>(24) RK_MPI_VENC_QueryStatus</p> <p>(25) RK_MPI_ALGO_MD_EnableSwitch</p> <p>(26) RK_MPI_ALGO_OD_EnableSwitch</p> <p>(27) RK_MPI_VO_SetChnAttr</p> <p>(28) RK_MPI_AI_StartStream</p> <p>(29) RK_MPI_AO_QueryChnStat</p> <p>(30) RK_MPI_AO_ClearChnBuf</p> <p>(31) RK_MPI_SYS_StartGetMediaBuffer</p> <p>(32) RK_MPI_SYS_StopGetMediaBuffer</p> <p>(33) RK_MPI_VDEC_CreateChn</p> <p>(34) RK_MPI_VDEC_DestroyChn</p> <p>2. Update API: RK_MPI_VO_CreateChn</p> <p>3.New example description section</p>
V1.1.1	Allen Chen	2020-12-08	Fix some VI working mode errors

Version	Author	Date	Revision History
V1.2.0	Allen Chen/Fenrir Lin	2020- 12-17	1. Optimize language description 2. Add Build Introduction 3. Add API Introduction: (1) RK_MPI_LOG_SetLevelConf (2) RK_MPI_LOG_GetLevelConf
V1.2.1	Francis/Ruby	2021- 01-03	Update some expression of contents Correct some code error Correct some example description error Update some example parameter description
V1.2.2	Francis	2021- 01-15	1. Add interface description

Version	Author	Date	Revision History
V1.3.0	Francis/Zhihua Wang	2021-02-03	<p>1. Add API introduction:</p> <p>(1) RK_MPI_SYS_SetFrameRate</p> <p>(2) RK_MPI_MB_POOL_Create</p> <p>(3) RK_MPI_MB_POOL_Destroy</p> <p>(4) RK_MPI_MB_POOL_GetBuffer</p> <p>(5) RK_MPI_MB_Copy</p> <p>(6) RK_MPI_VI_SetUserPic</p> <p>(7) RK_MPI_VI_EnableUserPic</p> <p>(8) RK_MPI_VI_DisableUserPic</p> <p>(9) RK_MPI_VI_RGN_SetCover</p> <p>(10) RK_MPI_VENC_RGN_SetCoverEx</p> <p>(11) RK_MPI_RGA_RGN_SetBitMap</p> <p>(12) RK_MPI_RGA_GetChnRegionLuma</p> <p>(13) RK_MPI_RGA_RGN_SetCover</p> <p>(14) RK_MPI_VMIX_CreateDev</p> <p>(15) RK_MPI_VMIX_DestroyDev</p> <p>(16) RK_MPI_VMIX_EnableChn</p> <p>(17) RK_MPI_VMIX_DisableChn</p> <p>(18) RK_MPI_VMIX_SetLineInfo</p> <p>(19) RK_MPI_VMIX_ShowChn</p> <p>(20) RK_MPI_VMIX_HideChn</p> <p>(21) RK_MPI_VMIX_RGN_SetBitMap</p> <p>(22) RK_MPI_VMIX_GetRegionLuma</p> <p>(23) RK_MPI_VMIX_GetChnRegionLuma</p> <p>(24) RK_MPI_VMIX_RGN_SetCover</p> <p>(25) RK_MPI_MUXER_EnableChn</p> <p>(26) RK_MPI_MUXER_DisableChn</p> <p>(27) RK_MPI_MUXER_Bind</p> <p>(28) RK_MPI_MUXER_StreamStart</p> <p>(29) RK_MPI_MUXER_StreamStop</p> <p>(30) RK_MPI_SYS_DevSendMediaBuffer</p> <p>2. It is supported that AI/AO can be opened by multiple channels at the same time.</p> <p>3. JPEG supports ± 90 degree rotation.</p> <p>4. Optimize Cover memory usage and efficiency</p> <p>5. Add uvc and multi-channel audio examples.</p> <p>5. Event interface adds user private data pointer</p> <p>6. RGA supports mirroring</p> <p>7. Deletes JPEG Light interface description</p>
V1.3.1	Ruby Zhang	2021-03-05	Update product version information
V1.3.2	Aaran.sun	2021-04-22	Added introduction to VENC channel parameter configuration interface
V1.3.3	Zhihua Wang	2021-04-30	Add VP introduction
V1.3.4	Aaran sun	2021-07-06	<p>Add advanced parameter configuration of VENC RC channel</p> <p>Add introduction to VENC super frame configuration</p>

Version	Author	Date	Revision History
V1.3.5	Ruby Zhang	2021-08-13	Fix the format and some expression

Contents

Rockchip RKMedia Development Guide

1. Introduction
 - 1.1 Overview
 - 1.2 System Structure
 - 1.3 System Resources Table
2. System Control
 - 2.1 Overview
 - 2.2 Function Introduction
 - 2.2.1 System BindingExpression
 - 2.3 API Reference
 - 2.3.1 RK_MPI_SYS_Init
 - 2.3.2 RK_MPI_SYS_DumpChn
 - 2.3.3 RK_MPI_SYS_Bind
 - 2.3.4 RK_MPI_SYS_UnBind
 - 2.3.5 RK_MPI_SYS_RegisterEventCb
 - 2.3.6 RK_MPI_SYS_RegisterOutCb
 - 2.3.7 RK_MPI_SYS_SendMediaBuffer
 - 2.3.8 RK_MPI_SYS_DevSendMediaBuffer
 - 2.3.9 RK_MPI_SYS_StartGetMediaBuffer
 - 2.3.10 RK_MPI_SYS_StopGetMediaBuffer
 - 2.3.11 RK_MPI_SYS_GetMediaBuffer
 - 2.3.12 RK_MPI_SYS_SetFrameRate
 - 2.3.13 RK_MPI_MB_CreateBuffer
 - 2.3.14 RK_MPI_MB_CreateImageBuffer
 - 2.3.15 RK_MPI_MB_CreateAudioBuffer
 - 2.3.16 RK_MPI_MB_ConvertToImgBuffer
 - 2.3.17 RK_MPI_MB_ConvertToAudBuffer
 - 2.3.18 RK_MPI_MB_Copy
 - 2.3.19 RK_MPI_MB_ReleaseBuffer
 - 2.3.20 RK_MPI_MB_GetPtr
 - 2.3.21 RK_MPI_MB_GetFD
 - 2.3.22 RK_MPI_MB_GetSize
 - 2.3.23 RK_MPI_MB_SetSzie
 - 2.3.24 RK_MPI_MB_GetModelID
 - 2.3.25 RK_MPI_MB_GetChannelID
 - 2.3.26 RK_MPI_MB_GetTimestamp
 - 2.3.27 RK_MPI_MB_SetTimestamp
 - 2.3.28 RK_MPI_MB_GetFlag
 - 2.3.29 RK_MPI_MB_GetTsvelLevel
 - 2.3.30 RK_MPI_MB_IsViFrame
 - 2.3.31 RK_MPI_MB_GetImageInfo
 - 2.3.32 RK_MPI_MB_BeginCPUAccess
 - 2.3.33 RK_MPI_MB_EndCPUAccess
 - 2.3.34 RK_MPI_MB_POOL_Create
 - 2.3.35 RK_MPI_MB_POOL_Destroy
 - 2.3.36 RK_MPI_MB_POOL_GetBuffer
 - 2.3.37 RK_MPI_LOG_SetLevelConf
 - 2.3.38 RK_MPI_LOG_GetLevelConf
 - 2.4 Data Type
 - 2.4.1 Basic Data Types
 - 2.4.1.1 Regular Data Types
 - 2.4.1.2 IMAGE_TYPE_E
 - 2.4.1.3 CODEC_TYPE_E
 - 2.4.1.4 MOD_ID_E
 - 2.4.1.5 Sample_Format_E

2.4.1.6	RECT_S
2.4.2	System Control Data Type
2.4.2.1	MPP_CHN_S
2.4.2.2	EventCbFunc
2.4.2.3	MEDIA_BUFFER
2.4.2.4	OutCbFunc
2.4.2.5	MB_IMAGE_INFO_S
2.4.2.6	LOG_LEVEL_CONF_S
2.4.2.7	MPP_FPS_ATTR_S
2.4.2.8	MB_POOL_PARAM_S
2.5	Error Code
3.	Video Input
3.1	Overview
3.2	Function Description
3.2.1	VI Channel Initialization
3.2.2	VI Video Node
3.2.3	VI Working Mode
3.3	API Reference
3.3.1	RK_MPI_VI_EnableChn
3.3.2	RK_MPI_VI_DisableChn
3.3.3	RK_MPI_VI_SetChnAttr
3.3.4	RK_MPI_VI_StartRegionLuma
3.3.5	RK_MPI_VI_StopRegionLuma
3.3.6	RK_MPI_VI_GetChnRegionLuma
3.3.7	RK_MPI_VI_StartStream
3.3.8	RK_MPI_VI_SetUserPic
3.3.9	RK_MPI_VI_EnableUserPic
3.3.10	RK_MPI_VI_DisableUserPic
3.3.11	RK_MPI_VI_RGN_SetCover
3.4	Type of Data
3.4.1	VI_MAX_CHN_NUM
3.4.2	VI_PIPE
3.4.3	VI_CHN
3.4.4	VI_CHN_ATTR_S
3.4.5	VIDEO_REGION_INFO_S
3.4.6	VI_USERPIC_ATTR_S
3.5	Error Code
4.	Video Encoding
4.1	Overview
4.2	Function Description
4.2.1	Data Flow Chart
4.2.2	Rate Control
4.2.3	GOP Mode
4.2.4	Region of Interest (ROI)
4.2.5	Rotation
4.3	API Reference
4.3.1	RK_MPI_VENC_CreateChn
4.3.2	RK_MPI_VENC_GetVencChnAttr
4.3.3	RK_MPI_VENC_SetVencChnAttr
4.3.4	RK_MPI_VENC_GetVencChnParam
4.3.5	RK_MPI_VENC_SetVencChnParam
4.3.6	RK_MPI_VENC_DestroyChn
4.3.7	RK_MPI_VENC_GetRcParam
4.3.8	RK_MPI_VENC_SetRcParam
4.3.9	RK_MPI_VENC_SetRcMode
4.3.10	RK_MPI_VENC_SetRcQuality
4.3.11	RK_MPI_VENC_SetBitrate
4.3.12	RK_MPI_VENC_RequestIDR

- 4.3.13 RK_MPI_VENC_SetFps
- 4.3.14 RK_MPI_VENC_SetGop
- 4.3.15 RK_MPI_VENC_SetAvcProfile
- 4.3.16 RK_MPI_VENC_InsertUserData
- 4.3.17 RK_MPI_VENC_SetResolution
- 4.3.18 RK_MPI_VENC_GetRoiAttr
- 4.3.19 RK_MPI_VENC_SetRoiAttr
- 4.3.20 RK_MPI_VENC_SetGopMode
- 4.3.21 RK_MPI_VENC_RGN_Init
- 4.3.22 RK_MPI_VENC_RGN_SetBitMap
- 4.3.23 RK_MPI_VENC_RGN_SetCover
- 4.3.24 RK_MPI_VENC_RGN_SetPaletteId
- 4.3.25 RK_MPI_VENC_SetJpegParam
- 4.3.26 RK_MPI_VENC_StartRecvFrame
- 4.3.27 RK_MPI_VENC_GetFd
- 4.3.28 RK_MPI_VENC_QueryStatus
- 4.3.29 RK_MPI_VENC_SetSuperFrameStrategy
- 4.3.30 RK_MPI_VENC_GetSuperFrameStrategy

4.4 Type of Data

- 4.4.1 VENC_MAX_CHN_NUM
- 4.4.2 VENC_CHN
- 4.4.3 VENC_ATTR_JPEG_S
- 4.4.4 VENC_ATTR_MJPEG_S
- 4.4.5 VENC_ATTR_H264_S
- 4.4.6 VENC_ATTR_H265_S
- 4.4.7 VENC_ATTR_S
- 4.4.8 VENC_MJPEG_CBR_S
- 4.4.9 VENC_MJPEG_VBR_S
- 4.4.10 VENC_H264_CBR_S
- 4.4.11 VENC_H264_VBR_S
- 4.4.12 VENC_H265_CBR_S
- 4.4.13 VENC_H265_VBR_S
- 4.4.14 VENC_RC_MODE_E
- 4.4.15 VENC_RC_ATTR_S
- 4.4.16 VENC_GOP_MODE_E
- 4.4.17 VENC_GOP_ATTR_S
- 4.4.18 VENC_CHN_ATTR_S
- 4.4.19 VENC_CHN_PARAM_S
- 4.4.20 VENC_CROP_INFO_S
- 4.4.21 VENC_FRAME_RATE_S
- 4.4.22 VENC_PARAM_MJPEG_S
- 4.4.23 VENC_PARAM_H264_S
- 4.4.24 VENC_PARAM_H265_S
- 4.4.25 VENC_RC_PARAM_S
- 4.4.26 VENC_RC_QUALITY_E
- 4.4.27 VENC_ROI_ATTR_S
- 4.4.28 OSD_REGION_ID_E
- 4.4.29 OSD_REGION_INFO_S
- 4.4.30 OSD_PIXEL_FORMAT_E
- 4.4.31 VENC_COLOR_TBL_S
- 4.4.32 OSD_COLOR_PALETTE_BUF_S
- 4.4.33 BITMAP_S
- 4.4.34 COVER_INFO_S
- 4.4.35 VENC_RECV_PIC_PARAM_S
- 4.4.36 VENC_JPEG_PARAM_S
- 4.4.37 VENC_RESOLUTION_PARAM_S
- 4.4.38 VENC_CHN_STATUS_S
- 4.4.39 VENC_SUPERFRAME_CFG_S

4.5	Error Code	
5.	Video Decoding	
5.1	Overview	
5.2	API Reference	
5.2.1	RK_MPI_VDEC_CreateChn	
5.2.2	RK_MPI_VDEC_DestroyChn	
5.3	Type of Data	
5.3.1	VDEC_MAX_CHN_NUM	
5.3.2	VDEC_CHN	
5.3.3	VDEC_CHN_ATTR_S	
5.3.4	VIDEO_MODE_E	
5.3.5	VIDEO_DECODEC_MODE_E	
5.3.6	VDEC_ATTR_VIDEO_S	
6.	Motion Detection	
6.1	Overview	
6.2	Function Description	
6.3	API Reference	
6.3.1	RK_MPI_ALGO_MD_CreateChn	
6.3.2	RK_MPI_ALGO_MD_DestroyChn	
6.3.3	RK_MPI_ALGO_MD_EnableSwitch	
6.4	Type of Data	
6.4.1	ALGO_MD_MAX_CHN_NUM	
6.4.2	ALGO_MD_ROI_RET_MAX	
6.4.3	ALGO_MD_CHN	
6.4.4	ALGO_MD_ATTR_S	
6.5	Error Code	
7.	Occlusion Detection	
7.1	Overview	
7.2	Function Description	
7.3	API Reference	
7.3.1	RK_MPI_ALGO_OD_CreateChn	
7.3.2	RK_MPI_ALGO_OD_DestroyChn	
7.3.3	RK_MPI_ALGO_OD_EnableSwitch	
7.4	Type of Data	
7.4.1	ALGO_OD_MAX_CHN_NUM	
7.4.2	ALGO_OD_ROI_RET_MAX	
7.4.3	ALGO_OD_CHN	
7.4.4	ALGO_OD_ATTR_S	
7.5	Error Code	
8.	Video Output	
8.1	Overview	
8.2	Function Description	
8.3	API Reference	
8.3.1	RK_MPI_VO_CreateChn	
8.3.2	RK_MPI_VO_GetChnAttr	
8.3.3	RK_MPI_VO_SetChnAttr	
8.3.4	RK_MPI_VO_DestroyChn	
8.4	Type of Data	
8.4.1	VO_MAX_CHN_NUM	
8.4.2	VO_CHN	
8.4.3	VO_CHN_ATTR_S	
8.5	Error Code	
9.	Audio	
9.1	Overview	
9.2	Function Description	
9.2.1	Audio Input and Output	
9.2.2	Audio Codec	
9.2.3	Audio Algorithm	

9.3 API Reference

9.3.1 Audio Input

- 9.3.1.1 RK_MPI_AI_EnableChn
- 9.3.1.2 RK_MPI_AI_DisableChn
- 9.3.1.3 RK_MPI_AI_SetChnAttr
- 9.3.1.4 RK_MPI_AI_SetVolume
- 9.3.1.5 RK_MPI_AI_GetVolume
- 9.3.1.6 RK_MPI_AI_SetTalkVqeAttr
- 9.3.1.7 RK_MPI_AI_GetTalkVqeAttr
- 9.3.1.8 RK_MPI_AI_SetRecordVqeAttr
- 9.3.1.9 RK_MPI_AI_GetRecordVqeAttr
- 9.3.1.10 RK_MPI_AI_EnableVqe
- 9.3.1.11 RK_MPI_AI_DisableVqe
- 9.3.1.12 RK_MPI_AI_StartStream

9.3.2 Audio Output

- 9.3.2.1 RK_MPI_AO_EnableChn
- 9.3.2.2 RK_MPI_AO_DisableChn
- 9.3.2.3 RK_MPI_AO_SetChnAttr
- 9.3.2.4 RK_MPI_AO_SetVolume
- 9.3.2.5 RK_MPI_AO_GetVolume
- 9.3.2.6 RK_MPI_AO_SetVqeAttr
- 9.3.2.7 RK_MPI_AO_GetVqeAttr
- 9.3.2.8 RK_MPI_AO_EnableVqe
- 9.3.2.9 RK_MPI_AO_DisableVqe
- 9.3.2.10 RK_MPI_AO_QueryChnStat
- 9.3.2.11 RK_MPI_AO_ClearChnBuf

9.3.3 Audio Encoding

- 9.3.3.1 RK_MPI_AENC_CreateChn
- 9.3.3.2 RK_MPI_AENC_DestroyChn

9.3.4 Audio Decoding

- 9.3.4.1 RK_MPI_ADEC_CreateChn
- 9.3.4.2 RK_MPI_ADEC_DestroyChn

9.4 Type of Data

9.4.1 Audio Input

- 9.4.1.1 AI_MAX_CHN_NUM
- 9.4.1.2 AI_CHN
- 9.4.1.3 AI_CHN_ATTR_S
- 9.4.1.4 AI_TALKVQE_CONFIG_S
- 9.4.1.5 AI_RECORDVQE_CONFIG_S

9.4.2 Audio Output

- 9.4.2.1 AO_MAX_CHN_NUM
- 9.4.2.2 AO_CHN
- 9.4.2.3 AO_CHN_ATTR_S
- 9.4.2.4 AO_VQE_CONFIG_S
- 9.4.2.5 AO_CHN_STATE_S

9.4.3 Audio Encoding

- 9.4.3.1 AENC_MAX_CHN_NUM
- 9.4.3.2 AENC_CHN
- 9.4.3.3 AENC_ATTR_MP3_S
- 9.4.3.4 AENC_ATTR_MP2_S
- 9.4.3.5 AENC_ATTR_G711A_S
- 9.4.3.6 AENC_ATTR_G711U_S
- 9.4.3.7 AENC_ATTR_G726_S
- 9.4.3.8 AENC_CHN_ATTR_S

9.4.4 Audio Decoding

- 9.4.4.1 ADEC_MAX_CHN_NUM
- 9.4.4.2 ADEC_CHN
- 9.4.4.3 ADEC_ATTR_MP3_S

9.4.4.4	ADEC_ATTR_MP2_S
9.4.4.5	ADEC_ATTR_G711A_S
9.4.4.6	ADEC_ATTR_G711U_S
9.4.4.7	ADEC_ATTR_G726_S
9.4.4.8	ADEC_CHN_ATTR_S
9.5	Error Code
9.5.1	Audio Input Error Code
9.5.2	Audio Output Error Code
9.5.3	Audio Encoding Error Code
9.5.4	Audio Decoding Error Code
10.	RGA
10.1	Overview
10.2	Function Description
10.3	API Reference
10.3.1	RK_MPI_RGA_CreateChn
10.3.2	RK_MPI_RGA_DestroyChn
10.3.3	RK_MPI_RGA_RGN_SetBitMap
10.3.4	RK_MPI_RGA_GetChnRegionLuma
10.3.5	RK_MPI_RGA_RGN_SetCover
10.4	Type of Data
10.4.1	RGA_MAX_CHN_NUM
10.4.2	RGA_CHN
10.4.3	RGA_INFO_S
10.4.4	RGA_ATTR_S
10.5	Error Code
11.	Video Synthesis
11.1	Overview
11.2	Function Description
11.3	API Reference
11.3.1	RK_MPI_VMIX_CreateDev
11.3.2	RK_MPI_VMIX_DestroyDev
11.3.3	RK_MPI_VMIX_EnableChn
11.3.4	RK_MPI_VMIX_DisableChn
11.3.5	RK_MPI_VMIX_SetLineInfo
11.3.6	RK_MPI_VMIX_ShowChn
11.3.7	RK_MPI_VMIX_HideChn
11.3.8	RK_MPI_VMIX_RGN_SetBitMap
11.3.9	RK_MPI_VMIX_GetRegionLuma
11.3.10	RK_MPI_VMIX_GetChnRegionLuma
11.3.11	RK_MPI_VMIX_RGN_SetCover
11.4	Type of Data
11.4.1	VMIX_DEV
11.4.2	VMIX_CHN
11.4.3	VMIX_DEV_INFO_S
11.4.4	VMIX_CHN_INFO_S
11.4.5	VMIX_LINE_INFO_S
11.4.6	VMIX_MAX_CHN_NUM
11.4.7	VMIX_MAX_DEV_NUM
11.4.8	VMIX_MAX_LINE_NUM
11.5	Error Code
12.	Video Package
12.1	Overview
12.2	Function Description
12.3	API Description
12.3.1	RK_MPI_MUXER_EnableChn
12.3.2	RK_MPI_MUXER_DisableChn
12.3.3	RK_MPI_MUXER_DisableChn
12.3.4	RK_MPI_MUXER_Bind

- 12.3.5 RK_MPI_MUXER_UnBind
 - 12.3.6 RK_MPI_MUXER_StreamStart
 - 12.3.7 RK_MPI_MUXER_StreamStop
- 12.4 Type of Data
 - 12.4.1 MUXER_CHN
 - 12.4.2 MUXER_MAX_CHN_NUM
 - 12.4.3 MUXER_CHN_S
 - 12.4.4 MUXER_CHN_ATTR_S
- 12.5 Error Code
- 13. One in Four out Video
 - 13.1 Overview
 - 13.2 Function Description
 - 13.3 API Description
 - 13.3.1 RK_MPI_VP_EnableChn
 - 13.3.2 RK_MPI_VP_DisableChn
 - 13.3.3 RK_MPI_VP_SetChnAttr
 - 13.4 Type of Data
 - 13.4.1 VP_MAX_CHN_NUM
 - 13.4.2 VP_PIPE
 - 13.4.3 VP_CHN
 - 13.4.4 VP_CHN_ATTR_S
 - 13.5 Error Code
- 14. Notices
 - 14.1 Channel Destruction Order
 - 14.2 Parameter Initialization
- 15. Proc Debugging Information Description
 - 15.1 VI
 - 15.2 VENC
- 16. LOG Debugging Level Description
- 17. Examples
 - 17.1 rkmedia_ai_test
 - 17.2 rkmedia_ai_aenc_test
 - 17.3 rkmedia_ao_test
 - 17.4 rkmedia_adec_ao_test
 - 17.5 rkmedia_audio_test
 - 17.6 rkmedia_vi_get_frame_test
 - 17.7 rkmedia_vi_luma_only_mode_test
 - 17.8 rkmedia_vi_multi_bind_test
 - 17.9 rkmedia_vi_venc_test
 - 17.10 rkmedia_vi_vo_test
 - 17.11 rkmedia_venc_avbr_test
 - 17.12 rkmedia_venc_jpeg_test
 - 17.13 rkmedia_venc_local_file_test
 - 17.14 rkmedia_venc_smartp_test
 - 17.15 rkmedia_main_stream_with_jpeg_test
 - 17.16 rkmedia_vdec_test
 - 17.17 rkmedia_vo_display_test
 - 17.18 rkmedia_vo_scale_test
 - 17.19 rkmedia_venc_cover_test
 - 17.20 rkmedia_venc_mjpeg_test
 - 17.21 rkmedia_venc_osd_test
 - 17.22 rkmedia_venc_roi_osd_test
 - 17.23 rkmedia_rga_api_test
 - 17.24 rkmedia_rga_crop_venc_test
 - 17.25 rkmedia_rga_osd_test
 - 17.26 rkmedia_isp_test
 - 17.27 rkmedia_vi_double_cameras_test
 - 17.28 rkmedia_vi_double_cameras_switch_test

- 17.29 rkmedia_vi_md_test
- 17.30 rkmedia_vi_od_test
- 17.31 rkmedia_vi_rknn_venc_rtsp_test
- 17.32 rkmedia_vi_rockx_venc_rtsp_test
- 17.33 rkmedia_vmix_vo_test
- 17.34 rkmedia_vmix_vo_dvr_test
- 17.35 rkmedia_vi_uvc_test
- 17.36 rkmedia_multi_ao_test
- 17.37 rkmedia_multi_ai_test
- 17.38 rkmedia_muxer_test
- 17.39 rkmedia_vi_electrostatic_protection
- 17.40 rkmedia_vi_vp_vo_test

18. Build Instructions


- 18.1 How to Configure RKMedia Build Options
- 18.2 Build Option Functions Description
- 18.3 RKMedia Build Introduction

1. Introduction

1.1 Overview

RKMedia provides a media processing solution that helps customers developing application software rapidly. RKMedia further package basic API of each module to simplify the difficulty of application development. This platform supports the following functions: VI (input video capture), VENC (H.265/H.264/JPEG/MJPEG encoding), VDEC (H.265/H.264/JPEG, MJPEG decoding), VO (video output display), RGA video processing (including rotation, scaling, cropping), AI (audio capture), AO (audio output), AENC (audio coding), ADEC (audio decoding), MD (motion detection), OD (occlusion detection)).

1.2 System Structure

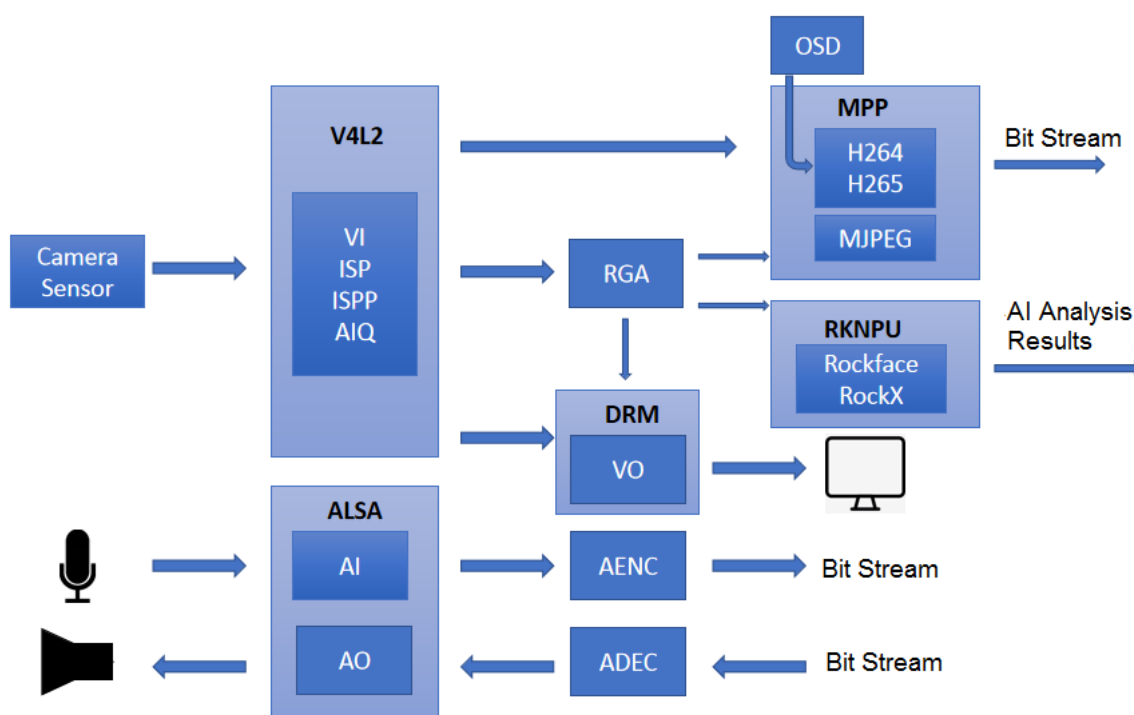

1.3 System Resources Table

Module name	Number of channels
VI	8
VENC	16
VDEC	16
AI	16
AO	16
AENC	16
ADEC	16
MD	4
OD	4
RGA	16
VO	2
VMIX	16
MUXER	16
VP	8

2. System Control

2.1 Overview

The system controls the initialization work of the basic system, and is also responsible for initialization and de-initialization of each module, managing the binding relationship of each module, providing the current system version, and system log management.

2.2 Function Introduction

2.2.1 System BindingExpression

RKMedia provides a system binding interface ([RK_MPI_SYS_Bind](#)), in other words, data source is bound by data receiver to establish the relations between the two(data receiver is allowed to bind data source only). After binding, the data generated by the data source will be automatically sent to the receiver. Currently, the supported binding relations are shown in [Table 2-1](#).

Table 2-1 Binding relations supported by RKMedia

Data Source	Data Receiver
VI	VO/RGA/VENC/MD/OD
VDEC	VO/RGA/VENC/MD/OD
RGA	VO/VENC/MD/OD
AI	AO/AENC
ADEC	AO

2.3 API Reference

2.3.1 RK_MPI_SYS_Init

【Description】

Initialize the system.

【Grammar】

RK_S32 RK_MPI_SYS_Init();

【Parameter】

No.

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

No.

2.3.2 RK_MPI_SYS_DumpChn

【Description】

Print channel information.

【Grammar】

RK_VOID RK_MPI_SYS_DumpChn([MOD_ID_E](#) enModId);

【Parameter】

Parameter name	Description	Input/Output
enModId	Module number.	Input

【Return value】

No.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

No.

2.3.3 RK_MPI_SYS_Bind

【Description】

The binding interface between data source and data receiver.

【Grammar】

RK_S32 RK_MPI_SYS_Bind(const [MPP_CHN_S](#) *pstSrcChn,const [MPP_CHN_S](#) *pstDestChn);

【Parameter】

Parameter name	Description	Input/Output
pstSrcChn	Source channel pointer.	Input
pstDestChn	Target channel pointer.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

For the binding relations currently supported by the system, please refer to [Table 2-1](#).

Before releasing the bound channel, you need to unbind it through [RK_MPI_SYS_UnBind](#).

【Example】

No.

【Related topic】

[RK_MPI_SYS_UnBind](#)

2.3.4 RK_MPI_SYS_UnBind

【Description】

The Data source to data receiver unbinding interface.

【Grammar】

RK_MPI_SYS_UnBind(const [MPP_CHN_S](#) *pstSrcChn,const [MPP_CHN_S](#) *pstDestChn);

【Parameter】

Parameter name	Description	Input/Output
pstSrcChn	Source channel pointer.	Input
pstDestChn	Target channel pointer.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

[RK_MPI_SYS_Bind](#)

2.3.5 RK_MPI_SYS_RegisterEventCb

【Description】

Register an event callback, such as motion detection event.

【Grammar】

RK_S32 RK_MPI_SYS_RegisterEventCb(const [MPP_CHN_S](#) *pstChn, [EventCbFunc](#) cb);

【Parameter】

Parameter name	Description	Input/Output
pstChn	Specify the channel pointer.	Input
cb	Event callback function.	Output

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_vi_md_test.](#)

【Related topic】

No.

2.3.6 RK_MPI_SYS_RegisterOutCb

【Description】

Register a data output callback.

【Description】

Register a data output callback. Compared with [RK_MPI_SYS_GetMediaBuffer](#), there is no need to cache buffer waiting for users to request it, and save memories.

【Grammar】

RK_S32 RK_MPI_SYS_RegisterOutCb(const [MPP_CHN_S](#) *pstChn, [OutCbFunc](#) cb);

【Parameter】

Parameter name	Description	Input/Output
pstChn	Specify the channel pointer.	Input
cb	Data output callback function.	Output

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

The callback function cannot handle time-consuming operations, otherwise the corresponding channel data stream will be blocked.

【Example】

[rkmedia_vi_venc_test](#).

【Related topic】

No.

2.3.7 RK_MPI_SYS_SendMediaBuffer

【Description】

Input data to the specified channel, such as sending the local yuv file to the encoder for encoding.

【Grammar】

RK_S32 RK_MPI_SYS_SendMediaBuffer([MOD_ID_E](#) enModID, RK_S32 s32ChnID, [MEDIA_BUFFER](#) buffer);

【Parameter】

Parameter name	Description	Input/Output
enModID	Module number.	Input
s32ChnID	Channel number.	Input
buffer	Buffer.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia vo display test](#).

【Related topic】

[RK_MPI_SYS_GetMediaBuffer](#)

2.3.8 RK_MPI_SYS_DevSendMediaBuffer

【Description】

Input data to the specified channel of the specified device, such as sending the local yuv file to VMIX.

【Grammar】

RK_S32 RK_MPI_SYS_DevSendMediaBuffer(MOD_ID_E enModID, RK_S32 s32DevId, RK_S32 s32ChnID, MEDIA_BUFFER buffer);

【Parameters】

Parameter name	Description	Input/Output
enModID	Module number.	Input
s32DevId	Device ID.	Input
s32ChnID	Channel number.	Input
buffer	Buffer.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None.

【Example】

None.

【Related topic】

[RK_MPI_SYS_GetMediaBuffer](#)

2.3.9 RK_MPI_SYS_StartGetMediaBuffer

【Description】

Enable the receive buffer. After the receive buffer is enabled, even if the channel is bound, the MediaBuffer can be obtained through [RK_MPI_SYS_GetMediaBuffer](#).

【Grammar】

RK_S32 RK_MPI_SYS_StartGetMediaBuffer([MOD_ID_E](#) enModID, RK_S32 s32ChnID);

【Parameter】

Parameter name	Description	Input/Output
enModID	Module number.	Input
s32ChnID	Channel number.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

After enabling the receive buffer, call [RK_MPI_SYS_GetMediaBuffer](#) in time to remove MediaBuffer, otherwise a packet loss warning will be prompted.

【Example】

No.

【Related topic】

[RK_MPI_SYS_GetMediaBuffer](#)

[RK_MPI_SYS_StopGetMediaBuffer](#)

2.3.10 RK_MPI_SYS_StopGetMediaBuffer

【Description】

Close the receive buffer and clear the existing MediaBuffer in the buffer.

【Grammar】

[MEDIA_BUFFER](#) RK_MPI_SYS_StopGetMediaBuffer([MOD_ID_E](#) enModID, RK_S32 s32ChnID);

【Parameter】

Parameter name	Description	Input/Output
enModID	Module number.	Input
s32ChnID	Channel number.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

After calling this interface, if you call [RK_MPI_SYS_GetMediaBuffer](#) again to get data, the receive buffer will be opened again.

【Example】

No.

【Related topic】

[RK_MPI_SYS_StartGetMediaBuffer](#)

[RK_MPI_SYS_GetMediaBuffer](#)

2.3.11 RK_MPI_SYS_GetMediaBuffer

【Description】

Obtain data from the specified channel.

【Grammar】

[MEDIA_BUFFER](#) RK_MPI_SYS_GetMediaBuffer([MOD_ID_E](#) enModID, RK_S32 s32ChnID, RK_S32 s32MilliSec);

【Parameter】

Parameter name	Description	Input/Output
enModID	Module number.	Input
s32ChnID	Channel number.	Input
s32MilliSec	-1: blocking; >=0: blocking waiting time.	Input

【Return value】

Return value type	Description
MEDIA_BUFFER	Buffer pointer.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

This interface will trigger [RK_MPI_SYS_StartGetMediaBuffer](#) automatically.

【Example】

[rkmedia_vi_get_frame_test.](#)

【Related topic】

[RK_MPI_SYS_StartGetMediaBuffer](#)

[RK_MPI_SYS_StopGetMediaBuffer](#)

2.3.12 RK_MPI_SYS_SetFrameRate

【Description】

Set input frame rate of a channel .

【Grammar】

RK_S32 RK_MPI_SYS_SetFrameRate(MOD_ID_E enModID, RK_S32 s32ChnID, [MPP_FPS_ATTR_S](#) *pstFpsAttr);

【Parameters】

Parameter name	Description	Input/Output
enModID	Module ID	Input
s32ChnID	Channel ID.	Input
pstFpsAttr	Frame rate attribute.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None.

2.3.13 RK_MPI_MB_CreateBuffer

【Description】

Create a common buffer.

【Grammar】

[MEDIA_BUFFER](#) RK_MPI_MB_CreateBuffer(RK_U32 u32Size, RK_BOOL boolHardWare, RK_U8 u8Flag);

Parameter name	Description	Input/Output
u32Size	Create buffer size.	Input
boolHardWare	Whether to create a hardware type buffer (DMA Buffer).	Input
u8Flag	Additional flag for hardware type buffer, values: 0: create a hardware buffer with a buffer type MB_FLAG_NOCACHED: create a hardware buffer without a buffer type	Input

【Return value】

Return value type	Description
MEDIA_BUFFER	Buffer pointer.

【Requirement】

Header file: rkmedia_buffer.h

Library file: libeasymedia.so

【Notice】

There is no image information structure in regular buffers.

【Example】

[rkmedia_venc_local_file_test.](#)

【Related topic】

No.

2.3.14 RK_MPI_MB_CreateImageBuffer

【Description】

Create an image buffer. Compared with regular buffers, it carries image information structure. During image handling, it is recommended to use this method to get buffer.

【Grammar】

[MEDIA_BUFFER](#) RK_MPI_MB_CreateImageBuffer([MB_IMAGE_INFO_S](#) *pstImageInfo, RK_BOOL boolHardWare, RK_U8 u8Flag);

Parameter name	Description	Input/Output
pstImageInfo	Image buffer information structure.	Input
boolHardWare	Whether to create a hardware type buffer (DMA Buffer).	Input
u8Flag	Additional flag for hardware type buffer, values: 0: create a hardware buffer with a buffer type MB_FLAG_NOCACHED: create a hardware buffer without a buffer type	Input

【Return value】

Return value type	Description
MEDIA_BUFFER	Buffer pointer.

【Requirement】

Header file: rkmedia_buffer.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_venc_local_file_test.](#)

【Related topic】

No.

2.3.15 RK_MPI_MB_CreateAudioBuffer

【Description】

Create an audio buffer.

【Grammar】

[MEDIA_BUFFER](#) RK_MPI_MB_CreateAudioBuffer(RK_U32 u32BufferSize, RK_BOOL boolHardWare);

Parameter name	Description	Input/Output
u32BufferSize	Buffer size.	Input
boolHardWare	Whether to create a hardware type Buffer (DMA Buffer).	Input

【Return value】

Return value type	Description
MEDIA_BUFFER	Buffer pointer.

【Requirement】

Header file: rkmedia_buffer.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_adec_ao_test.](#)

【Related topic】

No.

2.3.16 RK_MPI_MB_ConvertToImgBuffer

【Description】

Convert regular buffer to image buffer.

【Grammar】

[MEDIA_BUFFER](#) RK_MPI_MB_ConvertToImgBuffer([MEDIA_BUFFER](#) mb, [MB_IMAGE_INFO_S](#) *pstImageInfo);

Parameter name	Description	Input/Output
mb	regular buffer pointer.	Input
pstImageInfo	Image buffer information structure.	Input

【Return value】

Return value type	Description
MEDIA_BUFFER	Buffer pointer.

【Requirement】

Header file: rkmedia_buffer.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

No.

2.3.17 RK_MPI_MB_ConvertToAudBuffer

【Description】

Convert a regular buffer to audio buffer.

【Grammar】

[MEDIA_BUFFER](#) RK_MPI_MB_ConvertToAudBuffer([MEDIA_BUFFER](#) mb);

Parameter name	Description	Input/Output
mb	Regular buffer pointer.	Input

【Return value】

Return value type	Description
MEDIA_BUFFER	Buffer pointer.

【Requirement】

Header file: rkmedia_buffer.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

No.

2.3.18 RK_MPI_MB_Copy

【Description】

MediaBuffer "zero copy" interface.

【Grammar】

[MEDIA_BUFFER](#) RK_MPI_MB_Copy([MEDIA_BUFFER](#) mb, RK_BOOL bZeroCopy);

Parameter name	Description	Input/Output
mb	Normal buffer pointer.	Input
bZeroCopy	"Zero Copy" is enabled.	Input

【Return value】

Return value type	Description
MEDIA_BUFFER	Buffer pointer.

【Requirement】

Header file: rkmedia_buffer.h

Library file: libeasymedia.so

【Notice】

Currently, only the "Zero Copy" (bZeroCopy=RK_TRUE) flag is supported, and the "Deep Copy" (bZeroCopy=RK_FALSE) flag is not yet supported.

【Example】

None.

【Related topic】

None.

2.3.19 RK_MPI_MB_ReleaseBuffer

【Description】

Release a buffer.

【Grammar】

RK_S32 RK_MPI_MB_ReleaseBuffer([MEDIA_BUFFER](#) mb);

【Parameter】

Parameter name	Description	Input/Output
mb	Buffer pointer.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details

【Requirement】

Header file: rkmedia_buffer.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_venc_local_file_test.](#)

【Related topic】

[RK_MPI_SYS_GetMediaBuffer](#)

2.3.20 RK_MPI_MB_GetPtr

【Description】

Get the buffer data pointer from the specified [MEDIA_BUFFER](#).

【Grammar】

```
void *RK_MPI_MB_GetPtr(MEDIA\_BUFFER mb);
```

【Parameter】

Parameter name	Description	Input/Output
mb	Buffer pointer.	Input

【Return value】

Return value type	Description
void *	Buffer data pointer.

【Requirement】

Header file: rkmedia_buffer.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_venc_local_file_test](#).

【Related topic】

No.

2.3.21 RK_MPI_MB_GetFD

【Description】

Get the file descriptor from the specified [MEDIA_BUFFER](#).

【Grammar】

```
int RK_MPI_MB_GetFD(MEDIA\_BUFFER mb);
```

【Parameter】

Parameter name	Description	Input/Output
mb	Buffer pointer.	Input

【Return value】

Return value type	Description
int	File descriptor.

【Requirement】

Header file: rkmedia_buffer.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_venc_local_file_test.](#)

【Related topic】

No.

2.3.22 RK_MPI_MB_GetSize

【Description】

Get the buffer data size from the specified [MEDIA_BUFFER](#).

【Grammar】

size_t RK_MPI_MB_GetSize([MEDIA_BUFFER](#) mb);

【Parameter】

Parameter name	Description	Input/Output
mb	Buffer.	Input

【Return value】

Return value type	Description
size_t	Buffer data size.

【Requirement】

Header file: rkmedia_buffer.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_venc_local_file_test.](#)

【Related topic】

No.

2.3.23 RK_MPI_MB_SetSzie

【Description】

Set the date size of specified [MEDIA_BUFFER](#).

Parameter name	Description	Input/Output
mb	Buffer pointer.	Input
size	Buffer data size	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details

【Requirement】

Header file: rkmedia_buffer.h

Library file: libeasymedia.so

【Notice】

The buffer data size has to been set by this function after operating the buffer and changing its size, otherwise [RK_MPI_MB_GetSize](#) will not be able to get the correct buffer data size.

【Example】

No.

【Related topic】

[RK_MPI_MB_GetSize.](#)

2.3.24 RK_MPI_MB_GetModeID

【Description】

Get the module ID from the specified [MEDIA_BUFFER](#).

【Grammar】

[MOD_ID_E](#) RK_MPI_MB_GetModeID([MEDIA_BUFFER](#) mb);

【Parameter】

Parameter name	Description	Input/Output
mb	Buffer.	Input

【Return value】

Return value type	Description
MOD_ID_E	Module ID.

【Requirement】

Header file: rkmedia_buffer.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_vi_multi_bind_test](#).

【Related topic】

No.

2.3.25 RK_MPI_MB_GetChannelID

【Description】

Get the channel ID from the specified [MEDIA_BUFFER](#).

【Grammar】

RK_S16 RK_MPI_MB_GetChannelID([MEDIA_BUFFER](#) mb);

【Parameter】

Parameter name	Description	Input/Output
mb	Buffer.	Input

【Return value】

Return value type	Description
RK_S16	Channel ID.

【Requirement】

Header file: rkmedia_buffer.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_vi_multi_bind_test](#).

【Related topic】

No.

2.3.26 RK_MPI_MB_GetTimestamp

【Description】

Get the timestamp from the specified [MEDIA_BUFFER](#).

【Grammar】

RK_U64 RK_MPI_MB_GetTimestamp([MEDIA_BUFFER](#) mb);

【Parameter】

Parameter name	Description	Input/Output
mb	Buffer.	Input

【Return value】

Return value type	Description
RK_U64	Timestamp.

【Requirement】

Header file: rkmedia_buffer.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_vi_rockx_venc_rtsp_test](#).

【Related topic】

[RK_MPI_MB_SetTimestamp](#).

2.3.27 RK_MPI_MB_SetTimestamp

【Description】

Set timestamp of the specified [MEDIA_BUFFER](#).

【Grammar】

RK_S32 RK_MPI_MB_SetTimestamp([MEDIA_BUFFER](#) mb, RK_U64 timestamp);

【Parameter】

Parameter name	Description	Input/Output
mb	Buffer.	Input
timestamp	timestamp	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details

【Requirement】

Header file: rkmedia_buffer.h

Library file: libeasymedia.so

【Notice】

When calling the librqa library (relative to RGA Channel) to handle MEDIA_BUFFER directly, users need to process the timestamp attribute manually. such as:

```

1 // Call librqa api to deal with MediaBuffer0, the output timestamp attribute
  of MediaBuffer1 will be lost
2 // MediaBuffer0 --> RGA Crop --> MediaBuffer1
3 // Need to call this interface to copy the timestamp of MediaBuffer0 manually
4 RK_MPI_MB_SetTimestamp(MediaBuffer1, RK_MPI_MB_GetTimestamp(MediaBuffer0));

```

【Example】

[rkmedia_vi_rockx_venc_rtsp_test](#).

【Related topic】

[RK_MPI_MB_GetTimestamp](#).

2.3.28 RK_MPI_MB_GetFlag

【Description】

Get Flag from the specified [MEDIA_BUFFER](#). Flag is used to mark the special attributes of Buffer, such as frame type: I frame, P frame, etc.

【Grammar】

RK_S32 RK_MPI_MB_GetFlag([MEDIA_BUFFER](#) mb);

【Parameter】

Parameter name	Description	Input/Output
mb	Buffer.	Input

【Return value】

Return value type	Description
RK_S32	Additional flag for hardware type Buffer: 0: create hardware buffer with buffer type MB_FLAG_NOCACHED: create hardware buffer without buffer type

【Requirement】

Header file: rkmedia_buffer.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_venc_smartp_test.](#)

【Related topic】

No.

2.3.29 RK_MPI_MB_GetTsvcLevel

【Description】

Get TSVC level from the specified [MEDIA_BUFFER](#). TSVC represents SVC in time dimension. After TSVC function is enabled, the code stream will be divided into three levels: L0, L1, and L2. High-level coded frames are decoded depending on low-level coded frames (for example, L2 depends on L1, L0; L1 depends on L0), but low-level coded frames can be decoded independently (L0 can be decoded independently, L1, L0 can be decoded independently of L2). For example, for a 60fps video, if you decode L1 and L0 only, you will get a 30fps video, if you decode L0 only, you will get a 15fps video.

【Grammar】

RK_S32 RK_MPI_MB_GetTsvcLevel([MEDIA_BUFFER](#) mb);

【Parameter】

Parameter name	Description	Input/Output
mb	Buffer.	Input

【Return value】

Return value type	Description
RK_S32	TSVC level.

【Requirement】

Header file: rkmedia_buffer.h

Library file: libeasymedia.so

【Notice】

If the encoder does not turn on the TSVC/SMARTP mode, the return value of this interface is invalid.

【Example】

[rkmedia_venc_smartp_test.](#)

【Related topic】

No.

2.3.30 RK_MPI_MB_IsViFrame

【Description】

Determine whether the specified [MEDIA_BUFFER](#) is a VirtualIntra frame (virtual I frame).

【Grammar】

RK_BOOL RK_MPI_MB_IsViFrame([MEDIA_BUFFER](#) mb);

【Parameter】

Parameter name	Description	Input/Output
mb	Buffer.	Input

【Return value】

Return value type	Description
RK_BOOL	Whether it is a VI frame.

【Requirement】

Header file: rkmedia_buffer.h

Library file: libeasymedia.so

【Notice】

Only valid in smartp mode.

【Example】

[rkmedia_venc_smartp_test.](#)

【Related topic】

No.

2.3.31 RK_MPI_MB_GetImageInfo

【Description】

Get image information from the specified image buffer [MEDIA_BUFFER](#).

【Grammar】

RK_S32 RK_MPI_MB_GetImageInfo([MEDIA_BUFFER](#) mb, [MB_IMAGE_INFO_S](#) *pstImageInfo);

【Parameter】

Parameter name	Description	Input/Output
mb	Buffer pointer.	Input
pstImageInfo	Image information structure pointer in Buffer	Output

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code details.

【Requirement】

Header file: rkmedia_buffer.h

Library file: libeasymedia.so

【Notice】

This function can be used by the image buffer to get information only.

【Example】

[rkmedia_vi_get_frame_test](#).

【Related topic】

No.

2.3.32 RK_MPI_MB_BeginCPUAccess

【Description】

Solve the synchronization problem caused by the operation of the same [MEDIA_BUFFER](#) between CPU and hardware module (such as ENCODER).

【Grammar】

RK_S32 RK_MPI_MB_BeginCPUAccess([MEDIA_BUFFER](#) mb, RK_BOOL bReadonly);

【Parameter】

Parameter name	Description	Input/Output
mb	Buffer pointer.	Input
bReadonly	Whether it is read-only.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code details.

【Requirement】

Header file: rkmedia_buffer.h

Library file: libeasymedia.so

【Notice】

Need to be used together with [RK_MPI_MB_EndCPUAccess](#).

【Example】

For example, in the case that after CPU filling buffer and then sending data for VENC encoding, the MediaBuffer created by the [RK_MPI_MB_CreateImageBuffer](#) interface is with cache by default (you can create a NoCache type MediaBuffer through flag=MB_FLAG_NOCACHED), so after CPU writing buffer and it will remain some data in the cache and fail to be synchronized to memory (DDR) in time. At this time, it will be sent for VENC coding immediately, which will cause the image to be abnormal (such as intermittent green short lines). This interface is used to ensure that after CPU operates buffer, the buffer is flushed to memory immediately.

```

1 MEDIA_BUFFER mb;
2 RK_MPI_MB_BeginCPUAccess(mb, RK_FALSE);
3 // CPU fill data to mb.
4 memset(RK_MPI_MB_GetPtr(mb), 'F', size);
5 RK_MPI_MB_EndCPUAccess(mb, RK_FALSE);
6 // Send mb to VENC
7 RK_MPI_SYS_SendMediaBuffer(RK_ID_VENC, 0, mb);

```

【Related topic】

No.

2.3.33 RK_MPI_MB_EndCPUAccess

【Description】

Solve the synchronization problem caused by the operation of the same [MEDIA_BUFFER](#) between CPU and hardware module (such as ENCODER).

【Grammar】

RK_S32 RK_MPI_MB_EndCPUAccess([MEDIA_BUFFER](#) mb, RK_BOOL bReadonly);

【Parameter】

Parameter name	Description	Input/Output
mb	Buffer pointer.	Input
bReadonly	Whether it is read-only.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details

【Requirement】

Header file: rkmedia_buffer.h

Library file: libeasymedia.so

【Notice】

Need to be used together with [RK_MPI_MB_BeginCPUAccess](#).

【Example】

No.

【Related topic】

No.

2.3.34 RK_MPI_MB_POOL_Create

【Description】

Create BufferPool.

【Grammar】

MEDIA_BUFFER_POOL RK_MPI_MB_POOL_Create([MB_POOL_PARAM_S](#) *pstPoolParam);

【Parameter】

Parameter name	Description	Input/Output
pstPoolParam	BufferPool attribute	Input

【Return value】

Return value	Description
NULL	Failure.
Not NULL	Success.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None.

2.3.35 RK_MPI_MB_POOL_Destroy

【Description】

Destroy BufferPool.

【Grammar】

RK_S32 RK_MPI_MB_POOL_Destroy(MEDIA_BUFFER_POOL MBPHandle);

【Parameter】

Parameter name	Description	Input/Output
MBPHandle	MediaBufferPool object to be destroyed	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None.

2.3.36 RK_MPI_MB_POOL_GetBuffer

【Description】

Get MediaBuffer from BufferPool.

【Grammar】

MEDIA_BUFFER RK_MPI_MB_POOL_GetBuffer(MEDIA_BUFFER_POOL MBPHandle, RK_BOOL bIsBlock);

【Parameter】

Parameter name	Description	Input/Output
MBPHandle	MediaBufferPool object	Input
bIsBlock	Whether to block	Input

【Return value】

Return value	Description
Not NULL	Success.
NULL	Failure.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None

2.3.37 RK_MPI_LOG_SetLevelConf

【Description】

Set log level.

【Grammar】

RK_S32 RK_MPI_LOG_SetLevelConf([LOG_LEVEL_CONF_S](#) *pstConf);

【Parameter】

Parameter name	Description	Input/Output
pstConf	Log level information structure.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

When the member cModName in pstConf is set to the string "all", log level of all modules will be set. Otherwise, set log level of the module specified by enModId only.

【Example】

No.

【Related topic】

[RK_MPI_LOG_GetLevelConf](#).

2.3.38 RK_MPI_LOG_GetLevelConf

【Description】

Get log level.

【Grammar】

RK_S32 RK_MPI_LOG_GetLevelConf([LOG_LEVEL_CONF_S](#) *pstConf);

【Parameter】

Parameter name	Description	Input/Output
pstConf-> enModId	The module ID whose log level needs to be obtained.	Input
pstConf-> s32Level	Get log level.	Output
pstConf-> cModName	The name of the module.	Output

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

[RK_MPI_LOG_SetLevelConf](#).

2.4 Data Type

2.4.1 Basic Data Types

2.4.1.1 Regular Data Types

【Description】

Definition of basic data types.

【Definition】

```

1  typedef unsigned char RK_U8;
2  typedef unsigned short RK_U16;
3  typedef unsigned int RK_U32;
4
5  typedef signed char RK_S8;
6  typedef short RK_S16;
7  typedef int RK_S32;
8
9  typedef unsigned long RK_UL;
10 typedef signed long RK_SL;
11
12 typedef float RK_FLOAT;
13 typedef double RK_DOUBLE;
14
15 #ifndef _M_IX86
16 typedef unsigned long long RK_U64;
17 typedef long long RK_S64;
18 #else
19 typedef unsigned __int64 RK_U64;
20 typedef __int64 RK_S64;
21 #endif
22
23 typedef char RK_CHAR;
24 #define RK_VOID void
25
26 typedef unsigned int RK_HANDLE;
27
28 typedef enum {
29     RK_FALSE = 0,
30     RK_TRUE = 1,
31 } RK_BOOL;
32
33 #ifndef NULL
34 #define NULL 0L
35 #endif
36
37 #define RK_NULL 0L
38 #define RK_SUCCESS 0
39 #define RK_FAILURE (-1)
40
41 #define MAX_FILE_PATH_LEN 256

```

2.4.1.2 IMAGE_TYPE_E

【Description】

Define an image format enumeration type.

【Definition】

```

1  typedef enum rk_IMAGE_TYPE_E {
2      IMAGE_TYPE_UNKNOW = 0,
3      IMAGE_TYPE_GRAY8,
4      IMAGE_TYPE_GRAY16,
5      IMAGE_TYPE_YUV420P,
6      IMAGE_TYPE_NV12,

```

```

7     IMAGE_TYPE_NV21,
8     IMAGE_TYPE_YV12,
9     IMAGE_TYPE_FBC2,
10    IMAGE_TYPE_FBC0,
11    IMAGE_TYPE_YUV422P,
12    IMAGE_TYPE_NV16,
13    IMAGE_TYPE_NV61,
14    IMAGE_TYPE_YV16,
15    IMAGE_TYPE_YUYV422,
16    IMAGE_TYPE_UYVY422,
17    IMAGE_TYPE_RGB332,
18    IMAGE_TYPE_RGB565,
19    IMAGE_TYPE_BGR565,
20    IMAGE_TYPE_RGB888,
21    IMAGE_TYPE_BGR888,
22    IMAGE_TYPE_ARGB8888,
23    IMAGE_TYPE_ABGR8888,
24    IMAGE_TYPE_JPEG,
25
26    IMAGE_TYPE_BUTT
27 } IMAGE_TYPE_E;

```

2.4.1.3 CODEC_TYPE_E

【Description】

Define codec format enumeration type.

【Definition】

```

1  typedef enum rk_CODEC_TYPE_E {
2      RK_CODEC_TYPE_NONE = -1,
3      // Audio
4      RK_CODEC_TYPE_MP3,
5      RK_CODEC_TYPE_MP2,
6      RK_CODEC_TYPE_VORBIS,
7      RK_CODEC_TYPE_G711A,
8      RK_CODEC_TYPE_G711U,
9      RK_CODEC_TYPE_G726,
10     // Video
11     RK_CODEC_TYPE_H264,
12     RK_CODEC_TYPE_H265,
13     RK_CODEC_TYPE_JPEG,
14     RK_CODEC_TYPE_MJPEG,
15     RK_CODEC_TYPE_NB
16 } CODEC_TYPE_E;

```

2.4.1.4 MOD_ID_E

【Description】

Define a module ID enumeration type.

【Definition】

```

1  typedef enum rkMOD_ID_E {
2      RK_ID_UNKNOW = 0,
3      RK_ID_VB,
4      RK_ID_SYS,
5      RK_ID_VDEC,
6      RK_ID_VENC,
7      RK_ID_H264E,
8      RK_ID_JPEGE,
9      RK_ID_H265E,
10     RK_ID_VO,
11     RK_ID_VI,
12     RK_ID_AIO,
13     RK_ID_AI,
14     RK_ID_AO,
15     RK_ID_AENC,
16     RK_ID_ADEC,
17     RK_ID_ALGO_MD,
18     RK_ID_ALGO_OD,
19     RK_ID_RGA,
20
21     RK_ID_BUTT,
22 } MOD_ID_E;

```

2.4.1.5 Sample_Format_E

【Description】

Define the sampling format enumeration type.

【Definition】

```

1  typedef enum rkSample_Format_E {
2      RK_SAMPLE_FMT_NONE = -1,
3      RK_SAMPLE_FMT_U8,
4      RK_SAMPLE_FMT_S16,
5      RK_SAMPLE_FMT_S32,
6      RK_SAMPLE_FMT_FLT,
7      RK_SAMPLE_FMT_U8P,
8      RK_SAMPLE_FMT_S16P,
9      RK_SAMPLE_FMT_S32P,
10     RK_SAMPLE_FMT_FLTP,
11     RK_SAMPLE_FMT_G711A,
12     RK_SAMPLE_FMT_G711U,
13     RK_SAMPLE_FMT_NB
14 } Sample_Format_E;

```

2.4.1.6 RECT_S

【Description】

Define the region attribute structure.

【Definition】


```

1
2  typedef struct rkRECT_S {
3      RK_S32  s32X;
4      RK_S32  s32Y;
5      RK_U32  u32Width;
6      RK_U32  u32Height;
7  } RECT_S;

```

【Members】

Member name	Description
s32X	X coordinate of the region
s32Y	Y coordinate of the region
u32Width	The width of the region
u32Height	The height of the region

【Notice】

No.

【Related data types and interfaces】

No.

2.4.2 System Control Data Type

The data types about system control are defined as follows:

[MPP_CHN_S](#): define the module device channel structure.

[EventCbFunc](#): event callback function pointer.

[MEDIA_BUFFER](#): data buffer pointer.

[OutCbFunc](#): data output callback function pointer.

[MB_IMAGE_INFO_S](#): image information structure.

2.4.2.1 MPP_CHN_S

【Description】

Define the module device channel structure.

【Definition】

```

1  typedef struct rkMPP_CHN_S {
2      MOD_ID_E  enModId;
3      RK_S32  s32DevId;
4      RK_S32  s32ChnId;
5  } MPP_CHN_S;

```

【Members】

Member name	Description
enModId	Module number.
s32DevId	Device ID.
s32ChnId	Channel number.

2.4.2.2 EventCbFunc

【Description】

Event callback function pointer.

【Definition】

```
1  typedef enum rkEVENT_TYPE_E {
2      RK_EVENT_ERR = 0,
3      RK_EVENT_MD, // Algo::Move detection event.
4      RK_EVENT_OD, // Algo::Occlusion detection event.
5      RK_EVNET_BUT
6  } EVENT_TYPE_E;
7
8  typedef struct rkMD_EVENT_S {
9      RK_U16 u16Cnt;
10     RK_U32 u32Width;
11     RK_U32 u32Height;
12     RECT_S stRects[4096];
13 } MD_EVENT_S;
14
15 typedef struct rkOD_EVENT_S {
16     RK_U16 u16Cnt;
17     RK_U32 u32Width;
18     RK_U32 u32Height;
19     RECT_S stRects[10];
20     RK_U16 u16Occlusion[10];
21 } OD_EVENT_S;
22
23 typedef struct rkEVENT_S {
24     EVENT_TYPE_E type;
25     MOD_ID_E mode_id;
26     union {
27         MD_EVENT_S md_event;
28         OD_EVENT_S stOdEvent;
29     };
30 } EVENT_S;
31
32 typedef void (*EventCbFunc) (EVENT_S *event);
```

【Members】

Member name	Description
type	Event type.
mode_id	Module number.
md_event	Motion detection event.
stOdEvent	Occlusion detection event.

2.4.2.3 MEDIA_BUFFER

【Description】

Data buffer pointer.

【Definition】

```
1 | typedef void *MEDIA_BUFFER;
```

【Related data types and interfaces】

[OutCbFunc](#)

2.4.2.4 OutCbFunc

【Description】

Data output callback function pointer.

【Definition】

```
1 | typedef void (*OutCbFunc) (MEDIA_BUFFER mb);
```

【Related data types and interfaces】

[MEDIA_BUFFER](#)

2.4.2.5 MB_IMAGE_INFO_S

【Description】

Image information structure.

【Definition】

```
1 | typedef struct rkMB_IMAGE_INFO {
2 |     RK_U32 u32Width;
3 |     RK_U32 u32Height;
4 |     RK_U32 u32VerStride;
5 |     RK_U32 u32HorStride;
6 |     IMAGE_TYPE_E enImgType;
7 | } MB_IMAGE_INFO_S;
```

【Members】

Member name	Description
u32Width	Width.
u32Height	Height.
u32HorStride	Virtual width.
u32VerStride	Virtual height.
enImgType	Image format type.

【Related data types and interfaces】

[IMAGE_TYPE_E](#)

2.4.2.6 LOG_LEVEL_CONF_S

【Description】

Define the log level information structure.

【Definition】

```
1  typedef struct rkLOG_LEVEL_CONF_S {  
2      MOD_ID_E enModId;  
3      RK_S32 s32Level;  
4      RK_CHAR cModName[16];  
5  } LOG_LEVEL_CONF_S;
```

【Members】

Member name	Description
enModId	Module ID
s32Level	Log level.
cModName	The name of the module.

【Related data types and interfaces】

No.

2.4.2.7 MPP_FPS_ATTR_S

【Description】

Channel input frame rate attributes.

【Definition】

```

1  typedef struct rkMPP_FPS_ATTR_S {
2      RK_S32 s32FpsInNum;
3      RK_S32 s32FpsInDen;
4      RK_S32 s32FpsOutNum;
5      RK_S32 s32FpsOutDen;
6  } MPP_FPS_ATTR_S;

```

【Members】

Member name	Description
s32FpsInNum	Input the frame rate numerator.
s32FpsInDen	Input the frame rate denominator.
s32FpsOutNum	Output frame rate numerator.
s32FpsOutDen	Otput frame rate denominator.

【Related data types and interfaces】

None.

2.4.2.8 MB_POOL_PARAM_S

【Description】

Media BufferPool attribute structure.

【Definition】

```

1  typedef enum rkMB_TYPE {
2      MB_TYPE_COMMON = 0,
3      // Original image, such as NV12, RGB
4      MB_TYPE_IMAGE = MB_TYPE_IMAGE_MASK | 0x0000,
5      // Encoded video data. Treat JPEG as a video data.
6      MB_TYPE_VIDEO = MB_TYPE_VIDEO_MASK | 0x0000,
7      MB_TYPE_H264 = MB_TYPE_VIDEO_MASK | 0x0001,
8      MB_TYPE_H265 = MB_TYPE_VIDEO_MASK | 0x0002,
9      MB_TYPE_JPEG = MB_TYPE_VIDEO_MASK | 0x0003,
10     MB_TYPE_MJPEG = MB_TYPE_VIDEO_MASK | 0x0004,
11     // Audio data
12     MB_TYPE_AUDIO = MB_TYPE_AUDIO_MASK | 0x0000,
13 } MB_TYPE_E;
14
15 typedef struct rkMB_POOL_PARAM_S {
16     MB_TYPE_E enMediaType;
17     RK_U32 u32Cnt;
18     RK_U32 u32Size;
19     RK_BOOL bHardWare;
20     RK_U16 u16Flag;
21     union {
22         MB_IMAGE_INFO_S stImageInfo;
23     };
24 } MB_POOL_PARAM_S;

```

【Members】

Member name	Description
enMediaType	Media type.
u32Cnt	Number of Buffers in BufferPool.
u32Size	The memory size of each buffer.
bHardWare	Whether to allocate the type of hardware buffer.
u16Flag	Memory allocation flag, used to select the type of hardware buffer.
stImageInfo	Attribute information of image buffer, please refer to MB_IMAGE_INFO_S

【Related data types and interfaces】

None.

2.5 Error Code

System control error codes are shown in [Table 2-2](#):

Table 2-2 System Control API Error Codes

Error code	Macro definition	Description
1	RK_ERR_SYS_NULL_PTR	Null pointer error
2	RK_ERR_SYS_NOTREADY	System control attributes are not configured
3	RK_ERR_SYS_NOT_PERM	Operation not allowed
4	RK_ERR_SYS_NOMEM	Failed to allocate memory, such as insufficient system memory
5	RK_ERR_SYS_ILLEGAL_PARAM	Invalid parameter setting
6	RK_ERR_SYS_BUSY	System is busy
7	RK_ERR_SYS_NOT_SUPPORT	Unsupported function

3. Video Input

3.1 Overview

Video Input (Vi for short) is used to read camera data. This module is an encapsulation of standard V4L2 interface and depends on Linux V4L2 driver architecture. The ISP/ISPP/VICAP driver provides file nodes (such as /dev/video0) to user layer through V4L2 architecture, and VI implements operations such as reading parameter configuration video frame by operating the file nodes.

3.2 Function Description

3.2.1 VI Channel Initialization

For RV1126/RV1109 platform, the rkaiq interface needs to be called to initialize hardware path. Please refer to the interface in external/rkmedia/examples/common/sample_common.h for details.

Introduction to using rkaiq and rkmedia VI interface together:

1. Restrictions:

If all VI Channels are closed, you need to re-initialize the channel. In the case of multi-VI Channel, if only part of VI Channel is closed, there is no need to reinitialize the channel. Reinitialization is required when all VI Channels are closed, In the single VI Channel case, to close the VI Channel, you need to call ISP Stop logic to close the ISP channel; to open the VI, you need to initialize the VI channel again.

2. The interface calling sequence for channel initialization and de-initialization is as follows

Initialization:

1. ISP Init // corresponding to rk_aiq_uapi_sysctl_init
2. ISP Run // corresponding to rk_aiq_uapi_sysctl_prepare & rk_aiq_uapi_sysctl_start
3. VI Enable (single/multi)

Deinitialization:

1. VI disable (single/multi)
2. ISP Stop // corresponding to rk_aiq_uapi_sysctl_stop & rk_aiq_uapi_sysctl_deinit

3.2.2 VI Video Node

VI creation needs to specify the video node (VideoNode), such as "/dev/video0". Each video node corresponds to a video stream. A single camera can provide multiple resolution video streams. For example, ISPP of RV1126/RV1109 platform can provide 4 resolution video streams at the same time, because ISPP driver provides 4 video nodes to user layer.

For platforms with RKISP (such as RV1126/RV1109), each camera connected to ISPP will provide users with 4 video nodes, as shown in the following table. The name starting with "rkispp_" is an alias mechanism provided by driver, which will be translated into the corresponding /dev/videoX node inside VI. Users only need to use these 4 fixed names to obtain video streams of different resolutions.

Table 3-1 ISPP video node (RV1126/RV1109)

ISPP node name	Maximum width	Scale	Supported output format
rkispp_m_bypass	maximum width of sensors	Not supported	NV12/NV16/YUYV/ FBC0/FBC2
rkispp_scale0	3264	1-8 times	NV12/NV16/YUYV
rkispp_scale1	1280	2-8 times	NV12/NV16/YUYV
rkispp_scale2	1280	2-8 times	NV12/NV16/YUYV

Note: rkispp_m_bypass does not support scaling, and the resolution can only maintain the maximum resolution of sensor. After the resolution of rkispp_scale0 exceeds 2K, NV16 format is needed.

3.2.3 VI Working Mode

There are two VI working modes, as shown in the following table:

Mode name	Macro definition name	Function description
Normal mode	VI_WORK_MODE_NORMAL	Compared with "Brightness mode", camera data is read normally in this mode and sent to the subsequent stage.
Brightness mode	VI_WORK_MODE_LUMA_ONLY	In brightness mode, VI is used for brightness statistics only. At this time, VI module cannot get data through callback function or RK_MPI_SYS_GetMediaBuffer.

3.3 API Reference

3.3.1 RK_MPI_VI_EnableChn

【Description】

Enable the VI channel.

【Grammar】

RK_S32 RK_MPI_VI_EnableChn([VI_PIPE](#) ViPipe, [VI_CHN](#) ViChn);

【Parameter】

Parameter name	Description	Input/Output
ViPipe	VI pipe number.	Input
ViChn	VI channel number. Values range: [0, VI_MAX_CHN_NUM].	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_vi_get_frame_test.](#)

【Related topic】

[RK_MPI_VI_DisableChn](#)

3.3.2 RK_MPI_VI_DisableChn

【Description】

Close the VI channel.

【Grammar】

RK_S32 RK_MPI_VI_DisableChn([VI_PIPE](#) ViPipe, [VI_CHN](#) ViChn);

【Parameter】

Parameter name	Description	Input/Output
ViPipe	VI pipe number.	Input
ViChn	VI channel number. Values range: [0, VI_MAX_CHN_NUM].	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_vi_get_frame_test.](#)

【Related topic】

[RK_MPI_VI_EnableChn](#)

3.3.3 RK_MPI_VI_SetChnAttr

【Description】

Set VI channel properties.

【Grammar】

RK_MPI_VI_SetChnAttr([VI_PIPE](#) ViPipe, [VI_CHN](#) ViChn, const [VI_CHN_ATTR_S](#) *pstChnAttr);

【Parameter】

Parameter name	Description	Input/Output
ViPipe	VI pipe number.	Input
ViChn	VI channel number. Values range: [0, VI_MAX_CHN_NUM).	Input
pstChnAttr	VI channel attribute structure pointer.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

If the channel to be set has been bound to other channels through [RK_MPI_SYS_Bind](#), you need to unbind it through [RK_MPI_SYS_UnBind](#) before using this function setting.

If the channel to be set has been enabled with [RK_MPI_VI_EnableChn](#), you need to disable the channel through [RK_MPI_VI_DisableChn](#) before using this function setting.

【Example】

[rkmedia_vi_get_frame_test](#).

【Related topic】

No.

3.3.4 RK_MPI_VI_StartRegionLuma

【Description】

Turn on VI brightness statistics.

【Grammar】

RK_S32 RK_MPI_VI_StartRegionLuma([VI_CHN](#) ViChn);

【Parameter】

Parameter name	Description	Input/Output
ViChn	VI channel number. Values range: [0, VI_MAX_CHN_NUM).	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

It will take effect when [VI_WORK_MODE](#) is set to [VI_WORK_MODE_LUMA_ONLY](#). In this mode, the number of buffers ([u32BufCnt](#)) needs to be greater than or equal to 3.

【Example】

No.

【Related topic】

No.

3.3.5 RK_MPI_VI_StopRegionLuma

【Description】

Stop VI brightness counting.

【Grammar】

RK_S32 RK_MPI_VI_StopRegionLuma([VI_CHN](#) ViChn);

【Parameter】

Parameter name	Description	Input/Output
ViChn	VI channel number. Values range: [0, VI_MAX_CHN_NUM].	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

It will take effect when [VI_WORK_MODE](#) is set to [VI_WORK_MODE_LUMA_ONLY](#) only .

【Example】

No.

【Related topic】

No.

3.3.6 RK_MPI_VI_GetChnRegionLuma

【Description】

Get the region brightness information. It can be used to reverse color of VENC OSD.

【Grammar】

RK_S32 RK_MPI_VI_GetChnRegionLuma([VI_PIPE](#) ViPipe, [VI_CHN](#) ViChn, const [VIDEO_REGION_INFO_S](#) *pstRegionInfo, _SumaDatas32 RK_64, *pu

【Parameter】

Parameter name	Description	Input/Output
ViPipe	VI pipe number.	Input
ViChn	VI channel number. Values range: [0, VI_MAX_CHN_NUM)	Input
pstRegionInfo	Region information. pstRegionInfo->pstRegion is region attribute of the statistical region, that is, the starting position, width, and height; pstRegionInfo->u32RegionNum is the number of the statistical region.	Input
pu64LumaData	Memory pointer for receiving region brightness and statistical information. The memory size should be greater than or equal to sizeof(RK_U64)×pstRegionInfo->u32RegionNum.	Output
s32MilliSec	Timeout parameter s32MilliSec: -1 means blocking mode; 0 means non-blocking mode; greater than 0 means timeout mode, and the unit of timeout time is milliseconds (ms).	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

This interface does not support FBC0/FBC2 compression format.

【Example】

[rkmedia_vi_luma_only_mode_test](#).

【Related topic】

No.

3.3.7 RK_MPI_VI_StartStream

【Description】

Start video stream.

【Grammar】

RK_S32 RK_MPI_VI_StartStream([VI_PIPE](#) ViPipe, [VI_CHN](#) ViChn);

【Parameter】

Parameter name	Description	Input/Output
ViPipe	VI pipe number.	Input
ViChn	VI channel number. Values range: [0, VI_MAX_CHN_NUM).	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_vi_get_frame_test](#).

【Related topic】

No.

3.3.8 RK_MPI_VI_SetUserPic

【Description】

Insert user pictures.

【Grammar】

```
RK_S32 RK_MPI_VI_SetUserPic(VI_CHN ViChn, VI_USERPIC_ATTR_S *pstUsrPicAttr);
```

【Parameter】

Parameter name	Description	Input/Output
ViPipe	VI pipe number.	Input
pstUsrPicAttr	User pictures attribute	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

After inserting, you need to actively call [RK_MPI_VI_EnableUserPic](#). At this time, VI will output user inserted pictures at the set frame rate.

3.3.9 RK_MPI_VI_EnableUserPic

【Description】

Enable users to insert pictures.

【Grammar】

```
RK_S32 RK_MPI_VI_EnableUserPic(VI_CHN ViChn);
```

【Parameter】

Parameter name	Description	Input/Output
ViPipe	The number of VI pipe.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None.

3.3.10 RK_MPI_VI_DisableUserPic

【Description】

Disable users from inserting pictures.

【Grammar】

RK_S32 RK_MPI_VI_DisableUserPic(VI_CHN ViChn);

【Parameter】

Parameter name	Description	Input/Output
ViPipe	VI pipe number.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None.

3.3.11 RK_MPI_VI_RGN_SetCover

【Description】

VI sets the occlusion.

【Grammar】

RK_S32 RK_MPI_VI_RGN_SetCover(VI_PIPE ViPipe, VI_CHN ViChn, const OSD_REGION_INFO_S *pstRgnInfo, const COVER_INFO_S *pstCoverInfo);

【Parameter】

Parameter name	Description	Input/Output
ViPipe	VI pipe number.	Input
ViChn	VI channel number.	Input
pstRgnInfo	canvas information.	Input
pstCoverInfo	Occlusion color information	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None.

3.4 Type of Data

The video input data types are defined as follows:

[VI_MAX_CHN_NUM](#): define the total number of VI physical channels.

[VI_PIPE](#): VI pipe number.

[VI_CHN](#): VI channel number.

[VI_CHN_ATTR_S](#): VI channel attribute structure pointer.

[VIDEO_REGION_INFO_S](#): define video region information.

3.4.1 VI_MAX_CHN_NUM

【Description】

Define the total number of VI physical channels. The typical case of RV1126/RV1109 platform is to connect 1~2 sensor modules, and each sensor can provide a maximum of 4 video channels (corresponding to the 4 video nodes of ISPP), so the maximum number is 8. If the actual usage case exceeds the current limit (such as connecting three sensors, or using the N4 expansion board, etc.), you can change the macro definition yourself.

【Definition】


```
1 | RV1109/RV1126:
2 | #define VI_MAX_CHN_NUM 8
```

3.4.2 VI_PIPE

【Description】

VI pipe number, corresponding to the number of sensors. PIPE is named because the back end of sensor is connected to a series of processing units such as ISP/ISPP to form a data PIPE.

【Definition】

```
1 | typedef RK_S32 VI_PIPE;
```

3.4.3 VI_CHN

【Description】

VI channel number. It determine the data of a channel of a certain camera together with [VI_PIPE](#).

【Definition】

```
1 | typedef RK_S32 VI_CHN;
```

3.4.4 VI_CHN_ATTR_S

【Description】

VI channel attribute structure pointer.

【Definition】

```
1 | typedef char RK_CHAR;
2 |
3 | typedef enum rkVI_CHN_WORK_MODE {
4 |     VI_WORK_MODE_NORMAL = 0,
5 |     // for vi single caculate luma.
6 |     // In this mode, vi has no output,
7 |     // and data cannot be obtained from vi.
8 |     VI_WORK_MODE_LUMA_ONLY
9 | } VI_CHN_WORK_MODE;
10 |
11 | typedef enum rkVI_CHN_BUF_TYPE {
12 |     VI_CHN_BUF_TYPE_DMA = 0, // Default
13 |     VI_CHN_BUF_TYPE_MMAP,
14 | } VI_CHN_BUF_TYPE;
15 |
16 | typedef struct rkVI_CHN_ATTR_S {
17 |     const RK_CHAR *pcVideoNode;
18 |     RK_U32 u32Width;
19 |     RK_U32 u32Height;
20 |     IMAGE_TYPE_E enPixFmt;
```

```

21     RK_U32 u32BufCnt; // VI capture video buffer cnt.
22     // VI capture video buffer type.
23     VI_CHN_BUF_TYPE enBufType;
24     VI_CHN_WORK_MODE enWorkMode;
25 } VI_CHN_ATTR_S;

```

【Members】

Member name	Description
pcVideoNode	Video node path.
u32Width	Video width.
u32Height	video height.
enPixFmt	video format.
u32BufCnt	VI capture video buffer count
enWorkMode	VI channel working mode

【Notice】

VI_WORK_MODE_LUMA_ONLY mode is used for VI brightness counting. In this mode, VI has no output and cannot obtain data from VI.

【Related data types and interfaces】

[IMAGE_TYPE_E](#)

[RK_MPI_VI_SetChnAttr](#)

3.4.5 VIDEO_REGION_INFO_S

【Description】

Define the video region information.

【Definition】

```

1  typedef struct rkVIDEO_REGION_INFO_S {
2      RK_U32 u32RegionNum; /* count of the region */
3      RECT_S *pstRegion; /* region attribute */
4  } VIDEO_REGION_INFO_S;

```

【Members】

Member name	Description
u32RegionNum	The number of video regions.
pstRegion	A pointer to the position information of a video region.

【Related data types and interfaces】

[RECT_S](#)

3.4.6 VI_USERPIC_ATTR_S

【Description】

User picture attribute information.

【Definition】

```
1  typedef struct rkVI_USERPIC_ATTR_S {
2      IMAGE_TYPE_E enPixFmt;
3      RK_U32 u32Width;
4      RK_U32 u32Height;
5      RK_VOID *pvPicPtr;
6  } VI_USERPIC_ATTR_S;
```

【Members】

Member name	Description
enPixFmt	The format of pictures.
u32Width	The width of the Picture.
u32Height	The height of the Picture.
pvPicPtr	Picture's data.

【Related data types and interfaces】

[RECT_S](#)

[RK_MPI_VI_GetChnRegionLuma](#)

3.5 Error Code

Video input API error codes are shown in [Table 3-2](#):

Table 3-2 Video input API error codes

Error code	Macro definition	Description
10	RK_ERR_VI_INVALID_CHNID	Invalid video input channel number
11	RK_ERR_VI_BUSY	Video input system is busy
12	RK_ERR_VI_EXIST	Video input channel already exists
13	RK_ERR_VI_NOT_CONFIG	Video input is not configured
14	RK_ERR_VI_TIMEOUT	Video input timeout
15	RK_ERR_VI_BUF_EMPTY	Video input buffer is empty
16	RK_ERR_VI_ILLEGAL_PARAM	Video input parameter setting is invalid
17	RK_ERR_VI_NOTREADY	The video input system is not initialized


4. Video Encoding

4.1 Overview

VENC module is also called video encoding module. This module supports multi-channel real-time encoding, and each channel encodes independently, and the encoding protocol and encoding profile can be different. While supporting video encoding, the Region module is scheduled to overlay and cover the encoded image contents, supporting H264/H265/MJPEG/JPEG encoding.

4.2 Function Description

4.2.1 Data Flow Chart

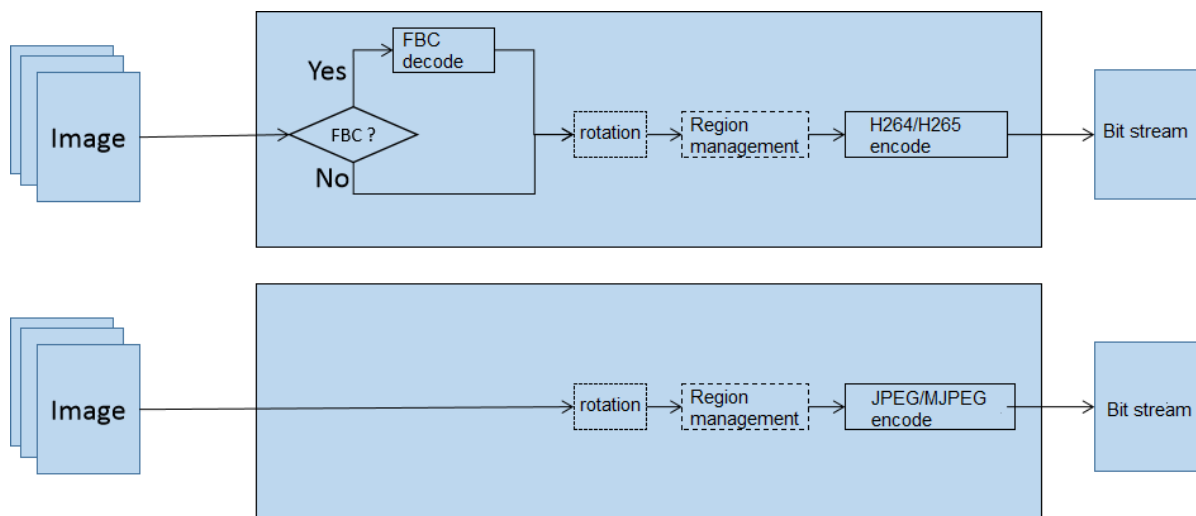

Note: The functions described in the dotted rectangle are optional and will only be triggered when the encoder is configured accordingly.

4.2.2 Rate Control

Encoder type	Supported code control type
H265	CBR / VBR
H264	CBR / VBR
MJPEG	CBR / VBR

4.2.3 GOP Mode

GOP Mode is used to customize the dependency of reference frame, and the following modes are supported currently. Note: can be customized accordingly.

Name	Macro Definition	Description
Normal mode	VENC_GOPMODE_NORMALP	The most common scene, one I frame every GopSize
Smart P frame mode	VENC_GOPMODE_SMARTP	One virtual I frame every GopSize and one I frame every BgInterval
Multi-layer time domain reference mode	VENC_GOPMODE_TSVC	The coding dependency relationship is divided into multiple layers, and layers information can be obtained according to RK_MPI_MB_GetTsvcLevel, and the code stream can be customized. For example, only play the 0th layer stream, which can realize fast preview.

4.2.4 Region of Interest (ROI)

By configuring the region of interest of encoder, QP can be customized for the specified region. For example, a lens facing corridor, users are really interested in the center of corridor. ROI can be configured to make the coding quality in the center of the corridor higher and the image clearer, and the image quality of the non-interest region of the corridor (wall, ceiling, etc.) will be lower. In this way, user's region of interest is highlighted while keeping the bit rate nearly unchanged.

Each VENC channel provides 8 regions of interest, and the priority increases from REGION_ID_0 to REGION_ID_7. In regions where multiple ROIs overlap, the QP strategy will be configured according to the regions with high priority.

1	REGION_ID_0
2	REGION_ID_1
3	REGION_ID_2
4	REGION_ID_3
5	REGION_ID_4
6	REGION_ID_5
7	REGION_ID_6
8	REGION_ID_7

4.2.5 Rotation

The encoder supports 4 types of rotation, 0°, 90°, 180°, 270°. Encoder rotation does not support FBC format currently, and FBC format rotation needs to be achieved through ISPP rotation.

4.3 API Reference

4.3.1 RK_MPI_VENC_CreateChn

【Description】

Create an encoding channel.

【Grammar】

RK_S32 RK_MPI_VENC_CreateChn([VENC_CHN](#) VeChn, [VENC_CHN_ATTR_S](#) *stVencChnAttr);

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Values range: [0, VENC_MAX_CHN_NUM].	Input
stVencChnAttr	Encoding channel attribute pointer.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

Limitations of JPEG/MJPEG encoder :

1. If there is FBC format or the zoom function is enabled, the encoder channel created at this time does not support dynamic resolution switching.
2. Only 90 degree and 180 degree rotation are supported.
3. OSD will change the original buffer content of the input JPEG/MJPEG. There may be problems in the following cases:

VI[0] is bound to VENC[H264] and VENC[JPEG] at the same time, and JPEG is configured with OSD. At this time, the JPEG will directly add OSD on the original image output by VI, so the input data of H264 encoder will also **probably** have this OSD effect. At this time, you can add an RGA type channel before VENC[JPEG] to avoid directly add OSD on the VI output original image.

【Example】

[rkmedia_vi_venc_test](#).

【Related topic】

No.

4.3.2 RK_MPI_VENC_GetVencChnAttr

【Description】

Get encoding channel parameters.

【Grammar】

RK_S32 RK_MPI_VENC_GetVencChnAttr([VENC_CHN](#) VeChn, [VENC_CHN_ATTR_S](#) *stVencChnAttr);

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Values range: [0, VENC_MAX_CHN_NUM].	Input
stVencChnAttr	Encoding channel attribute pointer.	Output

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

This function can get the parameter configuration of the created channels only.

【Example】

No.

【Related topic】

No.

4.3.3 RK_MPI_VENC_SetVencChnAttr

【Description】

Set encoding channel parameters.

【Grammar】

RK_S32 RK_MPI_VENC_SetVencChnAttr([VENC_CHN](#) VeChn, [VENC_CHN_ATTR_S](#) *stVencChnAttr);

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Values range: [0, VENC_MAX_CHN_NUM].	Input
stVencChnAttr	Encoding channel attribute pointer.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

This function can configure parameters of the created channels only. Currently, it supports encoding complexity (H264 only), resolution, bit rate, frame rate, GOP dynamic settings. The other configuration changes need to be destroyed and then recreated.

The resolution dynamic configuration needs to keep the width and height information of the encoder input buffer consistent with dynamic configuration, otherwise it will cause the risk of memory access overrun. This interface is only recommended to be used when VENC is not bound. And make sure that the input buffer of VENC channel has been cleared before changing resolution (see [RK_MPI_VENC_QueryStatus](#))

【Example】

No.

【Related topic】

No.

4.3.4 RK_MPI_VENC_GetVencChnParam

【Description】

To get parameters of encoding channel.

【Grammar】

RK_S32 RK_MPI_VENC_GetVencChnParam([VENC_CHN](#) VeChn, [VENC_CHN_PARAM_S](#) *stVencChnParam);

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Values range: [0, VENC_MAX_CHN_NUM].	Input
stVencChnParam	Encoding channel attribute pointer.	Output

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

This function can only get the parameter configuration of the created channel.

【Example】

None

【Related topic】

No.

4.3.5 RK_MPI_VENC_SetVencChnParam

【Description】

Set parameters of the encoding channel .

【Grammar】

RK_S32 RK_MPI_VENC_SetVencChnAttr([VENC_CHN](#) VeChn, [VENC_CHN_PARAM_S](#) *stVencChnParam);

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Value range: [0, VENC_MAX_CHN_NUM).	Input
stVencChnParam	Encoding channel attribute pointer.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

This function can only configure the parameters of the created channels. Currently supports encoding complexity (H264 only), resolution, bit rate, frame rate, GOP dynamic settings. The rest of the configuration modification need to be destroyed and then recreated.

The resolution dynamic configuration needs to keep the width and height information of the encoder input buffer consistent with the dynamic configuration, otherwise it will cause the risk of memory access crossing the boundary. This interface is only recommended for the case which VENC does not use Bind. And make sure that the input buffer of VENC Channel has been cleared before changing the resolution (please refer to [RK_MPI_VENC_QueryStatus](#))

【Examples】

None.

4.3.6 RK_MPI_VENC_DestroyChn

【Description】

Destroy the encoding channel.

【Grammar】

RK_S32 RK_MPI_VENC_DestroyChn([VENC_CHN](#) VeChn);

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Values range: [0, VENC_MAX_CHN_NUM].	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_vi_venc_test](#).

【Related topic】

No.

4.3.7 RK_MPI_VENC_GetRcParam

【Description】

Get the bit rate control parameters.

【Grammar】

RK_S32 RK_MPI_VENC_GetRcParam([VENC_CHN](#) VeChn, [VENC_RC_PARAM_S](#) *pstRcParam);

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Values range: [0, VENC_MAX_CHN_NUM].	Input
pstRcParam	The advanced parameters of the code rate controller.	Output

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

[RK_MPI_VENC_SetRcParam](#).

4.3.8 RK_MPI_VENC_SetRcParam

【Description】

Set bit rate control parameters.

【Grammar】

RK_S32 RK_MPI_VENC_SetRcParam([VENC_CHN](#) VeChn, const [VENC_RC_PARAM_S](#) *pstRcParam);

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Values range: [0, VENC_MAX_CHN_NUM].	Input
pstRcParam	Advanced parameters of code rate controller.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

- There are default values of the advanced parameters of the encoding channel rate controller, instead of having to call this interface to start the encoding channel.
- It is recommended that users call the RK_MPI_VENC_GetRcParam interface to obtain RC advanced parameters firstly, secondly, modify the corresponding parameters, and then call this interface to set the advanced parameters.
- RC advanced parameters now only support parameters setting of rows level and macroblock level code control under CBR/VBR rate control mode of H.264/H.265/Mjpeg. The advanced parameters of the code rate controller including the following parameters:
 1. u32ThrdI[RC_TEXTURE_THR_SIZE], u32ThrdP[RC_TEXTURE_THR_SIZE]: a group of thresholds for measuring the complexity of macroblocks of I frame and P frame respectively. This group of thresholds are arranged in order from small to large, and the value range of each threshold is [0, 255]. This group of

thresholds is used to appropriately adjust the Qp of each macroblock according to the image complexity when performing macroblock level rate control.

2. u32RowQpDeltaI, u32RowQpDeltaP: when in macroblock level code rate control, the fluctuation amplitude value of the starting Qp of each row of macroblocks relative to the starting Qp of frames. For scenes with strict code rate fluctuations, you can try to increase this parameter to achieve more precise code rate control, but it may cause differences in image quality within certain frames. When the bit rate is high, the value is recommended to be 0; when the bit rate is medium, the value is recommended to be 0 or 1; when the bit rate is low, the value is recommended to be 2~5.
 3. s32FirstFrameStartQp: the starting Qp value of the first frame, CBR/VBR/AVBR are valid. If s32FirstFrameStartQp is -1, the starting QP of the first frame is calculated internally by the encoder, and the value is -1 by default. The meaning of the first frame here is: channel creation, after Gop mode switching, RC mode switching, or resolution switching, the first IDR frame of the sequence.
- H264/H265/MJPEG CBR/VBR/AVBR advanced parameter settings:
 1. u32StepQp: reserved, meaningless.
 2. u32MaxQp and u32MinQp represent the maximum Qp and minimum Qp of the current frames. This clamping effect is the strongest. All other adjustments to the image Qp, such as macroblock-level rate control, will eventually be constrained to this maximum Qp and minimum Qp. The default value u32MinQp is 8 and u32MaxQp is 48. If there is no special requirement for quality, it is recommended not to change this group of parameters.
 3. u32MaxIQp and u32MinIQp represent the maximum Qp and minimum Qp of the current sequence IDR frames. This clamping effect is the strongest. All other adjustments to the image Qp, such as macroblock-level rate control, will eventually be constrained to this maximum Qp and minimum Qp. The default value u32MinIQp is 8, u32MaxIQp is 48. If there is no special requirement for quality, it is recommended not to change this group of parameters.

【Example】

[rkmedia isp_test](#).

【Related topic】

[RK_MPI_VENC_GetRcParam](#).

4.3.9 RK_MPI_VENC_SetRcMode

【Description】

Set the bit rate control mode.

【Grammar】

RK_S32 RK_MPI_VENC_SetRcMode([VENC_CHN](#) VeChn, [VENC_RC_MODE_E](#) RcMode);

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Values range: [0, VENC_MAX_CHN_NUM].	Input
RcMode	Rate control mode.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

No.

4.3.10 RK_MPI_VENC_SetRcQuality

【Description】

Set the encoding quality for H264/H265 encoder.

【Grammar】

RK_S32 RK_MPI_VENC_SetRcQuality([VENC_CHN](#) VeChn, [VENC_RC_QUALITY_E](#) RcQuality);

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Values range: [0, VENC_MAX_CHN_NUM].	Input
RcQuality	Encoding quality.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

No.

4.3.11 RK_MPI_VENC_SetBitrate

【Description】

Set the bit rate.

【Grammar】

RK_S32 RK_MPI_VENC_SetBitrate([VENC_CHN](#) VeChn, RK_U32 u32BitRate, RK_U32 u32MinBitRate, RK_U32 u32MaxBitRate);

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Values range: [0, VENC_MAX_CHN_NUM].	Input
u32BitRate	Target bit rate.	Input
u32MinBitRate	The minimum bit rate. Unit bps	Input
u32MaxBitRate	Maximum bit rate. Unit bps	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

No.

4.3.12 RK_MPI_VENC_RequestIDR

【Description】

Request IDR frame. After calling this interface, the encoder refreshes IDR frame immediately.

【Grammar】

RK_S32 RK_MPI_VENC_RequestIDR([VENC_CHN](#) VeChn, RK_BOOL bInstant);

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Values range: [0, VENC_MAX_CHN_NUM].	Input
bInstant	Whether to enable IDR frame encoding immediately.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

No.

4.3.13 RK_MPI_VENC_SetFps

【Description】

Set the encoding frame rate.

【Grammar】

RK_S32 RK_MPI_VENC_SetFps([VENC_CHN](#) VeChn, RK_U8 u8OutNum, RK_U8 u8OutDen, RK_U8 u8InNum, RK_U8 u8InDen);

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Values range: [0, VENC_MAX_CHN_NUM].	Input
u8OutNum	Denominator of the encoding output frame rate.	Input
u8OutDen	Numerator of the encoding output frame rate.	Input
u8InNum	Denominator of the encoding input frame rate.	Input
u8InDen	Numerator of the encoding input frame rate.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

The output frame rate cannot be greater than the input frame rate.

【Example】

No.

【Related topic】

No.

4.3.14 RK_MPI_VENC_SetGop

【Description】

Set GOP for H264/H265 encoder.

【Grammar】

RK_S32 RK_MPI_VENC_SetGop([VENC_CHN](#) VeChn, RK_U32 u32Gop);

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Values range: [0, VENC_MAX_CHN_NUM].	Input
u32Gop	GOP.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

No.

4.3.15 RK_MPI_VENC_SetAvcProfile

【Description】

Set profile for H264 encoder.

【Grammar】

RK_S32 RK_MPI_VENC_SetAvcProfile([VENC_CHN](#) VeChn, RK_U32 u32Profile, RK_U32 u32Level);

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Values range: [0, VENC_MAX_CHN_NUM].	Input
u32Profile	Profile IDC value.	Input
u32Level	Level IDC value.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

The supported u32Profile are 66, 77, 100 only, corresponding to Baseline, Main Profile, and High Profile respectively at present.

【Example】

No.

【Related topic】

No.

4.3.16 RK_MPI_VENC_InsertUserData

【Description】

Inserted user data which will be reflected in the SEI packet of code stream, and it is used for H264/H265 encoder.

【Grammar】

RK_S32 RK_MPI_VENC_InsertUserData([VENC_CHN](#) VeChn, RK_U8 *pu8Data, RK_U32 u32Len);

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Values range: [0, VENC_MAX_CHN_NUM].	Input
pu8Data	User data pointer.	Input
u32Len	User data length.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

No.

4.3.17 RK_MPI_VENC_SetResolution

【Description】

Set VENC channel resolution

【Grammar】

RK_S32 RK_MPI_VENC_SetResolution([VENC_CHN](#) VeChn, [VENC_RESOLUTION_PARAM_S](#) stResolutionParam);

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Values range: [0, VENC_MAX_CHN_NUM].	Input
stResolutionParam	Resolution parameter structure.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_rga_crop_venc_test](#).

【Related topic】

No.

4.3.18 RK_MPI_VENC_GetRoiAttr

【Description】

Get ROI configuration parameters of the specified index value, it is used for H264/H265 encoder.

【Grammar】

RK_S32 RK_MPI_VENC_GetRoiAttr([VENC_CHN](#) VeChn, [VENC_ROI_ATTR_S](#) *pstRoiAttr, RK_S32 roi_index);

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Values range: [0, VENC_MAX_CHN_NUM].	Input
pstRoiAttr	ROI region parameters.	Output
roi_index	ROI region index value. Values range: [0,7].	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

[RK_MPI_VENC_SetRoiAttr](#).

4.3.19 RK_MPI_VENC_SetRoiAttr

【Description】

Set ROI coding region of interest, it is used for H264/H265 encoder.

【Grammar】

RK_S32 RK_MPI_VENC_SetRoiAttr([VENC_CHN](#) VeChn, const [VENC_ROI_ATTR_S](#) *pstRoiAttr, RK_S32 region_cnt);

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Values range: [0, VENC_MAX_CHN_NUM].	Input
pstRoiAttr	ROI region parameters.	Input
region_cnt	The number of ROI regions. Values range: [1,8].	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

[RK_MPI_VENC_GetRoiAttr](#).

4.3.20 RK_MPI_VENC_SetGopMode

【Description】

Set GopMode, and it is used for H264/H265 encoder.

【Grammar】

RK_S32 RK_MPI_VENC_SetGopMode([VENC_CHN](#) VeChn, [VENC_GOP_ATTR_S](#) GopMode);

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Values range: [0, VENC_MAX_CHN_NUM].	Input
GopMode	GOP attribute structure.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_venc_smartp_test](#).

【Related topic】

No.

4.3.21 RK_MPI_VENC_RGN_Init

【Description】

Initialize the VENC RGN module. Each VENC_CHN needs to call this function for initialization before using the VENC RGN interface.

【Grammar】

RK_S32 RK_MPI_VENC_RGN_Init([VENC_CHN](#) VeChn, [VENC_COLOR_TBL_S](#) *stColorTbl);

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Values range: [0, VENC_MAX_CHN_NUM].	Input
stColorTbl	265 color palette, supports ARGB8888 format only, setting NULL to use the default palette.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

Before calling [RK_MPI_VENC_RGN_SetBitMap](#) or [RK_MPI_VENC_RGN_SetCover](#), this interface must be called first, and each encoding channel can only be called once.

【Example】

No.

【Related topic】

[RK_MPI_VENC_RGN_SetBitMap](#)

[RK_MPI_VENC_RGN_SetCover](#)

4.3.22 RK_MPI_VENC_RGN_SetBitMap

【Description】

Sets OSD bitmap. Supports ARGB8888 format bitmap Only.

【Grammar】

RK_S32 RK_MPI_VENC_RGN_SetBitMap([VENC_CHN](#) VeChn, const [OSD_REGION_INFO_S](#) *pstRgnInfo, const [BITMAP_S](#) *pstBitmap);

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Values range: [0, VENC_MAX_CHN_NUM].	Input
pstRgnInfo	OSD region information.	Input
pstBitmap	Bitmap information and data.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

Before calling this interface, you must call [RK_MPI_VENC_RGN_Init](#) firstly. This interface shares 8 layers of the encoder with [RK_MPI_VENC_RGN_SetCover](#), please see [OSD_REGION_INFO_S](#) for details.

【Example】

[rkmedia_venc_jpeg_test](#).

【Related topic】

[RK_MPI_VENC_RGN_Init](#)

4.3.23 RK_MPI_VENC_RGN_SetCover

【Description】

Set privacy cover. the efficiency of monochrome cover with RGB8888 is higher than [RK_MPI_VENC_RGN_SetBitMap](#).

【Grammar】

RK_S32 RK_MPI_VENC_RGN_SetCover([VENC_CHN](#) VeChn, const [OSD_REGION_INFO_S](#) *pstRgnInfo, const [COVER_INFO_S](#) *pstCoverInfo

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Values range: [0, VENC_MAX_CHN_NUM].	Input
pstRgnInfo	RGN region information.	Input
pstCoverInfo	Privacy covering information.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

Before calling this interface, you have to call [RK_MPI_VENC_RGN_Init](#) firstly. This interface shares 8 layers of encoder with [RK_MPI_VENC_RGN_SetBitMap](#), please refer to [OSD_REGION_INFO_S](#).

【Example】

[rkmedia_venc_cover_test](#);

【Related topic】

[RK_MPI_VENC_RGN_Init](#)

4.3.24 RK_MPI_VENC_RGN_SetPaletteId

【Description】

Palette index is used to build buffer for OSD overlay. It will be higher efficiency without matching color palette. In addition, compared with argb8888 format buffer, the memory consumption of using index to build buffer is reduced to 1/4..

【Grammar】

```
RK_S32 RK_MPI_VENC_RGN_SetPaletteId(VENC\_CHN VeChn, const OSD\_REGION\_INFO\_S
*pstRgnInfo,
const OSD\_COLOR\_PALETTE\_BUF\_S *pstColPalBuf);
```

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Values range: [0, VENC_MAX_CHN_NUM].	Input
pstRgnInfo	RGN region information.	Input
pstColPalBuf	OSD buffer constructed by palette index.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

Before calling this interface, you have to call [RK_MPI_VENC_RGN_Init](#) firstly. This interface shares 8 layers of the encoder with [RK_MPI_VENC_RGN_SetBitMap](#), please refer to [OSD_REGION_INFO_S](#).

【Example】

No.

【Related topic】

No.

4.3.25 RK_MPI_VENC_SetJpegParam

【Description】

Set JPEG encoding parameters.

【Grammar】

RK_S32 RK_MPI_VENC_SetJpegParam([VENC_CHN](#) VeChn, const [VENC_JPEG_PARAM_S](#) *pstJpegParam);

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Values range: [0, VENC_MAX_CHN_NUM].	Input
pstJpegParam	Advanced parameters of JPEG protocol encoding channel.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_venc_jpeg_light_test](#).

【Related topic】

No.

4.3.26 RK_MPI_VENC_StartRecvFrame

【Description】

Set the number of frames received by encoder. The encoder created by default will receive VI data continuously. The number of received frames can be set by the RK_MPI_VENC_StartRecvFrame interface. After reaching specified number, the encoder will go to sleep until next time the interface is called to change the number of received frames.

【Grammar】

RK_S32 RK_MPI_VENC_StartRecvFrame([VENC_CHN](#) VeChn, const [VENC_RECV_PIC_PARAM_S](#) *pstRecvParam);

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Values range: [0, VENC_MAX_CHN_NUM].	Input
pstRecvParam	Receive image parameter structure pointer which is used to specify the number of image frames to be received.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_venc_jpeg_light_test](#).

【Related topic】

No.

4.3.27 RK_MPI_VENC_GetFd

【Description】

Get the file descriptor of the encoder channel.

【Grammar】

RK_S32 RK_MPI_VENC_GetFd([VENC_CHN](#) VeChn);

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Values range: [0, VENC_MAX_CHN_NUM].	Input

【Return value】

Return value type	Description
RK_S32	File Descriptor

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

No.

4.3.28 RK_MPI_VENC_QueryStatus

【Description】

Get the encoder channel status.

【Grammar】

RK_S32 RK_MPI_VENC_QueryStatus([VENC_CHN](#) VeChn, [VENC_CHN_STATUS_S](#) *pstStatus);

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Values range: [0, VENC_MAX_CHN_NUM].	Input
pstStatus	Encoder status structure.	Output

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_venc_jpeg_light_test.](#)

【Related topic】

No.

4.3.29 RK_MPI_VENC_SetSuperFrameStrategy

【Description】

Set the super frame related configuration of the encoding channel.

【Grammar】

RK_S32 RK_MPI_VENC_SetSuperFrameStrategy([VENC_CHN](#) VeChn, const [VENC_SUPERFRAME_CFG_S](#) *pstSuperFrmParam)

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Value range: [0, VENC_MAX_CHN_NUM).	Input
pstSuperFrmParam	Super frame configuration structure of a coding channel .	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

If the channel is not created, it returns failure.

This interface is a high-level interface, and users can call it optionally.

The system default value, please refer to [VENC_SUPERFRAME_CFG_S](#). During the disabling period, if the encoder detects that the code rate is greater than 1.5 times the set code rate, it will restart encoding once.

This interface is set after the encoding channel is created and before the encoding channel is destroyed.

【Example】

None.

【Related topic】

None.

4.3.30 RK_MPI_VENC_GetSuperFrameStrategy

【Description】

Obtain the configurations related to the super frame of the encoding channel.

【Grammar】

RK_S32 RK_MPI_VENC_GetSuperFrameStrategy([VENC_CHN](#) VeChn, [VENC_SUPERFRAME_CFG_S](#) *pstSuperFrmParam);

【Parameter】

Parameter name	Description	Input/Output
VeChn	Encoding channel number. Value range: [0, VENC_MAX_CHN_NUM).	Input
pstSuperFrmParam	Super frame configuration structure of the coding channel	Output

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

This interface is meaningful only after calling RK_MPI_VENC_SetSuperFrameStrategy

【Example】

None.

【Related topic】

None.

4.4 Type of Data

The video coding related data types are defined as follows:

[VENC_MAX_CHN_NUM](#): define the total number of VENC physical channels and extended channels.

[VENC_CHN](#): VENC channel number.

[VENC_ATTR_JPEG_S](#): define the attribute structure of JPEG capture encoder.

[VENC_ATTR_MJPEG_S](#): define the attribute structure of MJPEG encoder.

[VENC_ATTR_H264_S](#): define H.264 encoder attribute structure.

[VENC_ATTR_H265_S](#): define H.265 encoder attribute structure.

[VENC_ATTR_S](#): define the encoder attribute structure.

[VENC_MJPEG_CBR_S](#): define CBR attribute structure of MJPEG encoding channel.

[VENC_MJPEG_VBR_S](#): define VBR attribute structure of MJPEG encoding channel.

[VENC_H264_CBR_S](#): define CBR attribute structure of H.264 encoding channel.

[VENC_H264_VBR_S](#): define VBR attribute structure of H.264 encoding channel.

[VENC_H265_CBR_S](#): define CBR attribute structure of H.265 encoding channel.

[VENC_H265_VBR_S](#): define VBR attribute structure of H.265 encoding channel.

[VENC_RC_MODE_E](#): define the code rate controller mode of the encoding channel.

[VENC_RC_ATTR_S](#): define the code rate controller attributes of the encoding channel.

[VENC_GOP_MODE_E](#): define Gop mode type.

[VENC_GOP_ATTR_S](#): define the encoder GOP attribute structure.

[VENC_CHN_ATTR_S](#): VENC channel attribute structure.

[VENC_PARAM_MJPEG_S](#): MJPEG channel parameters.

[VENC_PARAM_H264_S](#): H.264 channel parameters.

[VENC_PARAM_H265_S](#): H.265 channel parameters.

[VENC_RC_PARAM_S](#): the advanced parameters of the code rate controller of the encoding channel.

[VENC_RC_QUALITY_E](#): encoding quality.

[VENC_ROI_ATTR_S](#): ROI attribute structure.

[OSD_REGION_ID_E](#): OSD region ID enumeration type.

[OSD_REGION_INFO_S](#): OSD region information.

[OSD_PIXEL_FORMAT_E](#): OSD pixel format type enumeration.

[BITMAP_S](#): bitmap information and data.

[COVER_INFO_S](#): privacy cover information.

[VENC_RECV_PIC_PARAM_S](#): receive image parameter structure pointer, is used to specify the number of image frames to be received.

[VENC_JPEG_PARAM_S](#): advanced parameters of JPEG protocol encoding channel.

4.4.1 VENC_MAX_CHN_NUM

【Description】

The total number of VENC physical channels and expansion channels.

【Definition】


```
1 | RV1109/RV1126:
2 | #define VENC_MAX_CHN_NUM 16
```

4.4.2 VENC_CHN

【Description】

VENC channel number.

【Definition】

```
1 | typedef RK_U32 VENC_CHN;
```

4.4.3 VENC_ATTR_JPEG_S

【Description】

Define the attribute structure of JPEG capture encoder.

【Definition】

```
1 | typedef struct rkVENC_ATTR_JPEG_S {
2 |     RK_U32 u32ZoomWidth; // Zoom to specified width
3 |     RK_U32 u32ZoomHeight; // Zoom to specified height
4 |     RK_U32 u32ZoomVirWidth;
5 |     RK_U32 u32ZoomVirHeight;
6 | } VENC_ATTR_JPEG_S;
```

【Members】

Member name	Description
u32ZoomWidth	Zoom to the specified width.
u32ZoomHeight	Zoom to the specified height
u32ZoomVirWidth	Zoom to the virtual width.
u32ZoomVirHeight	Zoom to the virtual height.

4.4.4 VENC_ATTR_MJPEG_S

【Description】

Define the attribute structure of MJPEG encoder.

【Definition】

```

1  typedef struct rkVENC_ATTR_MJPEG_S {
2      RK_U32 u32ZoomWidth; // Zoom to specified width
3      RK_U32 u32ZoomHeight; // Zoom to specified height
4      RK_U32 u32ZoomVirWidth;
5      RK_U32 u32ZoomVirHeight;
6  } VENC_ATTR_MJPEG_S;

```

【Members】

Member name	Description
u32ZoomWidth	Zoom to the specified width.
u32ZoomHeight	Zoom to the specified height.
u32ZoomVirWidth	Zoom to the virtual width.
u32ZoomVirHeight	Zoom to the virtual height.

4.4.5 VENC_ATTR_H264_S

【Description】

Define the attribute structure of H.264 encoder.

【Definition】

```

1  typedef struct rkVENC_ATTR_H264_S {
2      RK_U32 u32Level;
3      // reserved
4  } VENC_ATTR_H264_S;

```

【Members】

Member name	Description
u32Level	Profile IDC value.

4.4.6 VENC_ATTR_H265_S

【Description】

Define the attribute structure of H.265 encoder.

【Definition】

```

1  typedef struct rkVENC_ATTR_H265_S {
2      // reserved
3  } VENC_ATTR_H265_S;

```

4.4.7 VENC_ATTR_S

【Description】

Define the encoder attribute structure.

【Definition】

```
1  typedef struct rkVENC_ATTR_S {
2
3      CODEC_TYPE_E enType; // RW; the type of codec
4      IMAGE_TYPE_E imageType; // the type of input image
5      RK_U32 u32VirWidth; // stride width, same to buffer_width, must greater
    than
6                          // width, often set vir_width=(width+15)&(~15)
7      RK_U32 u32VirHeight; // stride height, same to buffer_height, must greater
8                          // than height, often set vir_height=(height+15)&
    (~15)
9      RK_U32 u32Profile; // RW;
10                     // H.264: 66: baseline; 77:MP; 100:HP;
11                     // H.265: default:Main;
12                     // Jpege/MJpege: default:Baseline
13      RK_BOOL bByFrame; // reserve
14      RK_U32 u32PicWidth; // RW; width of a picture to be encoded, in pixel
15      RK_U32 u32PicHeight; // RW; height of a picture to be encoded, in pixel
16      VENC_ROTATION_E enRotation;
17      union {
18          VENC_ATTR_H264_S stAttrH264e; // attributes of H264e
19          VENC_ATTR_H265_S stAttrH265e; // attributes of H265e
20          VENC_ATTR_MJPEG_S stAttrMjpege; // attributes of Mjpeg
21          VENC_ATTR_JPEG_S stAttrJpege; // attributes of jpeg
22      };
23  } VENC_ATTR_S;
```

【Members】

Member name	Description
enType	Encoding protocol type.
imageType	Input image type.
u32VirWidth	stride width, usually is the same as buffer_width. If u32VirWidth is greater than buffer width, it must be 16 alignment.
u32VirHeight	stride height, usually is the same as buffer_height. If u32VirHeight is greater than buffer height, it must be 16 alignment.
u32Profile	The level of encoding. H.264: 66: Baseline; 77: Main Profile; 100: High Profile; H.265: default:Main; Jpege/MJpege: default:Baseline
bByFrame	Reserved parameter, not supported currently.
u32PicWidth	Encoded image width. In pixels.
u32PicHeight	The height of the encoded image. In pixels.
stAttrH264e/stAttrH265e/stAttrMjpege/stAttrJpege	Encoder attributes of one protocol.

【Related data types and interfaces】

[VENC_ATTR_JPEG_S](#)

[VENC_ATTR_MJPEG_S](#)

[VENC_ATTR_H264_S](#)

[VENC_ATTR_H265_S](#)

[VENC_CHN_ATTR_S](#)

4.4.8 VENC_MJPEG_CBR_S

【Description】

Define the CBR attribute structure of MJPEG encoding channel.

【Definition】

```

1  typedef struct rkVENC_MJPEG_CBR_S {
2      RK_U32 u32SrcFrameRateNum;
3      RK_U32 u32SrcFrameRateDen;
4      RK_FR32 fr32DstFrameRateNum;
5      RK_FR32 fr32DstFrameRateDen;
6      RK_U32 u32BitRate; // RW; Range:[2000, 98000000]; average bitrate
7  } VENC_MJPEG_CBR_S;
```

【Members】

Member name	Description
u32SrcFrameRateNum	Numerator of data source frame rate.
u32SrcFrameRateDen	Denominator of data source frame rate.
fr32DstFrameRateNum	Numerator of target frame rate.
Numeratorfr32DstFrameRateDen	Denominator of target frame rate.
u32BitRate	Average bit rate, Values range: [2000, 98000000].

4.4.9 VENC_MJPEG_VBR_S

【Description】

Defines the VBR attribute structure of MJPEG encoding channel.

【Definition】

```

1  typedef struct rkVENC_MJPEG_VBR_S {
2      RK_U32 u32SrcFrameRateNum;
3      RK_U32 u32SrcFrameRateDen;
4      RK_FR32 fr32DstFrameRateNum;
5      RK_FR32 fr32DstFrameRateDen;
6      RK_U32 u32BitRate; // RW; Range:[2000, 98000000]; average bitrate
7  } VENC_MJPEG_VBR_S;
```

【Members】

Member name	Description
u32SrcFrameRateNum	Numerator of Numerator of data source frame rate.
u32SrcFrameRateDen	Denominator of data source frame rate.
fr32DstFrameRateNum	Numerator of target frame rate.
fr32DstFrameRateDen	Denominator of target frame rate.
u32BitRate	Average bit rate, Values range: [2000, 98000000].

4.4.10 VENC_H264_CBR_S

【Description】

Define the CBR attribute structure of H.264 encoding channel.

【Definition】

```

1  typedef struct rkVENC_H264_CBR_S {
2      RK_U32 u32Gop; // RW; Range:[1, 65536]; the interval of I Frame.
3      RK_U32 u32SrcFrameRateNum;
4      RK_U32 u32SrcFrameRateDen;
5      RK_FR32 fr32DstFrameRateNum;
6      RK_FR32 fr32DstFrameRateDen;
7      RK_U32 u32BitRate; // RW; Range:[2000, 980000000]; average bitrate
8  } VENC_H264_CBR_S;

```

【Members】

Member name	Description
u32Gop	I frame interval, Values range: [1, 65536].
u32SrcFrameRateNum	Numerator of data source frame rate.
u32SrcFrameRateDen	Denominator of data source frame rate.
fr32DstFrameRateNum	Numerator of target frame rate.
fr32DstFrameRateDen	Denominator of target frame rate.
u32BitRate	Average bit rate, Values range: [2000, 980000000], unit: bps

4.4.11 VENC_H264_VBR_S

【Description】

Define the VBR attribute structure of H.264 encoding channel.

【Definition】

```

1  typedef struct rkVENC_H264_VBR_S {
2      RK_U32 u32Gop; // RW; Range:[1, 65536]; the interval of ISLICE.
3      RK_U32 u32SrcFrameRateNum;
4      RK_U32 u32SrcFrameRateDen;
5      RK_FR32 fr32DstFrameRateNum;
6      RK_FR32 fr32DstFrameRateDen;
7      RK_U32 u32MaxBitRate; // RW; Range:[2000, 980000000];the max bitrate
8  } VENC_H264_VBR_S;

```

【Members】

Member name	Description
u32Gop	ISLICE interval, Values range: [1, 65536].
u32SrcFrameRateNum	Numerator of data source frame rate.
u32SrcFrameRateDen	Denominator of data source frame rate.
fr32DstFrameRateNum	Numerator of target frame rate.
fr32DstFrameRateDen	Denominator of target frame rate.
u32MaxBitRate	Maximum bit rate, Values range: [2000, 98000000], unit: bps

4.4.12 VENC_H265_CBR_S

【Description】

Define the CBR attribute structure of H.265 encoding channel.

【Definition】

```
1 | typedef struct rkVENC_H264_CBR_S VENC_H265_CBR_S;
```

【Related data types and interfaces】

[VENC_H264_CBR_S](#)

4.4.13 VENC_H265_VBR_S

【Description】

Define the VBR attribute structure of H.265 encoding channel.

【Definition】

```
1 | typedef struct rkVENC_H264_VBR_S VENC_H265_VBR_S;
```

【Related data types and interfaces】

[VENC_H264_VBR_S](#)

4.4.14 VENC_RC_MODE_E

【Description】

Define code rate controller mode of the encoding channel.

【Definition】

```
1 | typedef enum rkVENC_RC_MODE_E {
2 |     // H264
3 |     VENC_RC_MODE_H264CBR = 1,
4 |     VENC_RC_MODE_H264VBR,
```

```

5  VENC_RC_MODE_H264AVBR,
6  // MJPEG
7  VENC_RC_MODE_MJPEGCBR,
8  VENC_RC_MODE_MJPEGVBR,
9  // H265
10 VENC_RC_MODE_H265CBR,
11 VENC_RC_MODE_H265VBR,
12 VENC_RC_MODE_H265AVBR,
13 VENC_RC_MODE_BUTT,
14 } VENC_RC_MODE_E;

```

4.4.15 VENC_RC_ATTR_S

【Description】

Define code channel rate controller properties.

【Definition】

```

1  typedef struct rkVENC_RC_ATTR_S {
2      /* RW; the type of rc*/
3      VENC_RC_MODE_E enRcMode;
4      union {
5          VENC_H264_CBR_S stH264Cbr;
6          VENC_H264_VBR_S stH264Vbr;
7          VENC_H264_AVBR_S stH264Avbr;
8
9          VENC_MJPEG_CBR_S stMjpegCbr;
10         VENC_MJPEG_VBR_S stMjpegVbr;
11
12         VENC_H265_CBR_S stH265Cbr;
13         VENC_H265_VBR_S stH265Vbr;
14         VENC_H265_AVBR_S stH265Avbr;
15     };
16 } VENC_RC_ATTR_S;

```

【Members】

Member name	Description
enRcMode	Encoding protocol type.
stH264Cbr	Cbr mode attribute of H.264 protocol encoding channel.
stH264Vbr	Vbr mode attribute of H.264 protocol encoding channel.
stMjpegCbr	Cbr mode attribute of MJPEG protocol encoding channel.
stMjpegVbr	Vbr mode attribute of MJPEG protocol encoding channel.
stH265Cbr	Cbr mode attribute of H.265 protocol encoding channel.
stH265Vbr	Vbr mode attributes of H.265 protocol encoding channel.

【Related data types and interfaces】

[VENC_MJPEG_CBR_S](#)

[VENC_MJPEG_VBR_S](#)

[VENC_H264_CBR_S](#)

[VENC_H264_VBR_S](#)

[VENC_H265_CBR_S](#)

[VENC_H265_VBR_S](#)

[VENC_RC_MODE_E](#)

4.4.16 VENC_GOP_MODE_E

【Description】

Define Gop mode type.

【Definition】

```
1  typedef enum rkVENC_GOP_MODE_E {  
2      VENC_GOPMODE_NORMALP = 0,  
3      VENC_GOPMODE_TSVC,  
4      VENC_GOPMODE_SMARTP,  
5      VENC_GOPMODE_BUTT,  
6  } VENC_GOP_MODE_E;
```

【Notice】

For detailed mode description, please refer to [GOP Mode](#).

4.4.17 VENC_GOP_ATTR_S

【Description】

Define encoder GOP attribute structure.

【Definition】

```
1  typedef struct rkVENC_GOP_ATTR_S {  
2      VENC_GOP_MODE_E enGopMode;  
3      RK_U32 u32GopSize;  
4      RK_S32 s32IPQpDelta;  
5      RK_U32 u32BgInterval;  
6      RK_S32 s32ViQpDelta;  
7  } VENC_GOP_ATTR_S;
```

【Members】

Member name	Description
enGopMode	Encoding GOP type.
u32GopSize	Encoding GOP size.
s32IPQpDelta	QP difference between I frame and P frame.
u32BgInterval	Long-term reference frame interval.
s32ViQpDelta	The QP difference between virtual I frame and regular P frame.

【Related data types and interfaces】

[VENC_GOP_MODE_E](#)

4.4.18 VENC_CHN_ATTR_S

【Description】

VENC channel attribute structure.

【Definition】

```

1  typedef struct rkVENC_CHN_ATTR_S {
2      VENC_ATTR_S stVencAttr; // the attribute of video encoder
3      VENC_RC_ATTR_S stRcAttr; // the attribute of rate ctrl
4      VENC_GOP_ATTR_S stGopAttr; // the attribute of gop
5  } VENC_CHN_ATTR_S;
```

【Members】

Member name	Description
stVencAttr	Encoder attributes.
stRcAttr	Bit rate controller attributes.
stGopAttr	GOP attributes.

【Related data types and interfaces】

[VENC_ATTR_S](#)

[VENC_RC_ATTR_S](#)

[VENC_GOP_ATTR_S](#)

4.4.19 VENC_CHN_PARAM_S

【Description】

VENC channel parameter structure.

【Definition】

```

1  typedef struct rkVENC_CHN_PARAM_S {
2      RK_BOOL bColor2Grey;
3      RK_U32 u32Priority;
4      RK_U32 u32MaxStrmCnt;
5      RK_U32 u32PollWakeUpFrmCnt;
6      VENC_CROP_INFO_S stCropCfg;
7      VENC_FRAME_RATE_S stFrameRate;
8  } VENC_CHN_PARAM_S;

```

【Members】

Member name	Description
bColor2Grey	Color to gray is enabled
u32Priority	Channel priority, 0 1 2 3, non-preemptive
u32MaxStrmCnt	Maximum number of stream frames
u32PollWakeUpFrmCnt	The timeout threshold of channel obtaining code stream, the unit is the number of frames
stCropCfg	Crop parameters
stFrameRate	Frame rate control

【Related data types and interfaces】

[VENC_CROP_INFO_S](#)

[VENC_FRAME_RATE_S](#)

4.4.20 VENC_CROP_INFO_S

【Description】

VENC cropping parameter structure

【Definition】

```

1  typedef struct rkVENC_CROP_INFO_S {
2      RK_BOOL bEnable;
3      RECT_S stRect;
4  } VENC_CROP_INFO_S;

```

【Members】

Member name	Description
bEnable	Enable cropping
stRect	Rectangular frame

【Related data types and interfaces】

[RECT_S](#)

4.4.21 VENC_FRAME_RATE_S

【Description】

VENC frame rate information structure

【definition】

```
1  typedef struct rkVENC_FRAME_RATE_S {RK_S32  s32SrcFrmRate;
2  RK_S32  s32DstFrmRate;
3  } VENC_FRAME_RATE_S;
```

【Members】

Member name	Description
s32SrcFrmRate	Source frame rate
s32DstFrmRate	Target frame rate

4.4.22 VENC_PARAM_MJPEG_S

【Description】

MJPEG channel parameters.

【Definition】

```
1  typedef struct rkVENC_PARAM_MJPEG_S {
2      // reserved
3  } VENC_PARAM_MJPEG_S;
```

4.4.23 VENC_PARAM_H264_S

【Description】

H.264 channel parameters.

【Definition】

```
1  typedef struct rkVENC_PARAM_H264_S {
2      RK_U32 u32StepQp;
3      RK_U32 u32MaxQp; // RW; Range:[8, 51];the max QP value
4      RK_U32 u32MinQp; // RW; Range:[0, 48]; the min QP value,can not be larger
    than
5          // u32MaxQp
6      RK_U32 u32MaxIQp; // RW; max qp for i frame
7      RK_U32 u32MinIQp; // RW; min qp for i frame,can not be larger
8          // than u32MaxIQp
9      // RK_S32 s32MaxReEncodeTimes; /* RW; Range:[0, 3]; Range:max number
10     // of re-encode times.*/
11 } VENC_PARAM_H264_S;
```

【Members】

Member name	Description
u32StepQp	The step value of QP.
u32MaxQp	QP maximum value, values range [8, 51].
u32MinQp	QP minimum value, values range [0, 48], cannot be greater than u32MaxQp.
u32MaxIQp	QP maximum value of I frame.
u32MinIQp	QP minimum value of I frame.

4.4.24 VENC_PARAM_H265_S

【Description】

H.265 channel parameters.

【Definition】

```
1  typedef struct rkVENC_PARAM_H265_S {
2      RK_U32 u32StepQp;
3      RK_U32 u32MaxQp; // RW; Range:[8, 51];the max QP value
4      RK_U32 u32MinQp; // RW; Range:[0, 48];the min QP value ,can not be larger
    than
5          // u32MaxQp
6      RK_U32 u32MaxIQp; // RW; max qp for i frame
7      RK_U32 u32MinIQp; // RW; min qp for i frame,can not be larger than
    u32MaxIQp
8
9      // RK_S32 s32MaxReEncodeTimes; /* RW; Range:[0, 3]; Range:max number
10     // of re-encode times.*/
11     // RK_U32 u32DeltIpQp;
12 } VENC_PARAM_H265_S;
```

【Members】

Member name	Description
u32StepQp	The step value of QP.
u32MaxQp	QP maximum value, values range [8, 51].
u32MinQp	QP minimum value, values range [0, 48], cannot be greater than u32MaxQp.
u32MaxIQp	QP maximum value of I frame.
u32MinIQp	QP minimum value of I frame.

4.4.25 VENC_RC_PARAM_S

【Description】

The advanced parameters of the code rate controller of encoding channel.

【Definition】

```
1  typedef struct rkVENC_RC_PARAM_S {
2      RK_U32 u32ThrdI[RC_TEXTURE_THR_SIZE]; // [0, 255]
3      RK_U32 u32ThrdP[RC_TEXTURE_THR_SIZE]; // [0, 255]
4      RK_U32 u32RowQpDeltaI;                // [0, 10]
5      RK_U32 u32RowQpDeltaP;                // [0, 10]
6
7      // hierachy qp cfg
8      RK_BOOL bEnableHierQp;
9      RK_S32 s32HierQpDelta[RC_HEIR_SIZE];
10     RK_S32 s32HierFrameNum[RC_HEIR_SIZE];
11
12     RK_U32 s32FirstFrameStartQp; // RW; Start QP value of the first frame
13     union {
14         VENC_PARAM_H264_S stParamH264;
15         VENC_PARAM_H265_S stParamH265;
16         VENC_PARAM_MJPEG_S stParamMjpeg;
17     };
18 } VENC_RC_PARAM_S;
```

【Members】

Member name	Description
u32ThrdI	I-frame macroblock QP threshold [0,255]
u32ThrdP	P-frame macroblock QP threshold [0,255]
u32RowQpDeltaI	In the macroblock-level code rate control, the fluctuation amplitude value of the start Qp of each row of the macro block of the I frame relative to the frame start Qp. Value range: [0, 10].
u32RowQpDeltaP	In the macroblock-level code rate control, the fluctuation amplitude value of the starting Qp of each line of the P frame relative to the starting Qp of the frame. Value range: [0, 10].
bEnableHierQp	Whether QP layering is enabled. RK_TRUE: enable; RK_FALSE: disable.
s32HierQpDelta	The Qp of each layer frame relative to the 0th layer P frame, the value range: [-10, 10]. Default value: 0.
s32HierFrameNum	The number of frames in each layer. Value range: [0, 5].
s32FirstFrameStartQp	The starting Qp value of the first frame is disabled by default, CBR/VBR/AVBR is valid, the value range: [u32MaxIQp, u32MinIQp] and -1; if s32FirstFrameStartQp is -1, the starting QP of the first frame calculated internally by the encoder
stParamH264	H.264 channel rate control mode advanced parameters.
stParamH265	H.265 channel rate control mode advanced parameters.
stParamMjpeg	MJPEG channel rate control mode advanced parameters

【Related data types and interfaces】

[VENC_PARAM_H264_S](#)

[VENC_PARAM_H265_S](#)

[VENC_PARAM_MJPEG_S](#)

4.4.26 VENC_RC_QUALITY_E

【Description】

Enumerated type of encoding quality.

【Definition】

```

1  typedef enum rkVENC_RC_QUALITY_E {
2      VENC_RC_QUALITY_HIGHEST,
3      VENC_RC_QUALITY_HIGHER,
4      VENC_RC_QUALITY_HIGH,
5      VENC_RC_QUALITY_MEDIUM,
6      VENC_RC_QUALITY_LOW,
7      VENC_RC_QUALITY_LOWER,
8      VENC_RC_QUALITY_LOWEST,
9      VENC_RC_QUALITY_BUTT,
10 } VENC_RC_QUALITY_E;

```

4.4.27 VENC_ROI_ATTR_S

【Description】

ROI region parameters.

【Definition】

```

1  typedef struct rkVENC_ROI_ATTR_S {
2      RK_U32 u32Index; // RW; Range:[0, 7]; Index of an ROI. The system supports
3                      // indexes ranging from 0 to 7
4      RK_BOOL bEnable; // RW; Range:[0, 1]; Whether to enable this ROI
5      RK_BOOL bAbsQp; // RW; Range:[0, 1]; QP mode of an ROI.HI_FALSE: relative
6                      // QP.HI_TURE: absolute QP.
7      RK_S32 s32Qp; // RW; Range:[-51, 51]; QP value,only relative mode can QP
value
8                      // less than 0.
9      RK_BOOL bIntra; // flag of forced intra macroblock
10     RECT_S stRect; // RW; Region of an ROI
11 } VENC_ROI_ATTR_S;

```

【Members】

Member name	Description
u32Index	ROI index value, value range[0, 7].
bEnable	Whether to enable ROI.
bAbsQp	QP mode of ROI, Values range: [0, 1]. 1: absolute QP. 0: relative QP.
s32Qp	QP value, Values range: [-51, 51]. Only the relative mode can make QP value less than 0.
bIntra	The flag of macro block in mandatory frame.
stRect	ROI region.

【Related data types and interfaces】

[RECT_S](#)

4.4.28 OSD_REGION_ID_E

【Description】

OSD region ID enumeration type. The overlay priority increases from 0 to 7 gradually, and the OSD with the higher priority is located in the higher layer.

【Definition】

```
1  typedef enum rkOSD_REGION_ID_E {
2      REGION_ID_0 = 0,
3      REGION_ID_1,
4      REGION_ID_2,
5      REGION_ID_3,
6      REGION_ID_4,
7      REGION_ID_5,
8      REGION_ID_6,
9      REGION_ID_7
10 } OSD_REGION_ID_E;
```

4.4.29 OSD_REGION_INFO_S

【Description】

OSD region information.

【Definition】

```
1  typedef struct rkOSD_REGION_INFO_S {
2      OSD_REGION_ID_E enRegionId;
3      RK_U32 u32PosX;
4      RK_U32 u32PosY;
5      RK_U32 u32Width;
6      RK_U32 u32Height;
7      RK_U8 u8Inverse;
8      RK_U8 u8Enable;
9  } OSD_REGION_INFO_S;
```

【Members】

Member name	Description
enRegionId	OSD region index value, value range [0, 7].
u32PosX	X-axis coordinate of OSD region. Must be 16 aligned.
u32PosY	Y-axis coordinate of OSD region. Must be 16 aligned.
u32Width	Width of OSD region. Must be 16 aligned.
u32Height	Height of OSD region. Must be 16 aligned.
u8Inverse	Whether OSD region is inverted.
u8Enable	Whether OSD region is enabled.

【Related data types and interfaces】

[OSD_REGION_ID_E](#)

【Notice】

Each encoder channel (VENC CHN) supports 8 Regions (index: 0~7). Each Region can be configured as BitMap or Cover, but the two are mutually exclusive. For example, it is reasonable that Region[0] is BitMap and Region[1] is Cover; Region[0] cannot be configured as both BitMap and Cover.

4.4.30 OSD_PIXEL_FORMAT_E

【Description】

OSD pixel format type enumeration.

【Definition】

```
1  typedef enum rkOSD_PIXEL_FORMAT_E {
2      PIXEL_FORMAT_ARGB_8888 = 0,
3      PIXEL_FORMAT_BUTT // butt of enum
4  } OSD_PIXEL_FORMAT_E;
```

4.4.31 VENC_COLOR_TBL_S

【Description】

The palette structure.

【Definition】

```
1  #define VENC_RGN_COLOR_NUM 256
2  typedef struct rkVENC_COLOR_TBL {
3      // PixFormat: ARGB => A:bit31~bit24 R:bit23~bit16 G:bit15~bit8 B:bit7~bit0
4      RK_U32 u32ArgbTbl[VENC_RGN_COLOR_NUM];
5      // Enabling dichotomy will speed up the search for the color table,
6      // but will sort the color table set by the user in ascending order.
7      RK_BOOL bColorDichotomyEnable;
8  } VENC_COLOR_TBL_S;
```

【Members】

Member name	Description
u32ArgbTbl	Color palette, in ARGB8888 format, supported up to VENC_RGN_COLOR_NUM (256)
bColorDichotomyEnable	Turn on dichotomy to optimize query.

4.4.32 OSD_COLOR_PALETTE_BUF_S

【Description】

OSD buffer constructed by palette index.

【Definition】

```
1  typedef struct rkOSD_COLOR_PALETTE_BUF_S {
2      RK_U32 u32Width; /* buffer's width */
3      RK_U32 u32Height; /* buffer's height */
4      RK_VOID *pIdBuf; /* buffer of the color palette id */
5  } OSD_COLOR_PALETTE_BUF_S;
```

【Members】

Member name	Description
u32Width	Buffer width.
u32Height	Buffer height
pIdBuf	Buffer pointer constructed by 8bit palette index.

【Related data types and interfaces】

No.

4.4.33 BITMAP_S

【Description】

Bitmap information and data.

【Definition】

```
1  typedef struct rkBITMAP_S {
2      OSD_PIXEL_FORMAT_E enPixelFormat; /* Bitmap's pixel format */
3      RK_U32 u32Width; /* Bitmap's width */
4      RK_U32 u32Height; /* Bitmap's height */
5      RK_VOID *pData; /* Address of Bitmap's data */
6  } BITMAP_S;
```

【Members】

Member name	Description
enPixelFormat	The format of bitmap pixel.
u32Width	The width of Bitmap.
u32Height	The height of bitmap.
pData	The address of bitmap data.

【Related data types and interfaces】

[OSD_PIXEL_FORMAT_E](#)

4.4.34 COVER_INFO_S

【Description】

Privacy cover information.

【Definition】

```
1  typedef struct rkCOVER_INFO_S {
2      OSD_PIXEL_FORMAT_E enPixelFormat; /* Bitmap's pixel format */
3      RK_U32 u32Color; /* Covered region color */
4  } COVER_INFO_S;
```

【Members】

Member name	Description
enPixelFormat	Bitmap pixel format.
u32Color	Color of the covered region.

【Related data types and interfaces】

[OSD_PIXEL_FORMAT_E](#)

4.4.35 VENC_RECV_PIC_PARAM_S

【Description】

Receive image parameter structure pointer, is used to specify the number of image frames to be received.

【Definition】

```
1  typedef struct rkVENC_RECV_PIC_PARAM_S {
2      RK_S32 s32RecvPicNum;
3  } VENC_RECV_PIC_PARAM_S;
```

【Members】

Member name	Description
s32RecvPicNum	The number of image frames to be received.

4.4.36 VENC_JPEG_PARAM_S

【Description】

The advanced parameters of JPEG protocol encoding channel.

【Definition】

```
1  typedef struct rkVENC_JPEG_PARAM_S {
2      RK_U32 u32Qfactor; // 1-99
3      RK_U8 u8YQt[64]; // reserve
4      RK_U8 u8CbQt[64]; // reserve
5      RK_U8 u8CrQt[64]; // reserve
6      RK_U32 u32MCUPerECS; // reserve
7  } VENC_JPEG_PARAM_S;
```

【Members】

Member name	Description
u32Qfactor	Please refer to the RFC2435 protocol for details, Values range: [1, 99].
u8YQt	Reserved parameter, not implemented yet.
u8CbQt	Reserved parameter, not implemented yet.
u8CrQt	Reserved parameter, not implemented yet.
u32MCUPerECS	Reserved parameter, not implemented yet.

4.4.37 VENC_RESOLUTION_PARAM_S

【Description】

VENC resolution configuration structure.

【Definition】

```
1  typedef struct rkVENC_RESOLUTION_PARAM_S {
2      RK_U32 u32Width;
3      RK_U32 u32Height;
4      RK_U32 u32VirWidth;
5      RK_U32 u32VirHeight;
6  } VENC_RESOLUTION_PARAM_S;
```

【Members】

Member name	Description
u32Width	Width of buffer
u32Height	Height of buffer
u32VirWidth	Width of stride, usually it is the same as buffer_width. If u32VirWidth is greater than the buffer width, it must be 16 alignment.
u32VirHeight	Height of stride, usually it is the same as buffer_height. If u32VirHeight is greater than the buffer height, it must be 16 alignment.

4.4.38 VENC_CHN_STATUS_S

【Description】

Encoder status structure.

【Definition】

```

1  typedef struct rkVENC_CHN_STATUS_S {
2      RK_U32 u32LeftFrames; // The number of unencoded frames remaining in the
    input buffer.
3      RK_U32 u32TotalFrames; // The capacity of the input buffer.
4      RK_U32 u32LeftPackets; // The number of packets remaining in the output
    buffer that have not been taken.
5      RK_U32 u32TotalPackets; // The capacity of the output buffer.
6  } VENC_CHN_STATUS_S;
```

【Members】

Member name	Description
u32LeftFrames	Number of frames haven't been handled.
u32TotalFrames	The total number of frames to be handled.
u32LeftPackets	The number of handled but not output packets.
u32TotalPackets	The total number of output packets.

4.4.39 VENC_SUPERFRAME_CFG_S

【Description】

Super frame configuration structure.

【Definition】

```
1  typedef struct rkVENC_SUPERFRAME_CFG_S {
2      VENC_SUPERFRM_MODE_E enSuperFrmMode;
3      RK_U32 u32SuperIFrmBitsThr;
4      RK_U32 u32SuperPFrmBitsThr;
5      VENC_RC_PRIORITY_E enRcPriority;
6  } VENC_SUPERFRAME_CFG_S;
```

【Members】

Member name	Description
enSuperFrmMode	Super frame processing mode, the default mode is RKMEDIA_SUPERFRM_NONE RKMEDIA_SUPERFRM_NONE: turn off this function RKMEDIA_SUPERFRM_DISCARD: discard RKMEDIA_SUPERFRM_REENCODE: reprogram once
u32SuperIFrmBitsThr	I frame oversize threshold, the default is 0.
u32SuperPFrmBitsThr	P frame oversize threshold, the default is 0.
enRcPriority	Bit rate control priority, the default is RKMEDIA_VENC_RC_PRIORITY_BITRATE_FIRST RKMEDIA_VENC_RC_PRIORITY_BITRATE_FIRST: target bit rate gets high priority RKMEDIA_VENC_RC_PRIORITY_FRAMEBITS_FIRST: super frame value gets high priority

4.5 Error Code

Video encoding API error codes are shown in [Table 4-1](#):

Table 4-1 Video encoding API error codes

Error code	Macro definition	Description
20	RK_ERR_VENC_INVALID_CHNID	Channel ID is out of legal range
21	RK_ERR_VENC_ILLEGAL_PARAM	Parameter is out of legal range
22	RK_ERR_VENC_EXIST	Attempt to apply for or create an existing device, channel or resource
23	RK_ERR_VENC_UNEXIST	Attempt to use or destroy a device, channel or resource that does not exist
24	RK_ERR_VENC_NULL_PTR	There is a null pointer in the function parameter
25	RK_ERR_VENC_NOT_CONFIG	Not configured before use
26	RK_ERR_VENC_NOT_SUPPORT	Unsupported parameter or function
27	RK_ERR_VENC_NOT_PERM	This operation is not allowed, such as trying to modify static configuration parameters
28	RK_ERR_VENC_NOMEM	Virtual memory allocation fails, such as malloc fail
29	RK_ERR_VENC_NOBUF	Failed to allocate cache, such as the requested data buffer is too large
30	RK_ERR_VENC_BUF_EMPTY	No data in buffer
31	RK_ERR_VENC_BUF_FULL	Data in buffer is full
32	RK_ERR_VENC_NOTREADY	The system is not initialized or the corresponding module is not loaded
33	RK_ERR_VENC_BUSY	VENC system is busy

5. Video Decoding

5.1 Overview

VDEC module, is also called video decoding module. This module supports multi-channel decoding in real time , and each channel is decoded independently, and supports H264/H1265/MJPEG/JPEG decoding.

5.2 API Reference

5.2.1 RK_MPI_VDEC_CreateChn

【Description】

Create a decoding channel.

【Grammar】

RK_S32 RK_MPI_VDEC_CreateChn([VDEC_CHN](#) VdChn, const [VDEC_CHN_ATTR_S](#) *pstAttr);

【Parameter】

Parameter name	Description	Input/Output
VdChn	Decoding channel number. Values range: [0, VDEC_MAX_CHN_NUM).	Input
pstAttr	Decoding channel attribute pointer.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_vdec_test](#).

【Related topic】

No.

5.2.2 RK_MPI_VDEC_DestroyChn

【Description】

Destroy a decoding channel.

【Grammar】

RK_S32 RK_MPI_VDEC_DestroyChn([VDEC_CHN](#) VdChn);

【Parameter】

Parameter name	Description	Input/Output
VdChn	Decoding channel number. Values range: [0, VDEC_MAX_CHN_NUM].	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_vdec_test](#).

【Related topic】

No.

5.3 Type of Data

5.3.1 VDEC_MAX_CHN_NUM

【Description】

The total number of VDEC physical channels and extended channels.

【Definition】

```
1 | RV1109/RV1126:  
2 | #define VDEC_MAX_CHN_NUM 16
```

5.3.2 VDEC_CHN

【Description】

VDEC channel number.

【Definition】

```
1 | typedef RK_S32 VDEC_CHN;
```

5.3.3 VDEC_CHN_ATTR_S

【Description】

Decoding channel attribute structure.

【Definition】

```
1  typedef struct rkVDEC_CHN_ATTR_S {
2      CODEC_TYPE_E enCodecType; // RW; video type to be decoded
3      IMAGE_TYPE_E enImageType; // RW; image type to be outputed
4      VIDEO_MODE_E enMode; // RW; send by stream or by frame
5      VIDEO_DECODEC_MODE_E enDecodecMode; // RW; hardware or software
6      union {
7          VDEC_ATTR_VIDEO_S stVdecVideoAttr; // RW; structure with video
8      };
9  } VDEC_CHN_ATTR_S;
```

【Members】

Member name	Description
enCodecType	Decoding format.
enImageType	Output format after decoding.
enMode	Decoding input mode, support frame or stream.
enDecodecMode	Decoding mode, supports hardware or software decoding.
stVdecVideoAttr	Decoding video attribute structure. Reserved attribute and not supported currently.

【Related data types and interfaces】

[CODEC_TYPE_E](#)

[IMAGE_TYPE_E](#)

[VIDEO_MODE_E](#)

[VIDEO_DECODEC_MODE_E](#)

[VDEC_ATTR_VIDEO_S](#)

5.3.4 VIDEO_MODE_E

【Description】

Input mode, support frame or stream input,

【Definition】

```

1  typedef enum rkVIDEO_MODE_E {
2      VIDEO_MODE_STREAM = 0, // send by stream
3      VIDEO_MODE_FRAME, // send by frame
4      VIDEO_MODE_COMPAT, // Not Support now! One Frame supports multiple packets
5                          // sending.
6      // The current frame is considered to end when bEndOfFrame is equal to
7      RK_TRUE
8      VIDEO_MODE_BUTT
9  } VIDEO_MODE_E;

```

5.3.5 VIDEO_DECODEC_MODE_E

【Description】

Decoding mode.

【Definition】

```

1  typedef enum rkVIDEO_DECODEC_MODE_E {
2      VIDEO_DECODEC_SOFTWARE = 0,
3      VIDEO_DECODEC_HADRWARE,
4  } VIDEO_DECODEC_MODE_E;

```

5.3.6 VDEC_ATTR_VIDEO_S

【Description】

Decoding video attribute structure, reserved attribute, and not supported currently.

【Definition】

```

1  typedef struct rkVDEC_ATTR_VIDEO_S {
2
3  } VDEC_ATTR_VIDEO_S;

```

6. Motion Detection

6.1 Overview

The motion detection (MD) module will implement motion region detection and support up to 4096 regions.

6.2 Function Description

MD algorithm is implemented by software, and the input resolution should not be too large. The typical resolution is 640x480. The larger the resolution, the higher the CPU load.

6.3 API Reference

6.3.1 RK_MPI_ALGO_MD_CreateChn

【Description】

Create MD channel.

【Grammar】

RK_S32 RK_MPI_ALGO_MD_CreateChn([ALGO_MD_CHN](#) MdChn, const [ALGO_MD_ATTR_S](#) *pstChnAttr);

【Parameter】

Parameter name	Description	Input/Output
MdChn	Motion detection channel number. Values range: [0, ALGO_MD_MAX_CHN_NUM].	Input
pstChnAttr	Motion detection channel attributes.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_vi_md_test](#).

【Related topic】

[RK_MPI_ALGO_MD_DestroyChn](#)

6.3.2 RK_MPI_ALGO_MD_DestroyChn

【Description】

Destroy MD channel.

【Grammar】

RK_S32 RK_MPI_ALGO_MD_DestroyChn([ALGO_MD_CHN](#) MdChn);

【Parameter】

Parameter name	Description	Input/Output
MdChn	Motion detection channel number. Values range: [0, ALGO_MD_MAX_CHN_NUM).	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_vi_md_test](#).

【Related topic】

[RK_MPI_ALGO_MD_CreateChn](#)

6.3.3 RK_MPI_ALGO_MD_EnableSwitch

【Description】

Under the condition that MD channel is kept opened, switch MD dynamically .

【Grammar】

RK_S32 RK_MPI_ALGO_MD_EnableSwitch([ALGO_MD_CHN](#) MdChn, RK_BOOL bEnable)

【Parameter】

Parameter name	Description	Input/Output
MdChn	Motion detection channel number. Values range: [0, ALGO_MD_MAX_CHN_NUM).	Input
bEnable	MD switch.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_vi_md_test](#).

【Related topic】

No.

6.4 Type of Data

The data types about motion detection are defined as follows:

[ALGO_MD_MAX_CHN_NUM](#): define the maximum number of motion detection channels.

[ALGO_MD_ROI_RET_MAX](#): define the maximum number of ROI regions for each channel of motion detection.

[ALGO_MD_CHN](#): motion detection channel number.

[ALGO_MD_ATTR_S](#): define the attribute structure of a motion detection channel.

6.4.1 ALGO_MD_MAX_CHN_NUM

【Description】

Define the maximum number of motion detection channels.

【Definition】

```

1 | RV1109/RV1126:
2 | #define ALGO_MD_MAX_CHN_NUM VI_MAX_CHN_NUM

```

【Related data types and interfaces】

[VI_MAX_CHN_NUM](#)

6.4.2 ALGO_MD_ROI_RET_MAX

【Description】

Define the maximum number of ROI regions for each channel of motion detection.

【Definition】

```
1 | RV1109/RV1126:  
2 | #define ALGO_MD_ROI_RET_MAX 4096
```

6.4.3 ALGO_MD_CHN

【Description】

Motion detection channel number.

【Definition】

```
1 | typedef RK_S32 ALGO_MD_CHN;
```

6.4.4 ALGO_MD_ATTR_S

【Description】

Define the attribute structure of the motion detection channel.

【Definition】

```
1 | typedef struct rkALGO_MD_ATTR_S {  
2 |     IMAGE_TYPE_E imageType; // the type of input image  
3 |     RK_U32 u32Width;  
4 |     RK_U32 u32Height;  
5 |     RK_U16 u16RoiCnt; // RW; Range:[0, ALGO_MD_ROI_RET_MAX].  
6 |     RECT_S stRoiRects[ALGO_MD_ROI_RET_MAX];  
7 |     RK_U16 u16Sensitivity; // value 0(sys default) or [1-100].  
8 | } ALGO_MD_ATTR_S;
```

【Members】

Member name	Description
imageType	Input image type.
u32Width	The width of a motion detection region.
u32Height	The height of a motion detection region.
u16RoiCnt	Number of ROI regions, Values range: [0, ALGO_MD_ROI_RET_MAX].
stRoiRects	Structure array of ROI region attributes.
u16Sensitivity	Motion detection sensitivity, values range: [1, 100].

【Related data types and interfaces】

[RECT_S](#)

[IMAGE_TYPE_E](#)

[ALGO_MD_ROI_RET_MAX](#)

6.5 Error Code

Video encoding API error codes are shown in [Table 5-1](#):

Table 5-1 Video encoding API error codes

Error code	Macro definition	Description
70	RK_ERR_ALGO_MD_INVALID_CHNID	Channel ID is out of legal range
71	RK_ERR_ALGO_MD_BUSY	Motion detection system is busy
72	RK_ERR_ALGO_MD_EXIST	Attempting to apply for or create an existing device, channel or resource
73	RK_ERR_ALGO_MD_NOT_CONFIG	Not configured before use
74	RK_ERR_ALGO_MD_ILLEGAL_PARAM	Parameter out of legal range

7. Occlusion Detection

7.1 Overview

The Occlusion Detection module implements occlusion alarms and supports up to 10 regions.

7.2 Function Description

The OD algorithm is implemented by software, and the input resolution should not be too large. The typical resolution is 640x480. The larger the resolution, the higher the CPU load.

7.3 API Reference

7.3.1 RK_MPI_ALGO_OD_CreateChn

【Description】

Create an OD channel.

【Grammar】

RK_S32 RK_MPI_ALGO_OD_CreateChn([ALGO_OD_CHN](#) OdChn, const [ALGO_OD_ATTR_S](#) *pstChnAttr);

【Parameter】

Parameter name	Description	Input/Output
OdChn	Occlusion detection channel number. Values range: [0, ALGO_OD_MAX_CHN_NUM].	Input
pstChnAttr	Occlusion detection channel attributes.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_vi_od_test](#).

【Related topic】

[RK_MPI_ALGO_OD_DestroyChn](#)

7.3.2 RK_MPI_ALGO_OD_DestroyChn

【Description】

Destroy an OD channel.

【Grammar】

RK_S32 RK_MPI_ALGO_OD_DestroyChn([ALGO_OD_CHN](#) OdChn);

【Parameter】

Parameter name	Description	Input/Output
OdChn	Occlusion detection channel number. Values range: [0, ALGO_OD_MAX_CHN_NUM].	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_vi_od_test](#).

【Related topic】

[RK_MPI_ALGO_OD_CreateChn](#)

7.3.3 RK_MPI_ALGO_OD_EnableSwitch

【Description】

Operate OD dynamic switching under the condition of keeping the OD channel open.

【Grammar】

RK_S32 RK_MPI_ALGO_OD_EnableSwitch([ALGO_OD_CHN](#) OdChn, RK_BOOL bEnable);

【Parameter】

Parameter name	Description	Input/Output
OdChn	Occlusion detection channel number. Values range: [0, ALGO_OD_MAX_CHN_NUM).	Input
bEnable	OD switch.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_vi_od_test.](#)

【Related topic】

No.

7.4 Type of Data

The data types about occlusion detection are defined as follows:

[ALGO_OD_MAX_CHN_NUM](#): define the maximum number of occlusion detection channels.

[ALGO_OD_ROI_RET_MAX](#): define the maximum number of ROI regions for each channel of occlusion detection.

[ALGO_OD_CHN](#): occlusion detection channel number.

[ALGO_OD_ATTR_S](#): define the occlusion detection channel attribute structure.

7.4.1 ALGO_OD_MAX_CHN_NUM

【Description】

Define the maximum number of occlusion detection channels.

【Definition】

```
1 RV1109/RV1126:  
2 #define ALGO_OD_MAX_CHN_NUM VI_MAX_CHN_NUM
```

【Related data types and interfaces】

[VI_MAX_CHN_NUM](#)

7.4.2 ALGO_OD_ROI_RET_MAX

【Description】

Define the maximum number of ROI regions for each channel of occlusion detection.

【Definition】

```
1 RV1109/RV1126:  
2 #define ALGO_OD_ROI_RET_MAX 10
```

7.4.3 ALGO_OD_CHN

【Description】

Occlusion detection channel number.

【Definition】

```
1 | typedef RK_S32 ALGO_OD_CHN;
```

7.4.4 ALGO_OD_ATTR_S

【Description】

Define the occlusion detection channel attribute structure.

【Definition】

```
1 | typedef struct rkALGO_OD_ATTR_S {  
2 |     IMAGE_TYPE_E enImageType; // the type of input image  
3 |     RK_U32 u32Width;  
4 |     RK_U32 u32Height;  
5 |     RK_U16 u16RoiCnt; // RW; Range:[0, ALGO_OD_ROI_RET_MAX].  
6 |     RECT_S stRoiRects[ALGO_OD_ROI_RET_MAX];  
7 |     RK_U16 u16Sensitivity; // value 0(sys default) or [1-100].  
8 | } ALGO_OD_ATTR_S;
```

【Members】

Member name	Description
enImageType	Type of input image.
u32Width	Width of occlusion detection region.
u32Height	Height of the occlusion detection region.
u16RoiCnt	Number of ROI regions, Values range: [0, ALGO_OD_ROI_RET_MAX].
stRoiRects	Structure array of ROI region attributes.
u16Sensitivity	Occlusion detection sensitivity, values range: [1, 100].

【Related data types and interfaces】

[RECT_S](#)

[IMAGE_TYPE_E](#)

[ALGO_OD_ROI_RET_MAX](#)

7.5 Error Code

Video encoding API error codes are shown in [Table 6-1](#):

Table 6-1 Video encoding API Error Codes

Error code	Macro definition	Description
80	RK_ERR_ALGO_OD_INVALID_CHNID	Channel ID is out of legal range
81	RK_ERR_ALGO_OD_BUSY	Motion detection system is busy
82	RK_ERR_ALGO_OD_EXIST	Attempting to apply for or create an existing device, channel or resource
83	RK_ERR_ALGO_OD_NOT_CONFIG	Not configured before use
84	RK_ERR_ALGO_OD_ILLEGAL_PARAM	Parameter is out of legal range

8. Video Output

8.1 Overview

The VO module is used for video output management.

8.2 Function Description

The VO module is an package of DRM/KMS and supports multi-VOP and multi-layer display.

8.3 API Reference

8.3.1 RK_MPI_VO_CreateChn

【Description】

Create a VO channel.

【Grammar】

RK_S32 RK_MPI_VO_CreateChn([VO_CHN](#) VoChn, const [VO_CHN_ATTR_S](#) *pstAttr);

【Parameter】

Parameter name	Description	Input/Output
VoChn	VO channel number. Values range: [0, VO_MAX_CHN_NUM).	Input
pstAttr	VO channel attribute pointer.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

If RK_MPI_SYS_SendMediaBuffer is used to send MEDIA_BUFFER VO, MEDIA_BUFFER cannot be used directly after sending. Otherwise, the display content will be abnormal. It is because VO will constantly use the current received MEDIA_BUFFER to refresh VOP according to fps. If the content of MEDIA_BUFFER is changed during refresh, the display will be abnormal (blurred and tearing screen, etc.). This problem will be worked around by using the dual buffer mechanism.

The supported VO Plane format description:

	Primary	Overlay	Curse
RV1109	RGB	NV12	/
KR3399			

【Example】

No.

【Related topic】

[RK_MPI_VO_DestroyChn](#)

8.3.2 RK_MPI_VO_GetChnAttr

【Description】

Get VO channel parameters.

【Grammar】

RK_S32 RK_MPI_VO_GetChnAttr([VO_CHN](#) VoChn, const [VO_CHN_ATTR_S](#) *pstAttr);

【Parameter】

Parameter name	Description	Input/Output
VoChn	VO channel number. Values range: [0, VO_MAX_CHN_NUM).	Input
pstAttr	VO channel attribute pointer.	Output

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

[RK_MPI_VO_SetChnAttr](#)

8.3.3 RK_MPI_VO_SetChnAttr

【Description】

Set VO channel parameters.

【Grammar】

RK_S32 RK_MPI_VO_SetChnAttr([VO_CHN](#) VoChn, const [VO_CHN_ATTR_S](#) *pstAttr);

【Parameter】

Parameter name	Description	Input/Output
VoChn	VO channel number. Values range: [0, VO_MAX_CHN_NUM).	Input
pstAttr	VO channel attribute pointer.	Output

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

[RK_MPI_VO_GetChnAttr](#)

8.3.4 RK_MPI_VO_DestroyChn

【Description】

Destroy a VO channel.

【Grammar】

RK_S32 RK_MPI_VO_DestroyChn([VO_CHN](#) VoChn);

【Parameter】

Parameter name	Description	Input/Output
VoChn	VO channel number. Values range: [0, VO_MAX_CHN_NUM).	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

[RK_MPI_VO_CreateChn](#)

8.4 Type of Data

The video output data types are defined as follows:

[VO_MAX_CHN_NUM](#): the maximum number of video output channels.

[VO_CHN](#): video output channel number.

[VO_CHN_ATTR_S](#): video output attribute structure.

8.4.1 VO_MAX_CHN_NUM

【Description】

The maximum number of video output channels.

【Definition】

```
1 | RV1109/RV1126:  
2 | #define VO_MAX_CHN_NUM 2
```

8.4.2 VO_CHN

【Description】

Video output channel number.

【Definition】

```
1 | typedef RK_S32 VO_CHN;
```

8.4.3 VO_CHN_ATTR_S

【Description】

Video output attribute structure.

【Definition】

```
1 | typedef enum rk_VO_PLANE_TYPE_E {  
2 |     VO_PLANE_PRIMARY = 0,  
3 |     VO_PLANE_OVERLAY,  
4 |     VO_PLANE_CURSOR,  
5 |     VO_PLANE_BUTT  
6 | } VO_PLANE_TYPE_E;  
7 |  
8 | typedef struct rkVO_CHN_ATTR_S {  
9 |     const RK_CHAR *pcDevNode;  
10 |     RK_U16 u16ConIdx; // Connectors idx  
11 |     RK_U16 u16EncIdx; // Encoder idx  
12 |     RK_U16 u16CrtcIdx; // CRTC idx  
13 |     VO_PLANE_TYPE_E emPlaneType;
```

```

14     IMAGE_TYPE_E enImgType;
15     RK_U32 u32Width; // for select display mode. 0 for default mode.
16     RK_U32 u32Height; // for select display mode. 0 for default mode.
17     RK_U16 u16Fps; // for select display mode. 0 for default mode.
18     RK_U16 u16Zpos;
19     RECT_S stImgRect; // for input image rect. default equal mode[0]
20     RECT_S stDispRect; // for vop display rect. default equal mode[0]
21 } VO_CHN_ATTR_S;

```

【Members】

Member name	Description
pcDevNode	Node of the video output device .
u16ConIdx	conn index, is used to specify multiple display modes.
u16EncIdx	Encoder index, is used for multiple display mode designation.
u16CrtcIdx	CRTC index, is used to specify multiple display modes.
emPlaneType	Layer type of video output.
enImgType	The format of video output.
u32Width	Width of video output.
u32Height	Height of video output.
u16Fps	Frame rate of video output .
u16Zpos	Z-axis height of output layer.
stImgRect	Input image size parameters.
stDispRect	Output layer size parameter, is used for vop cropping.

【Related data types and interfaces】

[IMAGE_TYPE_E](#)

[RECT_S](#)

8.5 Error Code

Video output API error codes are shown in [Table 9-1](#):

Table 9-1 RGA API Error Codes

Error code	Macro definition	Description
110	RK_ERR_VO_INVALID_DEVID	Device ID is out of legal range
111	RK_ERR_VO_BUSY	Channel is busy
112	RK_ERR_VO_EXIST	Attempting to apply for or create an existing device, channel or resource
113	RK_ERR_VO_NOT_CONFIG	Not configured before use
114	RK_ERR_VO_TIMEOUT	Video output timeout
115	RK_ERR_VO_BUF_EMPTY	Video output buffer is empty
116	RK_ERR_VO_ILLEGAL_PARAM	Illegal parameter
117	RK_ERR_VO_NOTREADY	The system is not initialized

9. Audio

9.1 Overview

The AUDIO module includes four sub-modules: audio input, audio output, audio encoding, and audio decoding.

The functions of audio input and output module are implemented by the package of Linux ALSA audio interface.

The audio encoding and decoding module is implemented by the package of rkaduo audio encoder, supporting G711A/G711U/G726 /MP2.

9.2 Function Description

9.2.1 Audio Input and Output

Audio input AI and output AO, are used for connecting with Audio Codec to complete sound recording and playback. RKMedia AI/AO is depended on Linux ALSA devices. Different sound cards can use AI/AO interface as long as they support ALSA driver. Audio algorithms are integrated in AI, which can be turned on through configuration. After the algorithm is turned on, AI will output PCM data processed by the algorithm.

9.2.2 Audio Codec

Audio codec is implemented through the package of rkaduo, and supports G711A/G711U/G726/MP2 at present.

9.2.3 Audio Algorithm

It supports AEC algorithm used in intercom and ANR algorithm used in recording.

9.3 API Reference

9.3.1 Audio Input

9.3.1.1 RK_MPI_AI_EnableChn

【Description】

Open the AI channel.

【Grammar】

RK_S32 RK_MPI_AI_EnableChn([AI_CHN](#) AiChn);

【Parameter】

Parameter name	Description	Input/Output
AiChn	Audio input channel number. Values range: [0, AI_MAX_CHN_NUM).	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_ai_test](#).

【Related topic】

[RK_MPI_AI_DisableChn](#)

9.3.1.2 RK_MPI_AI_DisableChn

【Description】

Close the AI channel.

【Grammar】

RK_S32 RK_MPI_AI_DisableChn([AI_CHN](#) AiChn);

【Parameter】

Parameter name	Description	Input/Output
AiChn	Audio input channel number. Values range: [0, AI_MAX_CHN_NUM).	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_ai_test](#).

【Related topic】

[RK_MPI_AI_EnableChn](#)

9.3.1.3 RK_MPI_AI_SetChnAttr

【Description】

Set AO channel properties.

【Grammar】

RK_S32 RK_MPI_AI_SetChnAttr([AI_CHN](#) AiChn, const [AI_CHN_ATTR_S](#) *pstAttr);

【Parameter】

Parameter name	Description	Input/Output
AiChn	Audio input channel number. Values range: [0, AI_MAX_CHN_NUM].	Input
pstAttr	AI channel attribute pointer.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_ai_test](#).

【Related topic】

No.

9.3.1.4 RK_MPI_AI_SetVolume

【Description】

Set the volume.

【Grammar】

RK_S32 RK_MPI_AI_SetVolume([AI_CHN](#) AiChn, RK_S32 s32Volume);

【Parameter】

Parameter name	Description	Input/Output
AiChn	Audio input channel number. Values range: [0, AI_MAX_CHN_NUM].	Input
s32Volume	Volume of audio input channel. Values range: [0, 100].	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

No.

9.3.1.5 RK_MPI_AI_GetVolume

【Description】

Get the volume.

【Grammar】

RK_S32 RK_MPI_AI_GetVolume([AI_CHN](#) AiChn, RK_S32 *ps32Volume);

【Parameter】

Parameter name	Description	Input/Output
AiChn	Audio input channel number. Values range: [0, AI_MAX_CHN_NUM).	Input
ps32Volume	The volume of the audio input channel.	Output

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

No.

9.3.1.6 RK_MPI_AI_SetTalkVqeAttr

【Description】

Set attributes of AI voice quality enhancement function (Talk).

【Grammar】

RK_S32 RK_MPI_AI_SetTalkVqeAttr([AI_CHN](#) AiChn, [AI_TALKVQE_CONFIG_S](#)*pstVqeConfig);

【Parameter】

Parameter name	Description	Input/Output
AiChn	Audio input channel number. Values range: [0, AI_MAX_CHN_NUM).	Input
pstVqeConfig	The structure pointer of Audio input sound quality enhancement configuration.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_audio_test](#).

【Related topic】

No.

9.3.1.7 RK_MPI_AI_GetTalkVqeAttr

【Description】

Get related attributes of AI sound quality enhancement function (Talk) .

【Grammar】

RK_S32 RK_MPI_AI_GetTalkVqeAttr([AI_CHN](#) AiChn, [AI_TALKVQE_CONFIG_S](#)*pstVqeConfig);

【Parameter】

Parameter name	Description	Input/Output
AiChn	Audio input channel number. Values range: [0, AI_MAX_CHN_NUM).	Input
pstVqeConfig	The structure pointer of audio input sound quality enhancement configuration.	Output

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

No.

9.3.1.8 RK_MPI_AI_SetRecordVqeAttr

【Description】

Set attributes of AI sound quality enhancement function (Record).

【Grammar】

RK_S32 RK_MPI_AI_SetRecordVqeAttr([AI_CHN](#) AiChn, [AI_RECORDVQE_CONFIG_S](#)*pstVqeConfig);

【Parameter】

Parameter name	Description	Input/Output
AiChn	Audio input channel number. Values range: [0, AI_MAX_CHN_NUM).	Input
pstVqeConfig	The structure pointer of audio input sound quality enhancement configuration.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_audio_test](#).

【Related topic】

No.

9.3.1.9 RK_MPI_AI_GetRecordVqeAttr

【Description】

Get attributes of AI sound quality enhancement function (Record).

【Grammar】

RK_S32 RK_MPI_AI_GetRecordVqeAttr([AI_CHN](#) AiChn, [AI_RECORDVQE_CONFIG_S](#)*pstVqeConfig);

【Parameter】

Parameter name	Description	Input/Output
AiChn	Audio input channel number. Values range: [0, AI_MAX_CHN_NUM).	Input
pstVqeConfig	The structure pointer of audio input sound quality enhancement configuration.	Output

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

No.

9.3.1.10 RK_MPI_AI_EnableVqe

【Description】

Enable AI sound quality enhancement function.

【Grammar】

RK_S32 RK_MPI_AI_EnableVqe([AI_CHN](#) AiChn);

【Parameter】

Parameter name	Description	Input/Output
AiChn	Audio input channel number. Values range: [0, AI_MAX_CHN_NUM].	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_audio_test](#).

【Related topic】

No.

9.3.1.11 RK_MPI_AI_DisableVqe

【Description】

Disable AI audio quality enhancement function.

【Grammar】

RK_S32 RK_MPI_AI_DisableVqe([AI_CHN](#) AiChn);

【Parameter】

Parameter name	Description	Input/Output
AiChn	Audio input channel number. Values range: [0, AI_MAX_CHN_NUM).	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

No.

9.3.1.12 RK_MPI_AI_StartStream

【Description】

Start audio stream.

【Grammar】

RK_S32 RK_MPI_AI_StartStream([AI_CHN](#) AiChn);

【Parameter】

Parameter name	Description	Input/Output
AiChn	Audio input channel number. Values range: [0, AI_MAX_CHN_NUM].	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

No.

9.3.2 Audio Output

9.3.2.1 RK_MPI_AO_EnableChn

【Description】

Open the AO channel.

【Grammar】

RK_S32 RK_MPI_AO_EnableChn([AO_CHN](#) AoChn);

【Parameter】

Parameter name	Description	Input/Output
AoChn	Audio output channel number. Values range: [0, AO_MAX_CHN_NUM].	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_ao_test](#).

【Related topic】

[RK_MPI_AO_DisableChn](#)

9.3.2.2 RK_MPI_AO_DisableChn

【Description】

Close the AO channel.

【Grammar】

RK_S32 RK_MPI_AO_DisableChn([AO_CHN](#) AoChn);

【Parameter】

Parameter name	Description	Input/Output
AoChn	Audio output channel number. Values range: [0, AO_MAX_CHN_NUM].	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_ao_test.](#)

【Related topic】

[RK_MPI_AO_EnableChn](#)

9.3.2.3 RK_MPI_AO_SetChnAttr

【Description】

Set AO channel properties.

【Grammar】

RK_S32 RK_MPI_AO_SetChnAttr([AO_CHN](#) AoChn, const [AO_CHN_ATTR_S](#) *pstAttr);

【Parameter】

Parameter name	Description	Input/Output
AoChn	Audio output channel number. Values range: [0, AO_MAX_CHN_NUM].	Input
pstAttr	Audio output channel attribute pointer.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_ao_test.](#)

【Related topic】

No.

9.3.2.4 RK_MPI_AO_SetVolume

【Description】

Set volume.

【Grammar】

RK_S32 RK_MPI_AO_SetVolume([AO_CHN](#) AoChn, RK_S32 s32Volume);

【Parameter】

Parameter name	Description	Input/Output
AoChn	Audio output channel number. Values range: [0, AO_MAX_CHN_NUM).	Input
s32Volume	Volume of audio output channel. Values range: [0, 100].	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

No.

9.3.2.5 RK_MPI_AO_GetVolume

【Description】

Get the volume.

【Grammar】

RK_S32 RK_MPI_AO_GetVolume([AO_CHN](#) AoChn, RK_S32 *ps32Volume);

【Parameter】

Parameter name	Description	Input/Output
AoChn	Audio output channel number. Values range: [0, AO_MAX_CHN_NUM).	Input
ps32Volume	The volume of audio output channel.	Output

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

No.

9.3.2.6 RK_MPI_AO_SetVqeAttr

【Description】

Set properties of AO audio quality enhancement function.

【Grammar】

RK_S32 RK_MPI_AO_SetVqeAttr([AO_CHN](#) AoChn, [AO_VQE_CONFIG_S](#) *pstVqeConfig);

【Parameter】

Parameter name	Description	Input/Output
AoChn	Audio output channel number. Values range: [0, AO_MAX_CHN_NUM).	Input
pstVqeConfig	The structure pointer of audio output sound quality enhancement configuration.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_audio_test](#).

【Related topic】

No.

9.3.2.7 RK_MPI_AO_GetVqeAttr

【Description】

Get the properties about audio quality enhancement function of AO.

【Grammar】

RK_S32 RK_MPI_AO_GetVqeAttr([AO_CHN](#) AoChn, [AO_VQE_CONFIG_S](#) *pstVqeConfig);

【Parameter】

Parameter name	Description	Input/Output
AoChn	Audio output channel number. Values range: [0, AO_MAX_CHN_NUM].	Input
pstVqeConfig	Audio output sound quality enhancement configuration structure pointer.	Output

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

No.

9.3.2.8 RK_MPI_AO_EnableVqe

【Description】

Enable audio quality enhancement function of AO.

【Grammar】

RK_S32 RK_MPI_AO_EnableVqe([AO_CHN](#) AoChn);

【Parameter】

Parameter name	Description	Input/Output
AoChn	Audio output channel number. Values range: [0, AO_MAX_CHN_NUM].	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_audio_test](#).

【Related topic】

No.

9.3.2.9 RK_MPI_AO_DisableVqe

【Description】

Disable the audio quality enhancement function of AO.

【Grammar】

RK_S32 RK_MPI_AO_DisableVqe([AO_CHN](#) AoChn);

【Parameter】

Parameter name	Description	Input/Output
AoChn	Audio output channel number. Values range: [0, AO_MAX_CHN_NUM].	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

No.

9.3.2.10 RK_MPI_AO_QueryChnStat

【Description】

Get AO channel status information.

【Grammar】

RK_S32 RK_MPI_AO_QueryChnStat([AO_CHN](#) AoChn, [AO_CHN_STATE_S](#) *pstStatus);

【Parameter】

Parameter name	Description	Input/Output
AoChn	Audio output channel number. Values range: [0, AO_MAX_CHN_NUM].	Input
pstStatus	Structure pointer of status information.	Output

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

No.

9.3.2.11 RK_MPI_AO_ClearChnBuf

【Description】

Clear buffer data in the audio output channel.

【Grammar】

RK_S32 RK_MPI_AO_ClearChnBuf([AO_CHN](#) AoChn);

【Parameter】

Parameter name	Description	Input/Output
AoChn	Audio output channel number. Values range: [0, AO_MAX_CHN_NUM].	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

No.

【Related topic】

No.

9.3.3 Audio Encoding

9.3.3.1 RK_MPI_AENC_CreateChn

【Description】

Create audio encoding channels.

【Grammar】

RK_S32 RK_MPI_AENC_CreateChn([AENC_CHN](#) AencChn,const [AENC_CHN_ATTR_S](#) *pstAttr);

【Parameter】

Parameter name	Description	Input/Output
AencChn	Audio encoding channel number. Values range: [0, AENC_MAX_CHN_NUM].	Input
pstAttr	Audio encoding channel attribute pointer.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

The currently supported protocol is shown in [Audio Codec](#).

【Example】

[rkmedia_ai_aenc_test](#).

【Related topic】

[RK_MPI_AENC_DestroyChn](#)

9.3.3.2 RK_MPI_AENC_DestroyChn

【Description】

Destroy audio encoding channels.

【Grammar】

RK_S32 RK_MPI_AENC_DestroyChn([AENC_CHN](#) AencChn);

【Parameter】

Parameter name	Description	Input/Output
AencChn	Audio encoding channel number. Values range: [0, AENC_MAX_CHN_NUM].	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_ai_aenc_test](#).

【Related topic】

[RK_MPI_AENC_CreateChn](#)

9.3.4 Audio Decoding

9.3.4.1 RK_MPI_ADEC_CreateChn

【Description】

Create the audio decoding channel.

【Grammar】

RK_S32 RK_MPI_ADEC_CreateChn([ADEC_CHN](#) AdecChn, const [ADEC_CHN_ATTR_S](#) *pstAttr);

【Parameter】

Parameter name	Description	Input/Output
AdecChn	Audio decoding channel number. Values range: [0, ADEC_MAX_CHN_NUM].	Input
pstAttr	Audio decoding channel attribute pointer.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

The currently supported protocols are shown in [Audio Codec](#).

【Example】

[rkmedia_adec_ao_test](#).

【Related topic】

[RK_MPI_ADEC_DestroyChn](#)

9.3.4.2 RK_MPI_ADEC_DestroyChn

【Description】

Destroy audio decoding channels.

【Grammar】

RK_S32 RK_MPI_ADEC_DestroyChn([ADEC_CHN](#) AdecChn);

【Parameter】

Parameter name	Description	Input/Output
AdecChn	Audio decoding channel number. Values range: [0, ADEC_MAX_CHN_NUM].	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_adec_ao_test](#).

【Related topic】

[RK_MPI_ADEC_CreateChn](#)

9.4 Type of Data

9.4.1 Audio Input

The data types about audio input are defined as follows:

[AI_MAX_CHN_NUM](#): the maximum number of audio input channels.

[AI_CHN](#): audio input channel number.

[AI_CHN_ATTR_S](#): audio input attribute structure.

[AI_TALKVQE_CONFIG_S](#): audio input sound quality enhancement (Talk) configuration information structure.

[AI_RECORDVQE_CONFIG_S](#): audio input sound quality enhancement (Record) configuration information structure.

9.4.1.1 AI_MAX_CHN_NUM

【Description】

The maximum number of audio input channels.

【Definition】

```
1 | RV1109/RV1126:  
2 | #define AI_MAX_CHN_NUM 1
```

9.4.1.2 AI_CHN

【Description】

Audio input channel number.

【Definition】

```
1 | typedef RK_S32 AI_CHN;
```

9.4.1.3 AI_CHN_ATTR_S

【Description】

Audio input attribute structure.

【Definition】

```
1 | typedef enum rk_AI_LAYOUT_E {  
2 |     AI_LAYOUT_NORMAL = 0, /* Normal */  
3 |     AI_LAYOUT_MIC_REF, /* chanel layout: [mic:ref];*/  
4 |     AI_LAYOUT_REF_MIC, /* chanel layout: [ref:mic];*/  
5 |     AI_LAYOUT_BUTT  
6 | } AI_LAYOUT_E;  
7 |  
8 | typedef struct rkAI_CHN_ATTR_S {  
9 |     RK_CHAR *pcAudioNode;  
10 |     Sample_Format_E enSampleFormat;  
11 |     RK_U32 u32Channels;  
12 |     RK_U32 u32SampleRate;  
13 |     RK_U32 u32NbSamples;  
14 |     AI_LAYOUT_E enAiLayout;  
15 | } AI_CHN_ATTR_S;
```

【Members】

Member name	Description
pcAudioNode	The path of audio device node.
enSampleFormat	Sampling format.
u32Channels	Number of channels.
u32SampleRate	Sample rate.
u32NbSamples	The number of sampling points per frame.
enAiLayout	Input layout type

【Related data types and interfaces】

[Sample_Format_E](#)

9.4.1.4 AI_TALKVQE_CONFIG_S

【Description】

Audio input sound quality enhancement (Talk) configuration information structure.

【Definition】

```

1  #define AI_TALKVQE_MASK_AEC 0x1
2  #define AI_TALKVQE_MASK_ANR 0x2
3  #define AI_TALKVQE_MASK_AGC 0x4
4
5  typedef struct rkAI_TALKVQE_CONFIG_S {
6      RK_U32 u32OpenMask;
7      RK_S32 s32WorkSampleRate;
8      RK_S32 s32FrameSample;
9      RK_CHAR aParamFilePath[MAX_FILE_PATH_LEN];
10 } AI_TALKVQE_CONFIG_S;

```

【Members】

Member name	Description
u32OpenMask	Mask value enabled by each function of Talk Vqe. Currently supported AI_TALKVQE_MASK_AEC, AI_TALKVQE_MASK_ANR, AI_TALKVQE_MASK_AGC.
s32WorkSampleRate	Working sampling frequency.
s32FrameSample	Number of sampling points.
aParamFilePath	The path of parameter file.

【Related data types and interfaces】

[MAX_FILE_PATH_LEN](#)

9.4.1.5 AI_RECORDVQE_CONFIG_S

【Description】

Audio input sound quality enhancement (Record) configuration information structure.

【Definition】

```
1  #define AI_RECORDVQE_MASK_ANR 0x1
2
3  typedef struct rkAI_RECORDVQE_CONFIG_S {
4      RK_U32  u32OpenMask;
5      RK_S32  s32WorkSampleRate;
6      RK_S32  s32FrameSample;
7      struct {
8          RK_FLOAT fPostAddGain; /* post-gain 0*/
9          RK_FLOAT fGmin; /* spectral gain floor,unit:(dB),default:-30dB */
10         RK_FLOAT fNoiseFactor; /* noise suppression factor,default:0.98 */
11     } stAnrConfig;
12 } AI_RECORDVQE_CONFIG_S;
```

【Members】

Member name	Description
u32OpenMask	Mask value enabled by each function of Record Vqe. Currently supported AI_RECORDVQE_MASK_ANR.
s32WorkSampleRate	Working sampling frequency.
s32FrameSample	Number of sampling points.
stAnrConfig.fPostAddGain	ANR post-gain.
stAnrConfig.fGmin	The minimum value of ANR spectrum gain, the unit is dB, with default value of -30dB.
stAnrConfig.fNoiseFactor	ANR noise suppression coefficient, with default value of 0.98.

9.4.2 Audio Output

The data types about audio output are defined as follows:

[AO_MAX_CHN_NUM](#): the maximum number of audio output channels.

[AO_CHN](#): audio output channel number.

[AO_CHN_ATTR_S](#): audio output attribute structure.

[AO_VQE_CONFIG_S](#): audio output sound quality enhancement configuration information structure.

9.4.2.1 AO_MAX_CHN_NUM

【Description】

The maximum number of audio output channels.

【Definition】

```
1 | RV1109/RV1126:
2 | #define AO_MAX_CHN_NUM 1
```

9.4.2.2 AO_CHN

【Description】

Audio output channel number.

【Definition】

```
1 | typedef RK_S32 AO_CHN;
```

9.4.2.3 AO_CHN_ATTR_S

【Description】

Audio output attribute structure.

【Definition】

```
1 | typedef struct rkAO_CHN_ATTR_S {
2 |     RK_CHAR *pcAudioNode;
3 |     Sample_Format_E enSampleFormat;
4 |     RK_U32 u32Channels;
5 |     RK_U32 u32SampleRate;
6 |     RK_U32 u32NbSamples;
7 | } AO_CHN_ATTR_S;
```

【Members】

Member name	Description
pcAudioNode	The path of audio device node.
enSampleFormat	Sampling format.
u32Channels	Number of channels.
u32SampleRate	Sampling rate.
u32NbSamples	The number of sampling points per frame.

【Related data types and interfaces】

[Sample_Format_E](#)

9.4.2.4 AO_VQE_CONFIG_S

【Description】

Audio output audio quality enhancement configuration information structure.

【Definition】

```
1  #define AO_VQE_MASK_ANR 0x1
2  #define AO_VQE_MASK_AGC 0x2
3
4  typedef struct rkAO_VQE_CONFIG_S
5  {
6      RK_U32 u32OpenMask;
7      RK_S32 s32WorkSampleRate;
8      RK_S32 s32FrameSample;
9      RK_CHAR aParamFilePath[MAX_FILE_PATH_LEN];
10 } AO_VQE_CONFIG_S;
```

【Members】

Member name	Description
u32OpenMask	Mask value enabled by each function of AO Vqe. Currently supported AO_VQE_MASK_ANR, AO_VQE_MASK_AGC.
s32WorkSampleRate	Working sampling frequency.
s32FrameSample	Number of sampling points.
aParamFilePath	The path of parameter file.

【Related data types and interfaces】

[MAX_FILE_PATH_LEN](#)

9.4.2.5 AO_CHN_STATE_S

【Description】

AO channel status information structure.

【Definition】

```
1  typedef struct rkAO_CHN_STATE_S {
2      RK_U32 u32ChnTotalNum;
3      RK_U32 u32ChnFreeNum;
4      RK_U32 u32ChnBusyNum;
5  } AO_CHN_STATE_S;
```

【Members】

Member name	Description
u32ChnTotalNum	The total number of AO channels.
u32ChnFreeNum	Number of AO free channels.
u32ChnBusyNum	Channel number occupied by AO.

【Related data types and interfaces】

No.

9.4.3 Audio Encoding

The data types about audio coding are defined as follows:

[AENC_MAX_CHN_NUM](#): the maximum number of audio coding channels.

[AENC_CHN](#): audio coding channel number.

[AENC_ATTR_MP3_S](#): MP3 encoding protocol attribute structure.

[AENC_ATTR_MP2_S](#): MP2 encoding protocol attribute structure.

[AENC_ATTR_G711A_S](#): G.711A encoding protocol attribute structure.

[AENC_ATTR_G711U_S](#): G.711U encoding protocol attribute structure.

[AENC_ATTR_G726_S](#): G.726 encoding protocol attribute structure.

[AENC_CHN_ATTR_S](#): audio coding attribute structure.

9.4.3.1 AENC_MAX_CHN_NUM

【Description】

The maximum number of audio encoding channels.

【Definition】

```
1 | RV1109/RV1126:
2 | #define AENC_MAX_CHN_NUM 16
```

9.4.3.2 AENC_CHN

【Description】

Audio encoding channel number.

【Definition】

```
1 | typedef RK_S32 AENC_CHN;
```


9.4.3.3 AENC_ATTR_MP3_S

【Description】

MP3 encoding protocol attribute structure.

【Definition】

```
1  typedef struct rkAENC_ATTR_MP3_S {
2      RK_U32 u32Channels;
3      RK_U32 u32SampleRate; // 96000, 88200, 64000, 48000, 44100, 32000,
4                          // 24000, 22050, 16000, 12000, 11025, 8000, 7350
5  } AENC_ATTR_MP3_S;
```

【Members】

Member name	Description
u32Channels	Number of channels.
u32SampleRate	Sampling rate. The value range is: 96000, 88200, 64000, 48000, 44100, 32000, 24000, 22050, 16000, 12000, 11025, 8000, 7350.

9.4.3.4 AENC_ATTR_MP2_S

【Description】

MP2 encoding protocol attribute structure.

【Definition】

```
1  typedef struct rkAENC_ATTR_MP2_S {
2      RK_U32 u32Channels;
3      RK_U32 u32SampleRate; // 44100, 48000, 32000, 22050, 24000, 16000, 0
4  } AENC_ATTR_MP2_S;
```

【Members】

Member name	Description
u32Channels	Number of channels.
u32SampleRate	Sampling rate. The value range is: 44100, 48000, 32000, 22050, 24000, 16000, 0.

9.4.3.5 AENC_ATTR_G711A_S

【Description】

G.711A encoding protocol attribute structure.

【Definition】

```

1  typedef struct rkAENC_ATTR_G711A_S {
2      RK_U32 u32Channels;
3      RK_U32 u32SampleRate;
4      RK_U32 u32NbSample;
5  } AENC_ATTR_G711A_S;

```

【Members】

Member name	Description
u32Channels	Number of channels.
u32SampleRate	Sampling rate.
u32NbSample	The number of sampling points per frame.

9.4.3.6 AENC_ATTR_G711U_S

【Description】

G.711U encoding protocol attribute structure.

【Definition】

```

1  typedef struct rkAENC_ATTR_G711U_S {
2      RK_U32 u32Channels;
3      RK_U32 u32SampleRate;
4      RK_U32 u32NbSample;
5  } AENC_ATTR_G711U_S;

```

【Members】

Member name	Description
u32Channels	Number of channels.
u32SampleRate	Sampling rate.
u32NbSample	The number of sampling points per frame.

9.4.3.7 AENC_ATTR_G726_S

【Description】

G.726 encoding protocol attribute structure.

【Definition】

```

1  typedef struct rkAENC_ATTR_G726_S {
2      RK_U32 u32Channels;
3      RK_U32 u32SampleRate;
4  } AENC_ATTR_G726_S;

```

【Members】

Member name	Description
u32Channels	Number of channels.
u32SampleRate	Sampling rate.

9.4.3.8 AENC_CHN_ATTR_S

【Description】

Audio encoding attribute structure.

【Definition】

```
1  typedef struct rkAENC_CHN_ATTR_S {
2      CODEC_TYPE_E enCodecType; /*payload type */
3      RK_U32 u32Bitrate;
4      RK_U32 u32Quality;
5      union {
6          AENC_ATTR_MP3_S stAencMP3;
7          AENC_ATTR_MP2_S stAencMP2;
8          AENC_ATTR_G711A_S stAencG711A;
9          AENC_ATTR_G711U_S stAencG711U;
10         AENC_ATTR_G726_S stAencG726;
11     };
12 } AENC_CHN_ATTR_S;
```

【Members】

Member name	Description
enCodecType	Encoding protocol type.
u32Bitrate	Bit rate
u32Quality	Encoding quality
stAencMP3/stAencMP2/stAencG711A/stAencG711U/stAencG726	The structure of encoding protocol properties.

【Related data types and interfaces】

[CODEC_TYPE_E](#)

9.4.4 Audio Decoding

The data types about audio decoding are defined as follows:

[ADEC_MAX_CHN_NUM](#): the maximum number of audio decoding channels.

[ADEC_CHN](#): audio decoding channel number.

[ADEC_ATTR_MP3_S](#): MP3 decoding protocol attribute structure.

[ADEC_ATTR_MP2_S](#): MP2 decoding protocol attribute structure.

[ADEC_ATTR_G711A_S](#): G.711A decoding protocol attribute structure.

[ADEC_ATTR_G711U_S](#): G.711U decoding protocol attribute structure.

[ADEC_ATTR_G726_S](#): G.726 decoding protocol attribute structure.

[ADEC_CHN_ATTR_S](#): audio decoding attribute structure.

9.4.4.1 ADEC_MAX_CHN_NUM

【Description】

The maximum number of audio decoding channels.

【Definition】

```
1 | RV1109/RV1126:  
2 | #define ADEC_MAX_CHN_NUM 16
```

9.4.4.2 ADEC_CHN

【Description】

Audio decoding channel number.

【Definition】

```
1 | typedef RK_S32 ADEC_CHN;
```

9.4.4.3 ADEC_ATTR_MP3_S

【Description】

MP3 decoding protocol attribute structure.

【Definition】

```
1 | typedef struct rkADEC_ATTR_MP3_S {  
2 |     // reserved  
3 | } ADEC_ATTR_MP3_S;
```

9.4.4.4 ADEC_ATTR_MP2_S

【Description】

MP2 decoding protocol attribute structure.

【Definition】

```

1  typedef struct rkADEC_ATTR_MP2_S {
2      // reserved
3  } ADEC_ATTR_MP2_S;

```

9.4.4.5 ADEC_ATTR_G711A_S

【Description】

G.711A decoding protocol attribute structure.

【Definition】

```

1  typedef struct rkADEC_ATTR_G711A_S {
2      RK_U32 u32Channels;
3      RK_U32 u32SampleRate;
4  } ADEC_ATTR_G711A_S;

```

【Members】

Member name	Description
u32Channels	Number of channels.
u32SampleRate	Sampling rate.

9.4.4.6 ADEC_ATTR_G711U_S

【Description】

G.711U decoding protocol attribute structure.

【Definition】

```

1  typedef struct rkADEC_ATTR_G711U_S {
2      RK_U32 u32Channels;
3      RK_U32 u32SampleRate;
4  } ADEC_ATTR_G711U_S;

```

【Members】

Member name	Description
u32Channels	Number of channels.
u32SampleRate	Sampling rate.

9.4.4.7 ADEC_ATTR_G726_S

【Description】

G.726 decoding protocol attribute structure.

【Definition】

```
1  typedef struct rkADEC_ATTR_G726_S {
2      // reserved
3  } ADEC_ATTR_G726_S;
```

9.4.4.8 ADEC_CHN_ATTR_S

【Description】

Audio decoding attribute structure.

【Definition】

```
1  typedef struct rkADEC_CHN_ATTR_S {
2      CODEC_TYPE_E enCodecType;
3      union {
4          ADEC_ATTR_MP3_S stAdecMP3;
5          ADEC_ATTR_MP2_S stAdecMP2;
6          ADEC_ATTR_G711A_S stAdecG711A;
7          ADEC_ATTR_G711U_S stAdecG711U;
8          ADEC_ATTR_G726_S stAdecG726;
9      };
10 } ADEC_CHN_ATTR_S;
```

【Members】

Member name	Description
enCodecType	Encoding protocol type.
stAdecMP3/stAdecMP2/stAdecG711A/stAdecG711U/stAdecG726	The structures related to decoding protocol attribute.

【Related data types and interfaces】

[CODEC_TYPE_E](#)

9.5 Error Code

9.5.1 Audio Input Error Code

Audio input API error codes are shown in [Table 7-1](#):

Table 7-1 Audio input API Error Codes

Error code	Macro definition	Description
40	RK_ERR_AI_INVALID_DEVID	Invalid audio input device number
41	RK_ERR_AI_BUSY	Audio input system is busy
42	RK_ERR_AI_EXIST	Attempting to apply for or create an existing device, channel or resource
43	RK_ERR_AI_NOTOPEN	The system has not been opened, initialized or enabled
44	RK_ERR_AI_NOT_CONFIG	Not configured before use

9.5.2 Audio Output Error Code

Audio output API Error Codes are shown in [Table 7-2](#):

Table 7-2 Audio output API Error Codes

Error code	Macro definition	Description
50	RK_ERR_AO_INVALID_DEVID	Invalid audio output device number
51	RK_ERR_AO_BUSY	Audio output system is not initialized
52	RK_ERR_AO_NOTREADY	Attempting to apply for or create an existing device, channel or resource
53	RK_ERR_AO_NOTOPEN	System has not been opened, initialized or enabled
54	RK_ERR_AO_ILLEGAL_PARAM	Invalid parameter

9.5.3 Audio Encoding Error Code

Audio coding API error codes are shown in [Table 7-3](#):

Table 7-3 Audio coding API Error Codes

Error code	Macro definition	Description
60	RK_ERR_AENC_INVALID_CHNID	Invalid audio coding channel number
61	RK_ERR_AENC_BUSY	Audio coding system is busy
62	RK_ERR_AENC_CODEC_NOT_SUPPORT	Audio encoding is not supported
63	RK_ERR_AENC_NOTREADY	The channel is not ready

9.5.4 Audio Decoding Error Code

Audio decoding API Error codes are shown in [Table 7-4](#):

Table 7-3 Audio decoding API Error Codes

Error code	Macro definition	Description
100	RK_ERR_ADEC_INVALID_DEVID	Invalid audio decoding device number
101	RK_ERR_ADEC_BUSY	Audio decoding system is busy
102	RK_ERR_ADEC_CODEC_NOT_SUPPORT	Audio decoding is not supported

10. RGA

10.1 Overview

The RGA module is used for 2D image cropping, format conversion, scaling, rotation, image overlay, etc.

10.2 Function Description

The RGA channel in rkmedia only supports format conversion, zooming, cropping, and rotation functions. For image overlay, the librqa.so library needs to be called separately, please refer to docs/Linux/Multimedia/《Rockchip_Developer_Guide_Linux_RGA_CN.pdf》

10.3 API Reference

10.3.1 RK_MPI_RGA_CreateChn

【Description】

Create RGA channels.

【Grammar】

RK_S32 RK_MPI_RGA_CreateChn([RGA_CHN](#) RgaChn, [RGA_ATTR_S](#) *pstRgaAttr);

【Parameter】

Parameter name	Description	Input/Output
RgaChn	RGA channel number. Values range: [0, RGA_MAX_CHN_NUM].	Input
pstAttr	RGA channel attribute pointer.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

No.

【Example】

[rkmedia_vi_vo_test](#).

【Related topic】

[RK_MPI_RGA_DestroyChn](#)

10.3.2 RK_MPI_RGA_DestroyChn

【Description】

Destroy an RGA channel.

【Grammar】

RK_S32 RK_MPI_RGA_DestroyChn([RGA_CHN](#) RgaChn);

【Parameter】

Parameter name	Description	Input/Output
RgaChn	RGA channel number. Values range: [0, RGA_MAX_CHN_NUM].	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see Error Code for details.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

[rkmedia_vi_vo_test](#).

【Example】

No.

【Related topic】

[RK_MPI_RGA_CreateChn](#)

10.3.3 RK_MPI_RGA_RGN_SetBitMap

【Description】

Set the BitMap watermark.

【Grammar】

RK_S32 RK_MPI_RGA_RGN_SetBitMap([RGA_CHN](#) RgaChn, const [OSD_REGION_INFO_S](#) *pstRgnInfo, const [BITMAP_S](#) *pstBitmap);

【Parameter】

Parameter name	Description	Input/Output
RgaChn	RGA channel number. Value range: [0, RGA_MAX_CHN_NUM).	Input
pstRgnInfo	OSD area information.	Input
pstBitmap	Bitmap information and data.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None.

【Example】

None.

【Related topic】

None.

10.3.4 RK_MPI_RGA_GetChnRegionLuma

【Description】

Get the brightness of the channel area.

【Grammar】

RK_S32 RK_MPI_RGA_GetChnRegionLuma([RGA_CHN](#) RgaChn, const [VIDEO_REGION_INFO_S](#) *pstRegionInfo, RK_U64 *pu64LumaData, RK_S32 s32MilliSec) ;

【Parameter】

Parameter name	Description	Input/Output
RgaChn	RGA channel number. Value range: [0, RGA_MAX_CHN_NUM).	Input
pstRegionInfo	Region information. pstRegionInfo->pstRegion is the area attribute of the statistical area, that is, the starting position, width, and height; pstRegionInfo->u32RegionNum is the number of the statistical area.	Input
pu64LumaData	Memory pointer for receiving area brightness and statistical information. The memory size should be greater than or equal to sizeof(RK_U64)×pstRegionInfo->u32RegionNum.	Output
s32MilliSec	Timeout parameter s32MilliSec: less than or equal to 0 means blocking mode; greater than 0 means timeout mode, and the unit of timeout is milliseconds (ms).	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None.

【Example】

None.

【Related topic】

None.

10.3.5 RK_MPI_RGA_RGN_SetCover

【Description】

Set privacy cover.

【Grammar】

RK_S32 RK_MPI_RGA_RGN_SetCover([RGA_CHN](#) RgaChn, const [OSD_REGION_INFO_S](#) *pstRgnInfo, const [COVER_INFO_S](#) *pstCoverInfo);

【Parameter】

Parameter name	Description	Input/Output
RgaChn	RGA channel number. Value range: [0, RGA_MAX_CHN_NUM).	Input
pstRgnInfo	RGN area information.	Input
pstCoverInfo	Privacy cover information.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None.

【Example】

None.

【Related topic】

None

10.4 Type of Data

Data types related to RGA are defined as follows:

[RGA_MAX_CHN_NUM](#): the maximum number of RGA channels.

[RGA_CHN](#): RGA channel number.

[RGA_INFO_S](#): RGA region attribute structure.

[RGA_ATTR_S](#): RGA attribute structure.

10.4.1 RGA_MAX_CHN_NUM

【Description】

The maximum number of RGA channels.

【Definition】

```
1  RV1109/RV1126:
2  #define RGA_MAX_CHN_NUM 16
```

10.4.2 RGA_CHN

【Description】

RGA channel number.

【Definition】

```
1  typedef RK_S32 RGA_CHN;
```

10.4.3 RGA_INFO_S

【Description】

RGA region attribute structure.

【Definition】

```
1  typedef struct rkRGA_INFO_S {
2      IMAGE_TYPE_E imgType;
3      RK_U32 u32X;
4      RK_U32 u32Y;
5      RK_U32 u32Width;
6      RK_U32 u32Height;
7      RK_U32 u32HorStride; // horizontal stride
8      RK_U32 u32VirStride; // virtual stride
9  } RGA_INFO_S;
```

【Members】

Member name	Description
imgType	Image format type.
u32X	X-axis coordinate of RGA.
u32Y	Y-axis coordinate of RGA.
u32Width	The width of RGA.
u32Height	The height of RGA.
u32HorStride	Virtual width.
u32VirStride	Virtual height.

【Related data types and interfaces】

[IMAGE_TYPE_E](#)

10.4.4 RGA_ATTR_S

【Description】

RGA attribute structure.

【Definition】

```

1  typedef struct rkRGA_ATTR_S {
2      RGA_INFO_S stImgIn; // input image info
3      RGA_INFO_S stImgOut; // output image info
4      RK_U16 u16Rotaion; // support 0/90/180/270.
5      RK_BOOL bEnBufPool;
6      RK_U16 u16BufPoolCnt;
7      RGA_FLIP_E enFlip;
8  } RGA_ATTR_S;
```

【Members】

Member name	Description
stImgIn	Input image information.
stImgOut	Output image information.
u16Rotaion	Rotation angle. Values: 0, 90, 180, 270.
bEnBufPool	Enable buffer pool.
u16BufPoolCnt	Buffer pool count.
enFlip	Mirror control. Support horizontal mirroring, vertical mirroring, horizontal and vertical mirroring.

【Related data types and interfaces】

[RGA_INFO_S](#)

10.5 Error Code

RGA API error codes are shown in [Table 8-1](#):

Table 8-1 RGA API Error Codes

Error code	Macro definition	Description
90	RK_ERR_RGA_INVALID_CHNID	RGA input device number is invalid
91	RK_ERR_RGA_BUSY	RGA system is busy
92	RK_ERR_RGA_EXIST	Attempting to apply for or create an existing device, channel or resource
93	RK_ERR_RGA_NOT_CONFIG	Not configured before use
94	RK_ERR_RGA_ILLEGAL_PARAM	Illegal parameter
95	RK_ERR_RGA_NOTREADY	Device is not ready

11. Video Synthesis

11.1 Overview

The video synthesis VMIX module uses RGA to synthesize and splice multi-channel videos, and can bind the spliced video to VO display to realize multi-channel video synthesis display.

11.2 Function Description

The video synthesis VMIX module supports functions such as video synthesis, area drawing frame, sensitive area setting, channel display, channel hiding, and channel area brightness acquisition.

11.3 API Reference

11.3.1 RK_MPI_VMIX_CreateDev

【Description】

Create VMIX device

【Grammar】

RK_S32 RK_MPI_VMIX_CreateDev([VMIX_DEV](#) VmDev, [VMIX_DEV_INFO_S](#) *pstDevInfo);

【Parameter】

Parameter name	Description	Input/Output
VmDev	VMIX device number. Value range: [0, VMIX_MAX_DEV_NUM).	Input
pstDevInfo	VMIX device attribute pointer.	Input

【return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None

【Example】

[rkmedia_vmix_vo_test](#)

[rkmedia_vmix_vo_dvr_test](#)

【Related topic】

[RK_MPI_VMIX_DestroyDev](#)

11.3.2 RK_MPI_VMIX_DestroyDev

【Description】

Destroy VMIX device.

【Grammar】

RK_S32 RK_MPI_VMIX_DestroyDev([VMIX_DEV](#) VmDev);

【Parameter】

Parameter name	Description	Input/Output
VmDev	VMIX device number. Value range: [0, VMIX_MAX_DEV_NUM).	Input

【return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None

【Example】

[rkmedia_vmix_vo_test](#)

[rkmedia_vmix_vo_dvr_test](#)

【Related topic】

[RK_MPI_VMIX_CreateDev](#)

11.3.3 RK_MPI_VMIX_EnableChn

【Description】

Enable channels of VMIX devices

【Grammar】

RK_S32 RK_MPI_VMIX_EnableChn([VMIX_DEV](#) VmDev, [VMIX_CHN](#) VmChn);

【Parameter】

Parameter name	Description	Input/Output
VmDev	VMIX device number. Value range: [0, VMIX_MAX_DEV_NUM).	Input
VmChn	VMIX device channel number. Value range: [0, VMIX_MAX_CHN_NUM).	Input

【return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None

【Example】

[rkmedia_vmix_vo_test](#)

[rkmedia_vmix_vo_dvr_test](#)

【Related topic】

[RK_MPI_VMIX_DisableChn](#)

11.3.4 RK_MPI_VMIX_DisableChn

【Description】

Disable channels of VMIX devices

【Grammar】

RK_S32 RK_MPI_VMIX_DisableChn([VMIX_DEV](#) VmDev, [VMIX_CHN](#) VmChn);

【Parameter】

Parameter name	Description	Input/Output
VmDev	VMIX device number. Value range: [0, VMIX_MAX_DEV_NUM).	Input
VmChn	VMIX device channel number. Value range: [0, VMIX_MAX_CHN_NUM).	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None

【Example】

[rkmedia_vmix_vo_test](#)

[rkmedia_vmix_vo_dvr_test](#)

【Related topic】

[RK_MPI_VMX_EnableChn](#)

11.3.5 RK_MPI_VMX_SetLineInfo

【Description】

Set VMIX frame drawing information.

【Grammar】

RK_S32 RK_MPI_VMX_SetLineInfo([VMIX_DEV](#) VmDev, [VMIX_CHN](#) VmChn, [VMIX_LINE_INFO_S](#) VmLine);

【Parameter】

Parameter name	Description	Input/Output
VmDev	VMIX device number. Value range: [0, VMIX_MAX_DEV_NUM).	Input
VmChn	VMIX device channel number. Value range: [0, VMIX_MAX_CHN_NUM).	Input
VmLine	VMIX frame drawing information.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None

【Example】

[rkmedia_vmix_vo_test](#)

[rkmedia_vmix_vo_dvr_test](#)

【Related topic】

None

11.3.6 RK_MPI_VMIX_ShowChn

【Description】

Display the channel of VMIX device.

【Grammar】

RK_MPI_VMIX_ShowChn([VMIX_DEV](#) VmDev, [VMIX_CHN](#) VmChn);

【Parameter】

Parameter name	Description	Input/Output
VmDev	VMIX device number. Value range: [0, VMIX_MAX_DEV_NUM).	Input
VmChn	VMIX device channel number. Value range: [0, VMIX_MAX_CHN_NUM).	Input

【return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None

【Example】

[rkmedia_vmix_vo_test](#)

[rkmedia_vmix_vo_dvr_test](#)

【Related topic】

[RK_MPI_VMIX_HideChn](#)

11.3.7 RK_MPI_VMIX_HideChn

【Description】

Hide the channel of the VMIX device.

【Grammar】

RK_S32 RK_MPI_VMIX_HideChn([VMIX_DEV](#) VmDev, [VMIX_CHN](#) VmChn);

【Parameter】

Parameter name	Description	Input/Output
VmDev	VMIX device number. Value range: [0, VMIX_MAX_DEV_NUM).	Input
VmChn	VMIX device channel number. Value range: [0, VMIX_MAX_CHN_NUM).	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None

【Example】

[rkmedia_vmix_vo_test](#)

[rkmedia_vmix_vo_dvr_test](#)

【Related topic】

[RK_MPI_VMIX_ShowChn](#)

11.3.8 RK_MPI_VMIX_RGN_SetBitMap

【Description】

Set the BitMap watermark.

【Grammar】

RK_S32 RK_MPI_VMIX_RGN_SetBitMap([VMIX_DEV](#) VmDev, [VMIX_CHN](#) VmChn, const [OSD_REGION_INFO_S](#) *pstRgnInfo, const [BITMAP_S](#) *pstBitmap);

【Parameter】

Parameter name	Description	Input/Output
VmDev	VMIX device number. Value range: [0, VMIX_MAX_DEV_NUM).	Input
VmChn	VMIX device channel number. Value range: [0, VMIX_MAX_CHN_NUM).	Input
pstRgnInfo	OSD area information.	Input
pstBitmap	Bitmap information and data.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None

【Example】

None

【Related topic】

None

11.3.9 RK_MPI_VMIX_GetRegionLuma

【Description】

Get region exposure of a VMIX device

【Grammar】

RK_S32 RK_MPI_VMIX_GetRegionLuma([VMIX_DEV](#) VmDev, const [VIDEO_REGION_INFO_S](#) *pstRegionInfo, RK_U64 *pu64LumaData, RK_S32 s32MilliSec);

【Parameter】

Parameter name	Description	Input/Output
VmDev	VMIX device number. Value range: [0, VMIX_MAX_DEV_NUM).	Input
pstRegionInfo	Region information: pstRegionInfo->pstRegion is the region attribute of the statistical region , that is, the starting position, width, and height; pstRegionInfo->u32RegionNum is the number of the statistical region.	Input
pu64LumaData	Memory pointer for receiving area brightness and statistical information. The memory size should be greater than or equal to sizeof(RK_U64)×pstRegionInfo->u32RegionNum.	Output
s32MilliSec	Timeout parameter s32MilliSec: less than or equal to 0 means blocking mode; greater than 0 means timeout mode, and the unit of timeout is milliseconds (ms).	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None

【Example】

None

【Related topic】

None

11.3.10 RK_MPI_VMIX_GetChnRegionLuma

【Description】

Get the channel region exposure of a VMIX device

【Grammar】

RK_S32 RK_MPI_VMIX_GetChnRegionLuma([VMIX_DEV](#) VmDev, [VMIX_CHN](#) VmChn, const [VIDEO_REGION_INFO_S](#) *pstRegionInfo, RK_U64 *pu64LumaData, RK_S32 s32MilliSec);

【Parameter】

Parameter name	Description	Input/Output
VmDev	VMIX device number. Value range: [0, VMIX_MAX_DEV_NUM).	Input
VmChn	VMIX device channel number. Value range: [0, VMIX_MAX_CHN_NUM).	Input
pstRegionInfo	Region information: pstRegionInfo->pstRegion is the region attribute of the statistical area, that is, the starting position, width, and height; pstRegionInfo->u32RegionNum is the number of the statistical region.	Input
pu64LumaData	Memory pointer for receiving area brightness and statistical information. The memory size should be greater than or equal to sizeof(RK_U64)×pstRegionInfo->u32RegionNum.	Output
s32MilliSec	Timeout parameter s32MilliSec: less than or equal to 0 means blocking mode; greater than 0 means timeout mode, and the unit of timeout is milliseconds (ms).	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None

【Example】

[rkmedia_vmix_vo_dvr_test](#)

【Related topic】

None

11.3.11 RK_MPI_VMIX_RGN_SetCover

【Description】

Privacy cover.

【Grammar】

RK_S32 RK_MPI_VMIX_RGN_SetCover([VMIX_DEV](#) VmDev, [VMIX_CHN](#) VmChn, const [OSD_REGION_INFO_S](#) *pstRgnInfo, const [COVER_INFO_S](#) *pstCoverInfo);

【Parameter】

Parameter name	Description	Input/Output
VmDev	VMIX device number. Value range: [0, VMIX_MAX_DEV_NUM).	Input
VmChn	VMIX device channel number. Value range: [0, VMIX_MAX_CHN_NUM).	Input
pstRgnInfo	RGN area information.	Input
pstCoverInfo	Privacy covering information.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None

【Example】

[rkmedia_vmix_vo_dvr_test](#)

【Related topic】

None

11.4 Type of Data

VMIX related data types are defined as follows:

[VMIX_DEV](#): VMIX device number

[VMIX_CHN](#): The channel number of the VMIX device

[VMIX_DEV_INFO_S](#): VMIX device information structure

[VMIX_CHN_INFO_S](#): VMIX device channel information structure

[VMIX_LINE_INFO_S](#): VMIX frame drawing structure

[VMIX_MAX_CHN_NUM](#): Maximum channel value of VMIX device

[VMIX_MAX_DEV_NUM](#): Maximum value of VMIX device

[VMIX_MAX_LINE_NUM](#): The maximum value of the channel frame of the VMIX device

11.4.1 VMIX_DEV

【Description】

VMIX device number.

【Definition】

```
1 | typedef RK_S32 VMIX_DEV;
```

11.4.2 VMIX_CHN

【Description】

The channel number of the VMIX device.

【Definition】

```
1 | typedef RK_S32 VMIX_CHN;
```

11.4.3 VMIX_DEV_INFO_S

【Description】

VMIX device information structure.

【Definition】

```
1 | typedef struct rkVMIX_DEV_INFO_S {  
2 |     RK_U16 u16ChnCnt;  
3 |     RK_U16 u16Fps;  
4 |     RK_U32 u32ImgWidth;  
5 |     RK_U32 u32ImgHeight;  
6 |     IMAGE_TYPE_E enImgType;  
7 |     VMIX_CHN_INFO_S stChnInfo[VMIX_MAX_CHN_NUM];  
8 | } VMIX_DEV_INFO_S;
```

【Members】

Member name	Description
u16ChnCnt	Number of channels
u16Fps	Frame rate
u32ImgWidth	The width of synthetic image
u32ImgHeight	The height of synthetic image
enImgType	Image format type
stChnInfo	Channel information

【Related data types and interfaces】

[IMAGE_TYPE_E](#)

[VMIX_CHN_INFO_S](#)

11.4.4 VMIX_CHN_INFO_S

【Description】

VMIX device channel information structure

【Definition】

```
1  typedef struct rkVMIX_CHN_INFO_S {
2      IMAGE_TYPE_E enImgInType;
3      IMAGE_TYPE_E enImgOutType;
4      RECT_S stInRect;
5      RECT_S stOutRect;
6  } VMIX_CHN_INFO_S;
```

【Members】

Member name	Description
enImgInType	format type of input image
enImgOutType	format type of output image
stInRect	Input image region
stOutRect	Output image region

【Related data types and interfaces】

[IMAGE_TYPE_E](#)

[RECT_S](#)

11.4.5 VMIX_LINE_INFO_S

【Description】

VMIX frames drawing structure

【Definition】

```
1  typedef struct rkVMIX_LINE_INFO_S {
2      RK_U32 u32LineCnt;
3      RK_U32 u32Color;
4      RECT_S stLines[VMIX_MAX_LINE_NUM];
5  } VMIX_LINE_INFO_S;
```

【Members】

Member name	Description
u32LineCnt	Number of frames
u32Color	Frame color
stLines	Frame region

【Related data types and interfaces】

[RECT_S](#)

11.4.6 VMIX_MAX_CHN_NUM

【Description】

Maximum channel value of VMIX device

【Definition】

```
1 | #define VMIX_MAX_CHN_NUM 16
```

11.4.7 VMIX_MAX_DEV_NUM

【Description】

Maximum value of VMIX device

【Definition】

```
1 | #define VMIX_MAX_DEV_NUM 16
```

11.4.8 VMIX_MAX_LINE_NUM

【Description】

The maximum value of the channel frame of the VMIX device

【Definition】

```
1 | #define VMIX_MAX_LINE_NUM 64
```

11.5 Error Code

VMIX API error codes are shown in [Table 11-1](#):

Table 11-1 VMIX API error codes

Error code	Macro definition	Description
130	RK_ERR_VMIX_INVALID_DEVID	VMIX input device number is invalid
131	RK_ERR_VMIX_INVALID_CHNID	VMIX input device channel number is invalid
132	RK_ERR_VMIX_BUSY	VMIX system is busy
133	RK_ERR_VMIX_EXIST	Attempting to apply for or create an existing device, channel or resource
134	RK_ERR_VMIX_ILLEGAL_PARAM	Illegal parameter
135	RK_ERR_VMIX_NOTREADY	VMIX device is not ready
136	RK_ERR_VMIX_NOTOPEN	The channel of the VMIX device is not opened

12. Video Package

12.1 Overview

The video package module is used to pack the video code stream (H264/H265/MJPEG, etc.) and audio code stream (MP2, G711, etc.) input from the previous stage into MP4/TS and other types of media files.

12.2 Function Description

It is supported two formats of MP4/TS packaging; support automatic file naming, callback function file naming methods; support event management; support state management.

12.3 API Description

12.3.1 RK_MPI_MUXER_EnableChn

【Description】

Enable the packer channel.

【Grammar】

RK_S32 RK_MPI_MUXER_EnableChn([MUXER_CHN](#) VmChn, [MUXER_CHN_ATTR_S](#) *pstAttr);

【Parameter】

Parameter name	Description	Input/Output
VmChn	MUXER channel number. Value range: [0, VMIX_MAX_DEV_NUM).	Input
pstAttr	Packer attribute configuration.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None

【Example】

[rkmedia_muxer_test](#)

【Related topic】

None

12.3.2 RK_MPI_MUXER_DisableChn

【Description】

Disable the packer channel.

【Grammar】

RK_S32 RK_MPI_MUXER_DisableChn([MUXER_CHN](#) VmChn);

【Parameter】

Parameter name	Description	Input/Output
VmChn	MUXER channel number. Value range: [0, VMIX_MAX_DEV_NUM).	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None

【Example】

[rkmedia_muxer_test](#)

【Related topic】

None

12.3.3 RK_MPI_MUXER_DisableChn

【Description】

Disable the packer channel.

【Grammar】

RK_S32 RK_MPI_MUXER_DisableChn([MUXER_CHN](#) VmChn);

【Parameter】

Parameter name	Description	Input/Output
VmChn	MUXER channel number. Value range: [0, VMIX_MAX_DEV_NUM).	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None

【Example】

[rkmedia_muxer_test](#)

【Related topic】

None

12.3.4 RK_MPI_MUXER_Bind

【Description】

The packer channel is bound to a special interface.

【Grammar】

RK_S32 RK_MPI_MUXER_Bind(const MPP_CHN_S *pstSrcChn, const [MUXER_CHN_S](#) *pstDestChn);

【Parameter】

Parameter name	Description	Input/Output
pstSrcChn	Source channel information	Input
pstDestChn	Muxer channel information	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None

【Example】

[rkmedia_muxer_test](#)

【Related topic】

None

12.3.5 RK_MPI_MUXER_UnBind

【Description】

The packer channel unbinds the special interface.

【Grammar】

RK_S32 RK_MPI_MUXER_UnBind(const MPP_CHN_S *pstSrcChn, const [MUXER_CHN_S](#) *pstDestChn);

【Parameter】

Parameter name	Description	Input/Output
pstSrcChn	Source channel information	Input
pstDestChn	Muxer channel information	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None

【Example】

[rkmedia_muxer_test](#)

【Related topic】

None

12.3.6 RK_MPI_MUXER_StreamStart

【Description】

The packer starts to receive the stream and pack it into the corresponding media file.

【Grammar】

RK_S32 RK_MPI_MUXER_StreamStart([MUXER_CHN](#) VmChn);

【Parameter】

Parameter name	Description	Input/Output
VmChn	MUXER channel number	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None

【Example】

[rkmedia_muxer_test](#)

【Related topic】

None

12.3.7 RK_MPI_MUXER_StreamStop

【Description】

The packer stops receiving stream, and the current stream is immediately packed into a complete media file (duration <= preset duration).

【Grammar】

RK_S32 RK_MPI_MUXER_StreamStop([MUXER_CHN](#) VmChn);

【Parameter】

Parameter name	Description	Input/Output
VmChn	MUXER channel number	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None

【Example】

【Related topic】

None

12.4 Type of Data

12.4.1 MUXER_CHN

【Description】

MUXER channel number.

【Definition】

```
1 | typedef RK_S32 MUXER_CHN;
```

12.4.2 MUXER_MAX_CHN_NUM

【Description】

The upper limit of the number of MUXER channels.

【Definition】

```
1 | #define MUXER_MAX_CHN_NUM 16
```

12.4.3 MUXER_CHN_S

【Description】

MUXER channel binding parameters.

【Definition】

```
1 | typedef struct rkMUXER_CHN_S {  
2 |     MOD_ID_E enModId;  
3 |     MUXER_CHN_TYPE_E enChnType;  
4 |     RK_S32 s32ChnId;  
5 | } MUXER_CHN_S;
```

【Members】

Member name	Description
enModId	Packer Module ID
enChnType	Channel type, used to distinguish "audio"/"video"
s32ChnId	Packer Channel ID

12.4.4 MUXER_CHN_ATTR_S

【Description】

MUXER channel attribute configuration.

【Definition】

```
1  typedef struct rkMUXER_CHN_ATTR_S {
2      MUXER_MODE_E enMode;
3      MUXER_TYPE_E enType;
4      union {
5          RK_CHAR *pcOutputFile;
6          MUXER_SPLIT_ATTR_S stSplitAttr;
7      };
8
9      // video stream params
10     MUXER_VIDEO_STREAM_PARAM_S stVideoStreamParam;
11     // audio stream params
12     MUXER_AUDIO_STREAM_PARAM_S stAudioStreamParam;
13 } MUXER_CHN_ATTR_S;
```

【Members】

Member name	Description
enMode	package mode: automatic split mode/single video mode
enType	Package type: MP4/TS
pcOutputFile	Video output path in single video mode
stSplitAttr	File naming configuration for automatic split mode
stVideoStreamParam	Video stream attribute information
stAudioStreamParam	Audio stream attribute information

12.5 Error Code

Table 12-1 MUXER API error codes

Error code	Macro definition	Description
140	RK_ERR_MUXER_INVALID_CHNID	MUXER input channel number is invalid
141	RK_ERR_MUXER_BUSY	Device is occupied
142	RK_ERR_MUXER_EXIST	MUXER channel has been opened
143	RK_ERR_MUXER_ILLEGAL_PARAM	Illegal parameter
144	RK_ERR_MUXER_NOTREADY	MUXER channel has not been opened yet
145	RK_ERR_MUXER_NOTSUPPORT	Operation not allowed

13. One in Four out Video

13.1 Overview

Video with one Input Four Output (VP) uses ISPP module to realize a video input from the rkispp_input_image node as video input, and four videos from the rkispp_m_bypass, rkispp_scale0, rkispp_scale1, rkispp_scale2 nodes as the video output. The node information can be found by the following command:

```
1 | media-ctl -p -d /dev/media*
```

Use VP to complete the video from the rkispp_input_image node as the video input, and use the VI to complete the video from the rkispp_m_bypass, rkispp_scale0, rkispp_scale1, and rkispp_scale2 nodes as the video output, which can achieve one input four output.

rkispp_m_bypass, rkispp_scale0, rkispp_scale1, rkispp_scale2 usage requirements reference: Table 3-1 ISPP video node (RV1126/RV1109 chipset), rkispp_scale0, rkispp_scale1, rkispp_scale2 can achieve scaling, replace the scaling function of RGA, alleviate RGA hardware stress for related products such as DVR.

To use VP function, you need to configure the corresponding media node first, for example:

```
1 | media-ctl -d /dev/media5 -l '"rkispp_input_image":0->"rkispp-subdev":0[1] '
2 | media-ctl -d /dev/media5 --set-v4l2 '"rkispp-
  | subdev":0[fmt:YUYV8_2X8/1920x1080] '
3 | media-ctl -d /dev/media5 --set-v4l2 '"rkispp-
  | subdev":2[fmt:YUYV8_2X8/1920x1080] '
```

After the configuration, you need to open 4 output nodes (1 to 4 nodes can be opened), and finally open the input nodes. The data of the input node can come from other VIs, RGAs, etc.

13.2 Function Description

To realize the video one in four out.

13.3 API Description

13.3.1 RK_MPI_VP_EnableChn

【Description】

Enable the VP channel.

【Grammar】

RK_S32 RK_MPI_VP_EnableChn(VP_PIPE VpPipe, VP_CHN VpChn);

【Parameter】

Parameter name	Description	Input/Output
VpPipe	VP pipe number.	Input
VpChn	VP channel number. Value range: [0, VP_MAX_CHN_NUM).	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None.

【Example】

[rkmedia_vi_vp_vo_test](#).

【Related topic】

[RK_MPI_VP_DisableChn](#)

13.3.2 RK_MPI_VP_DisableChn

【Description】

Close the VP channel.

【Grammar】

RK_S32 RK_MPI_VP_DisableChn(VP_PIPE VpPipe, VP_CHN VpChn);

【Parameter】

Parameter name	Description	Input/Output
VpPipe	VP pipe number.	Input
VpChn	VP channel number. Value range: [0, VP_MAX_CHN_NUM).	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None.

【Example】

[rkmedia_vi_vp_vo_test](#).

【Related topic】

[RK_MPI_VP_EnableChn](#)

13.3.3 RK_MPI_VP_SetChnAttr

【Description】

Set VP channel attributes.

【Grammar】

```
RK_S32 RK_MPI_VP_SetChnAttr(VP_PIPE VpPipe, VP_CHN VpChn, const VP_CHN_ATTR_S
*pstChnAttr);
```

【Parameter】

Parameter name	Description	Input/Output
VpPipe	VP pipe number.	Input
VpChn	VP channel number. Value range: [0, VP_MAX_CHN_NUM).	Input
pstChnAttr	VP Channel attribute structure pointer.	Input

【Return value】

Return value	Description
0	Success.
Not 0	Failure, see error code for its value.

【Requirement】

Header file: rkmedia_api.h

Library file: libeasymedia.so

【Notice】

None

【Example】

[rkmedia_vi_vp_vo_test](#).

【Related topic】

None.

13.4 Type of Data

The video input related data types are defined as follows:

[VP_MAX_CHN_NUM](#): Define the total number of VP physical channels.

[VP_PIPE](#): VP pipe number.

[VP_CHN](#): VP channel number.

[VP_CHN_ATTR_S](#): VP channel attribute structure pointer.

13.4.1 VP_MAX_CHN_NUM

【Description】

Define the total number of VP physical channels. For RV1126/RV1109 ISPP, it is up to 8 can be configured.

【Definition】

```
1 | RV1109/RV1126:  
2 | #define VP_MAX_CHN_NUM 8
```

13.4.2 VP_PIPE

【Description】

The VP pipe number is not used yet.

【Definition】

```
1 | typedef RK_S32 VP_PIPE;
```

13.4.3 VP_CHN

【Description】

VP channel number.

【Definition】

```
1 | typedef RK_S32 VP_CHN;
```


13.4.4 VP_CHN_ATTR_S

【Description】

VP Channel attribute structure pointer.

【Definition】

```
1  typedef enum rkVP_CHN_WORK_MODE {
2      VP_WORK_MODE_NORMAL = 0,
3      VP_WORK_MODE_BUTT
4  } VP_CHN_WORK_MODE;
5
6  typedef enum rkVP_CHN_BUF_TYPE {
7      VP_CHN_BUF_TYPE_DMA = 0, // Default
8      VP_CHN_BUF_TYPE_MMAP,
9  } VP_CHN_BUF_TYPE;
10
11 typedef struct rkVP_CHN_ATTR_S {
12     const RK_CHAR *pcVideoNode;
13     RK_U32 u32Width;
14     RK_U32 u32Height;
15     IMAGE_TYPE_E enPixFmt;
16     RK_U32 u32BufCnt; // VP output video buffer cnt.
17     VP_CHN_BUF_TYPE enBufType; // VP output video buffer type.
18     VP_CHN_WORK_MODE enWorkMode;
19 } VP_CHN_ATTR_S;
```

【Members】

Member name	Description
pcVideoNode	Video node path.
u32Width	Video width.
u32Height	video height.
enPixFmt	video format.
u32BufCnt	VP capture video buffer count
enBufType	VP video buffer type
enWorkMode	VP channel working mode

【Notices】

VI_WORK_MODE_LUMA_ONLY mode is used for VI brightness statistics. In this mode, VI has no output and cannot obtain data from VI.

【Related data types and interfaces】

[IMAGE_TYPE_E](#)

[RK_MPI_VI_SetChnAttr](#)

13.5 Error Code

Table 13-1 VP API error codes

Error code	Macro definition	Description
150	RK_ERR_VP_INVALID_CHNID	VP input channel number is invalid
151	RK_ERR_VP_BUSY	Device is occupied
152	RK_ERR_VP_EXIST	VP channel has been opened
153	RK_ERR_VP_NOT_CONFIG	The parameter is not configured
154	RK_ERR_VP_TIMEOUT	Timeout
155	RK_ERR_VP_BUF_EMPTY	Data is empty
156	RK_ERR_VP_ILLEGAL_PARAM	Illegal parameter
157	RK_ERR_VP_NOTREADY	VP channel has not been opened yet

14. Notices

14.1 Channel Destruction Order

It is important to note that rkmedia has special requirements for destruction order of modules: the subsequent modules in the data flow pipeline must be destroyed before the previous modules. such as: VI --> RGA --> VENC The recommended order of destruction is as follows: destroy VENC destroy RGA destroy VI

Take VI as an example. VI is a data generator, The generated buffer may be occupied by the subsequent stage when the data pipeline is destroyed, resulting in the resources managed by VI being occupied. You will encounter device busy error when you open it again. This problem may occur when frequently creating and destroying data channels.

14.2 Parameter Initialization

It is recommended to use memset to initialize the parameter to 0 to avoid the influences of random initialization of parameters.

15. Proc Debugging Information Description

15.1 VI

When VI has no data output, check the following node information to check where is abnormal.

【Debugging information】

```
1  # cif command
2  cat /proc/rkcif_mipi_lvds | grep "frame amount"; sleep 3; cat
   /proc/rkcif_mipi_lvds | grep "frame amount"
3  # ouput
4  frame amount:1836735
5  frame amount:1836826
6
7  # isp command
8  cat /proc/rkisp* | grep Output; sleep 3; cat /proc/rkisp* | grep Output;
9  # output
10 Output rkispp0 ON Format:FBC420 Size:2688x1520 (frame:1837606 rate:32ms)
11 Output rkispp_m_bypass Format:NV12 Size:2688x1520 (frame:1837606 rate:31ms
   delay:29ms)
12 Output rkispp_scale0 Format:NV12 Size:1920x1080 (frame:1837606 rate:31ms
   delay:29ms)
13 Output rkispp_scale1 Format:NV12 Size:704x576 (frame:1837606 rate:31ms
   delay:29ms)
14 Output rkispp_scale2 Format:NV12 Size:1280x720 (frame:1837606 rate:31ms
   delay:29ms)
15 Output rkispp0 ON Format:FBC420 Size:2688x1520 (frame:1837698 rate:33ms)
16 Output rkispp_m_bypass Format:NV12 Size:2688x1520 (frame:1837697 rate:32ms
   delay:29ms)
17 Output rkispp_scale0 Format:NV12 Size:1920x1080 (frame:1837697 rate:32ms
   delay:29ms)
18 Output rkispp_scale1 Format:NV12 Size:704x576 (frame:1837697 rate:32ms
   delay:29ms)
19 Output rkispp_scale2 Format:NV12 Size:1280x720 (frame:1837697 rate:32ms
   delay:29ms)
```

【Analysis of the debugging information】

To get the difference between before and after frames, if frames increases normally, it means that the channel can transmit data normally. If the frame does not change, the channel may be abnormal and the data may be blocked.

【Parameter Description】

Parameter name	Description
frame amount/frame	The number of output frame
rate	The rate of output frame
Format	The format of output
Size	The size of output frame

Note: parameters which are not mentioned here, are not used in the debugging of RKMedia.

15.2 VENC

【Debug information】

```
1  # command
2  cat /proc/mpp_service/session_summary
3  # output
4  -----
5  | session| device| width| height| format| fps_in| fps_out| rc_mode|
   | bitrate|gop_size|fps_calc| profile|
6  |8cdb338a| RKVENC| 2688| 1520| avc| 25| 16| vbr| 7549747| 50| 19.49| high|
7  -----
8  | session| device|
9  |0a1be0b6| VEPU2|
10 -----
11 | session| device| width| height| format| fps_in| fps_out| rc_mode|
   | bitrate|gop_size|fps_calc| profile|
12 |6e6fd71b| RKVENC| 704| 576| avc| 25| 25| cbr| 943718| 50| 30.60| high|
13 -----
14 | session| device| width| height| format| fps_in| fps_out| rc_mode|
   | bitrate|gop_size|fps_calc| profile|
15 |a87d7eac| RKVENC| 1920| 1080| hevc| 25| 25| cbr| 1887436| 50| 30.51| main|
```

【Analysis of debugging information】

Check VENC parameters of each channel to make sure whether the parameters of channel creation/modification are normal.

【Parameter Description】

Parameter name	Description
width	The width of resolution
height	The high of resolution
format	Format
fps_in	The rate of input frame
fps_out	The rate of output frame
rc_mode	Rate control mode
bitrate	Bit rate
gop_size	I frame interval
fps_calc	Actual calculated frame rate
profile	Encoder profile

Note: parameters which are not mentioned here, will not be used in the debugging of RKMedia.

16. LOG Debugging Level Description

It is supported to modify of the current debugging level of each module dynamically .

For the echo command which is used to modify the debug level of a module, please refer to the following example:

```
echo "venc=3"> /tmp/loglevel
```

Modify the debugging level of all modules:

```
echo "all=3"> /tmp/loglevel
```

Modules listed in [MOD_ID_E](#) are all supported, with lowercase of module names.

The numbers 0~3 correspond to the four levels of ERROR, WARN, INFO, and DEBUG respectively.

17. Examples

The following will provide functional examples, and notices for use are as follows:

1. Before running an example, ensure that no other applications occupy the nodes used by examples, such as mediaserver.
2. If ispserver is running in the background, the -a parameter cannot be used; if there is no ispserver in the background, the -a parameter must be used.
3. When running ISP related examples, ensure that no other ISP applications are running, such as ispserver.
4. The default parameters of the sample are suitable for our EVB. When hardwares are different from ours, the sample may need to display specify the parameters or modify the code.

17.1 rkmedia_ai_test

【Description】

The audio input from a device is saved to a file.

【Code path】

external/rkmedia/examples/rkmedia_ai_test.c

【Quick start】

```
1 | ./rkmedia_ai_test
```

【Options】

Options	Description	Default value
-d	The name of audio input node	default
-r	Input sampling rate	16000
-c	Input channel number	2
-o	Output file path	/tmp/ai.pcm

【Notice】

The example only supports saving to pcm file, with the format of s16_le.

17.2 rkmedia_ai_aenc_test

【Description】

To save recording code.

【Code path】

external/rkmedia/examples/rkmedia_ai_aenc_test.c

【Quick usage】

```
1 | ./rkmedia_adec_ao_test -i /tmp/aenc.mp3
```

【Options】

Options	Description	Default value
-d	The name of audio input node	default
-r	Input sampling rate	16000
-c	Input channel number	2
-o	Output file path	/tmp/aenc.mp3

【Notice】

The format is s16_le.

17.3 rkmedia_ao_test

【Description】

Read audio files and play them.

【Code path】

external/rkmedia/examples/rkmedia_ao_test.c

【Quick start】

```
1 | ./rkmedia_ao_test -i /tmp/ao.pcm
```

【Options】

Option	Description	Default value
-d	The name of audio input nodes	default
-r	Input sampling rate	16000
-c	Input channel number	2
-i	Input file path	None
-s	Number of output frames	1024

【Notice】

The example only supports saving to pcm file, with the format of s16_le.

17.4 rkmedia_adec_ao_test

【Description】

Decode and play.

【Code path】

external/rkmedia/examples/rkmedia_adec_ao_test.c

【Quick start】

```
1 | ./rkmedia_adec_ao_test -i /tmp/aenc.mp3
```

【Options】

Options	Description	Default value
-d	The name of audio output node	default
-r	Output sampling rate	16000
-c	Output channel number	2
-i	Input file path	/tmp/aenc.mp3

【Notice】

Output format is s16_le.

17.5 rkmedia_audio_test

【Description】

Audio function demo example, it supports four modes: AI->AENC->AO cycle, AI->AENC->File, File->ADEC->AO, AI input and AO output after Vqe enhancement.

【Code path】

external/rkmedia/examples/rkmedia_audio_test.c

【Quick start】

```
1  # AI->AENC->AO
2  ./rkmedia_audio_test 0 16000
3
4  # AI->AENC->File
5  ./rkmedia_audio_test 1 16000
6
7  # File->ADEC->AO
8  ./rkmedia_audio_test 2 16000
9
10 # AI input Vqe enhanced AO output
11 ./rkmedia_audio_test 3 16000
```

【Options】

Option	Description	Default value
The first input parameter	Required option, 0 is AI->AENC->AO, 1 is AI->AENC->File, 2 is File->ADEC->AO, 3 is AI input and AO output after Vqe enhancement.	None
The second input parameter	Sampling rate. Options: 0, 16000, 22050, 24000, 32000, 44100, 48000.	None
The third input parameter	output file path	/userdata/out.mp2

【Notice】

The output format of sl6_le.

17.6 rkmedia_vi_get_frame_test

【Description】

Getting VI channel data, it will demo how to get the video stream when VI have not been bound.

【Code path】

external/rkmedia/examples/rkmedia_vi_get_frame_test.c

【Quick start】

```
1 | ./rkmedia_vi_get_frame_test
```

【Options】

Options	Description	Default value
-a --aiq	Enable the built-in ISP function, Input this option to enable the built-in ISP function, when no parameter, the default value will be used, the parameter is the folder path where the aiq file is located.	/oem/etc/iqfiles/
-h --height	The high of resolution.	1080
-w --width	The width of resolution.	1920
-d --device_name	Device node.	rkispp_scale0
-o --output	Output file path, no output if it is not set.	/tmp/1080p.nv12
-c --frame_cnt	Number of output frames, setting -1 is not limit. The output path does not take effect if it is not set.	-1
-? --help	Display help information.	None

【Notice】

The output format is nv12.

17.7 rkmedia_vi_luma_only_mode_test

【Description】

VI brightness counting example. It will demonstrate how VI can enable brightness mode without binding.

【Code path】

external/rkmedia/examples/rkmedia_vi_luma_only_mode_test.c

【Quick start】

```
1 | ./rkmedia_vi_luma_only_mode_test
```

【Options】

Options	Description	Default value
-a --aiq	Enable the built-in ISP function, Input this option to enable the built-in ISP function, when no parameter, the default value will be used, the parameter is the folder path where the aiq file is located.	/oem/etc/iqfiles/
-? --help	Show help options.	None.

【Notice】

No.

17.8 rkmedia_vi_multi_bind_test

【Description】

Single VI channel binding multiple VENC channels demo.

【Code path】

external/rkmedia/examples/rkmedia_vi_multi_bind_test.c

【Quick start】

```
1 | ./rkmedia_vi_multi_bind_test
```

【Options】

Options	Description	Default value
-a --aiq	Enable the built-in ISP function, Input this option to enable the built-in ISP function, when no parameter, the default value will be used, the parameter is the folder path where the aiq file is located.	/oem/etc/iqfiles/
-? --help	Show help options.	None.

【Notice】

No.

17.9 rkmedia_vi_venc_test

【Description】

Input code to a device and saves it to a file.

【Code path】

external/rkmedia/examples/rkmedia_vi_venc_test.c

【Quick start】

```
1 | ./rkmedia_vi_venc_test -o /tmp/venc_output.h264
```

【Options】

Options	Description	Default value
-a --aiq	Enable the built-in ISP function, Input this option to enable the built-in ISP function, when no parameter, the default value will be used, the parameter is the folder path where the aiq file is located.	/oem/etc/iqfiles/
-h --height	The high of resolution.	1080
-w --width	The width of resolution.	1920
-d -- device_name	Device node.	rkispp_scale0
-o --output	Output file path.	/tmp/venc_output.h264
-c --frame_cnt	Number of output frames.	150
-e --encode	Encoding format, 0 sets H264 encoding, 1 sets H265 encoding	0
-? --help	Show help options.	None.

【Notice】

No.

17.10 rkmedia_vi_vo_test

【Description】

VI uses rkmedia built-in RGA to implement dual-window playback at the same time in a screen.

【Code path】

external/rkmedia/examples/rkmedia_vi_vo_test.c

【Quick start】

```
1 | ./rkmedia_vi_vo_test
```

【Options】

Options	Description	Default value
-a --aiq	Enable the built-in ISP function, Input this option to enable the built-in ISP function, when no parameter, the default value will be used, the parameter is the folder path where the aiq file is located.	/oem/etc/iqfiles/
-? --help	Show help options.	None.

【Notice】

No.

17.11 rkmedia_venc_avbr_test

【Description】

VENC AVBR mode demo.

【Code path】

external/rkmedia/examples/rkmedia_venc_avbr_test.c

【Quick start】

```
1 | ./rkmedia_venc_avbr_test
```

【Options】

Options	Description	Default value
-a --aiq	Enable built-in ISP function, Input this option to enable built-in ISP function, when no parameter, the default value will be used, parameter is the folder path where the aiq file is located.	/oem/etc/iqfiles/
-o --output	Output path.	/userdata/output.h265
-? --help	Show help options.	None.

【Notice】

The output format is H265.

17.12 rkmedia_venc_jpeg_test

【Description】

The built-in RGA module in rkmedia is used to set bitmaps overlay and saves them through jpeg channel. After starting, hit Enter to save peg screenshots in the tmp directory in real time, and hit quit to exit.

【Code path】

external/rkmedia/examples/rkmedia_venc_jpeg_test.c

【Quick start】

```
1 | ./rkmedia_venc_jpeg_test
```

【Options】

Options	Description	Default value
-a --aiq	Enable the built-in ISP function, Input this option to enable the built-in ISP function, when no parameter, the default value will be used, the parameter is the folder path where the aiq file is located.	/oem/etc/iqfiles/
-w --width	The width of output resolution.	720
-h --height	The high of output resolution.	480
-W --Width	The width of input resolution.	1920
-H --Height	The high of input resolution.	1080
-o --output	Output folder path	/tmp/
-? --help	Show help options.	None.

【Notice】

The output resolution should not exceed 4096*4096.

17.13 rkmedia_venc_local_file_test

【Description】

The local nv12 file is encoded by venc and saved to local file.

【Code path】

external/rkmedia/examples/rkmedia_venc_local_file_test.c

【Quick start】

```
1 | ./rkmedia_venc_local_file_test
```

【Options】

Options	Description	Default value
-e --encode	Encoding format, 0 sets H264 encoding, 1 sets H265 encoding	0
-i --input	Input path.	/tmp/1080p.nv12
-o --output	Output path.	/tmp/output.h264
-? --help	Show help options.	None.
【Notice】		

No.

17.14 rkmedia_venc_smartp_test

【Description】

Example of using smartp mode.

【Code path】

external/rkmedia/examples/rkmedia_venc_smartp_test.c

【Quick start】

```
1 | ./rkmedia_venc_smartp_test
```

【Options】

Options	Description	Default value
-a --aiq	Enable the built-in ISP function, Input this option to enable the built-in ISP function, when no parameter, the default value will be used, the parameter is the folder path where the aiq file is located.	/oem/etc/iqfiles/
-o --output	Output folder path, the file name is fixed	/tmp/output.h264
-? --help	Show help options.	None.

【Notice】

The output format is h264.

17.15 rkmedia_main_stream_with_jpeg_test

【Description】

The example with main stream encoding and snapshot. Hit Enter to capture in real time .

【Code path】

external/rkmedia/examples/rkmedia_main_stream_with_jpeg_test.c

【Quick start】

```
1 | ./rkmedia_main_stream_with_jpeg_test
```

【Options】

Options	Description	Default value
-a --aiq	Enable the built-in ISP function, Input this option to enable the built-in ISP function, when no parameter, the default value will be used, the parameter is the folder path where the aiq file is located.	/oem/etc/iqfiles/
-o --output	The output folder path, the file name is fixed.	/tmp/
-? --help	Show help options.	None.

【Notice】

No.

17.16 rkmedia_vdec_test

【Description】

Decode and display the input file.

【Code path】

external/rkmedia/examples/rkmedia_vdec_test.c

【Quick start】

```
1 | ./rkmedia_vdec_test -w 720 -h 480 -i /userdata/out.jpeg -f 0 -t JPEG
```

【Options】

Option	Description	Default value
-w	The with of input file resolution	1280
-h	The high of input file resolution	720
-i	Input file path	None
-f	Decoding ways, 0: software decoding, 1: hardware decoding	1
-t	Input file encoding format, JPEG, MJPEG, H264, H265 are supported	None
-l	Loop playback switch, 0: off, 1: on	-1
-? --help	Show help options.	None.

【Notice】

No.

17.17 rkmedia_vo_display_test

【Description】

VO playback demo.

【Code path】

external/rkmedia/examples/rkmedia_vo_display_test.c

【Quick start】

```
1 | ./rkmedia_vo_display_test
```

【Options】

Option	Description	Default value
-d	VO output node.	/dev/dri/card0
-t	Layer type. Optional: Primary, Overlay.	Primary
-s	Play the width and height of coordinate randomly . 0: Off; 1: On.	0
-x	Play coordinate x.	0
-y	Play coordinate y.	0
-w	The width of play .	720
-h	The height of play.	1080
-f	The frequency of play.	60
-z	The Z coordinate of playback layer. 0, 1, 2 are optional	0
-?	Show help options.	None

【Notice】

No.

17.18 rkmedia_vo_scale_test

【Description】

It is a VO scaling example.

【Code path】

external/rkmedia/examples/rkmedia_vo_scale_test.c

【Quick start】

```
1 | ./rkmedia_vo_scale_test
```

【Options】

Options	Description	Default value
-a --aiq	Enable the built-in ISP function, Enter this option to enable the built-in ISP function, when no parameter, the default value will be used, the parameter is the folder path where the aiq file is located.	/oem/etc/iqfiles/
-? --help	Show help options.	None.

【Notice】

No.

17.19 rkmedia_venc_cover_test

【Description】

It is a VENC privacy cover example

【Code path】

external/rkmedia/examples/rkmedia_venc_cover_test.c

【Quick start】

```
1 | ./rkmedia_venc_cover_test
```

【Options】

Option	Description	Default value
-a --aiq	Enable the built-in ISP function, Input this option to enable the built-in ISP function, when no parameter, the default value will be used, the parameter is the folder path where the aiq file is located.	/oem/etc/iqfiles/
-o --output	Output path.	/userdata/output.h264
-? --help	Show help options.	None.

【Notice】

The output format is H264.

17.20 rkmedia_venc_mjpeg_test

【Description】

It is a mjpeg encoding example

【Code path】

external/rkmedia/examples/rkmedia_venc_mjpeg_test.c

【Quick start】

```
1 | ./rkmedia_venc_mjpeg_test
```

【Options】

Option	Description	Default value
-a --aiq	Enable the built-in ISP function, Input this option to enable the built-in ISP function, when no parameter, the default value will be used, the parameter is the folder path where the aiq file is located.	/oem/etc/iqfiles/
-m --mode	Bit rate type, cbr sets fixed bit rate, vbr sets variable bit rate	vbr
-o --output	Output path.	/tmp/test.mjpg
-? --help	Show help options.	None.

【Notice】

No.

17.21 rkmedia_venc_osd_test

【Description】

It is a VENC OSD overlay example

【Code path】

external/rkmedia/examples/rkmedia_venc_osd_test.c

【Quick start】

```
1 | ./rkmedia_venc_osd_test
```

【Options】

Options	Description	Default value
-a --aiq	Enable the built-in ISP function, Input this option to enable the built-in ISP function, when no parameter, the default value will be used, the parameter is the folder path where the aiq file is located.	/oem/etc/iqfiles/
-o --output	Output path.	/tmp/output.h264
-? --help	Show help options.	None.

【Notice】

The output format is h264.

17.22 rkmedia_venc_roi_osd_test

【Description】

VENC ROI& OSD example

【Code path】

external/rkmedia/examples/rkmedia_venc_roi_osd_test.c

【Quick start】

```
1 | ./rkmedia_venc_roi_osd_test
```

【Options】

Options	Description	Default value
-a --aiq	Enable the built-in ISP function, Input this option to enable the built-in ISP function, when no parameter, the default value will be used, the parameter is the folder path where the aiq file is located.	/oem/etc/iqfiles/
-o --output	Output folder path, with fixed file name.	/tmp/
-? --help	Show help options.	None.

【Notice】

The output format is h264.

17.23 rkmedia_rga_api_test

【Description】

A demo which is VI input and VO output through external RGA library cutting.

【Code path】

external/rkmedia/examples/rkmedia_rga_api_test.c

【Quick start】

```
1 | ./rkmedia_rga_api_test
```

【Options】

Options	Description	Default value
-a --aiq	Enable the built-in ISP function, Input this option to enable the built-in ISP function, when no parameter, the default value will be used, the parameter is the folder path where the aiq file is located.	/oem/etc/iqfiles/
-H --vi_height	The height of VI input resolution.	1920.
-W --vi_width	The width of VI input resolution.	1080.
-h --crop_height	The height of resolution after cutting.	640.
-w --crop_width	The width of resolution after cutting.	640.
-x --crop_x	The cropped coordinate X, the upper left corner of VI is origin.	300.
-y --crop_y	The cropped coordinate Y, the upper left corner of VI is origin.	300.
-d -- device_name	Input node.	rkispp_scale0.
-? --help	Show help options.	None.

【Notice】

Devices which without allocating /dev/dri/card0 node cannot be used.

17.24 rkmedia_rga_crop_venc_test

【Description】

The example which is VI input and rtsp live output after cropped by external RGA library and VENC encoding.

【Code path】

external/rkmedia/examples/rkmedia_rga_crop_venc_test.c

【Quick start】

```
1 | ./rkmedia_rga_crop_venc_test
```

【Options】

Option	Description	Default value
-a --aiq	Enable the built-in ISP function, Input this option to enable the built-in ISP function, when no parameter, the default value will be used, the parameter is the folder path where the aiq file is located.	/oem/etc/iqfiles/
-H --vi_height	The height of VI input resolution.	1920.
-W --vi_width	The width of VI input resolution.	1080.
-h --crop_height	The height of resolution after cutting.	640.
-w --crop_width	The width of resolution after cutting.	640.
-x --crop_x	The cropped coordinate X, the upper left corner of VI is origin.	300.
-y --crop_y	The cropped coordinate Y, the upper left corner of VI is origin.	300.
-r --rotation	VENC rotation, supports 0,90,180,270.	0.
-d -- device_name	Input node.	rkispp_scale0.
-? --help	Show help options.	None.

【Notice】

Live URL is `rtsp://<ip>/live/main_stream`.

17.25 rkmedia_rga_osd_test

【Description】

It is an OSD overlay through RGA example.

【Code path】

`external/rkmedia/examples/rkmedia_rga_osd_test.c`

【Quick start】

```
1 | ./rkmedia_rga_osd_test
```

【Options】

Options	Description	Default value
-a --aiq	Enable the built-in ISP function, Input this option to enable the built-in ISP function, when no parameter, the default value will be used, the parameter is the folder path where the aiq file is located.	/oem/etc/iqfiles/
-m --mode	Mode selection, 0 is solid rectangle mode, 1 is frame mode.	0.
-r --raw_frame	The number of frames saved without RGA processing.	0.
-p --process_frame	The number of frames saved by RGA processing.	1.
-o --output	Output jpeg folder path.	/tmp/.
-? --help	Show help options.	None.

【Notice】

No.

17.26 rkmedia_isp_test

【Description】

An ISP function example, ISP settings can be switched after starting according to the menu prompts.

【Code path】

external/rkmedia/examples/rkmedia_isp_test.c

【Quick start】

```
1 | ./rkmedia_isp_test
```

【Options】

Option	Description	Default value
-a --aiq	Specify the path of the folder where the aiq file is located.	/oem/etc/iqfiles/
-? --help	Show help options.	None.

【Notice】

When running this example, ensure that ispserver is not turned on.

17.27 rkmedia_vi_double_cameras_test

【Description】

An example of binocular ISP.

【Code path】

external/rkmedia/examples/rkmedia_vi_double_cameras_test.c

【Quick start】

```
1 | ./rkmedia_vi_double_cameras_test
```

【Options】

Option	Description	Default value
-a	Specify the folder where the aiq file is located. If not specified, ISP related services need to be opened in other applications.	None
-W	The width of input video resolution.	1920
-H	The height of input video resolution.	1080
-w	The width of output video resolution.	720
-h	The height of output video resolution.	1280
-u	The height of ui z layer, values [0, 1]	1

【Notice】

No.

17.28 rkmedia_vi_double_cameras_switch_test

【Description】

A binocular ISP example, VO playback channel is optional according to the input parameters.

【Code path】

external/rkmedia/examples/rkmedia_vi_double_cameras_switch_test.c

【Quick start】

```
1 | ./rkmedia_vi_double_cameras_switch_test
```

【Options】

Option	Description	Default value
-a	Specify the folder where the aiq file is located. If not specified, ISP related services need to be opened in other applications.	None
-W	The width of input video resolution.	1920
-H	The height of input video resolution.	1080
-w	The width of output video resolution.	720
-h	The height of output video resolution.	1280
-u	The height of ui z layer, values [0, 1]	1
-i	Output channel id, values [0, 1]	0

【Notice】

When running this example, ensure that ispserver is not started.

17.29 rkmedia_vi_md_test

【Description】

An example of motion detection functions.

【Code path】

external/rkmedia/examples/rkmedia_vi_md_test.c

【Quick start】

```
1 | ./rkmedia_vi_md_test
```

【Options】

Option	Description	Default value
-a --aiq	Enable the built-in ISP function, Input this option to enable the built-in ISP function, When no parameter, default value is used, the parameter is the folder path where the aiq file is located.	/oem/etc/iqfiles/
-? --help	Show help options.	None.

【Notice】

No.

17.30 rkmedia_vi_od_test

【Description】

An examples of occlusion detection functions.

【Code path】

external/rkmedia/examples/rkmedia_vi_od_test.c

【Quick start】

```
1 | ./rkmedia_vi_od_test
```

【Options】

Option	Description	Default value
-a --aiq	Enable the built-in ISP function, Input this option to enable the built-in ISP function, when no parameter, the default value is used, the parameter is the folder path where the aiq file is located.	/oem/etc/iqfiles/
-? --help	Show help options.	None.

【Notice】

No.

17.31 rkmedia_vi_rknn_venc_rtsp_test

【Description】

An example of face recognition function based on rknn_api.

【Code path】

external/rkmedia/examples/rkmedia_vi_rknn_venc_rtsp_test.c

【Quick start】

```
1 | ./rkmedia_vi_rknn_venc_rtsp_test
```

【Options】

Option	Description	Default value
-a --aiq	Enable the built-in ISP function, Input this option to enable the built-in ISP function, when no parameter, the default value is used, the parameter is the folder path where the aiq file is located.	/oem/etc/iqfiles/
-c -- cfg_path	rtsp configuration file.	/oem/usr/share/rtsp-nn.cfg.
-b -- box_priors	box priors file.	/oem/usr/share/rknn_model/box_priors.txt.
-l -- labels_list	labels list file.	/oem/usr/share/rknn_model/coco_labels_list.txt.
-p -- ssd_path	ssd file.	/oem/usr/share/rknn_model/ ssd_inception_v2_rv1109_rv1126.rknn.
-? --help	Show help options.	None.

【Notice】

The default RTSP address: rtsp://<ip>/live/main_stream.

17.32 rkmedia_vi_rockx_venc_rtsp_test

【Description】

An example of rockx-based face recognition and human shape detection functions. Including recognition frame and a snapshot of recognition result.

【Code path】

external/rkmedia/examples/rkmedia_vi_rockx_venc_rtsp_test.c

【Quick start】

```
1 | ./rkmedia_vi_rockx_venc_rtsp_test
```

【Options】

Option	Description	Default value
-a --aiq	Enable the built-in ISP function, Input this option to enable the built-in ISP function, when no parameter, the default value is used, the parameter is the folder path where the aiq file is located.	/oem/etc/iqfiles/
-c --cfg_path	rtsp configuration file.	/oem/usr/share/rtsp-nn.cfg
-r -- runtime_path	runtime file path.	/usr/lib/librknn_runtime.so
-v -- data_version	Model Library, 0: PERSON_DETECTION_V2; 1: PERSON_DETECTION_V3; 2: FACE_DETECTION_V2; 3: FACE_DETECTION_V3_LARGE;	0
-l --limit_score	Check the lower limit of score.	Human shape detection: 0.45; Face detection V2: 0.75; Face detection V3: 0.8.
-p -- photo_dirpath	Identify the path to save the snapshot.	/tmp/
-t --time_log	Time statistics log level. 0: disable; 1: detection time-consuming log; 2: image frame time-consuming log; 3: all logs.	0
-f --fps	ISP frame rate.	30
-m --hdr_mode	HDR mode. 0: normal mode; 1: HDR2 mode.	0
-? --help	Show help options.	None

【Notice】

The default RTSP address: rtsp://<ip>/live/main_stream.

17.33 rkmedia_vmix_vo_test

【Description】

rkmedia_vmix_vo_test mainly realizes 8-channel video capture, 8-channel video synthesis display, and supports regional picture frames.

【Code path】

external/rkmedia/examples/rkmedia_vmix_vo_test.c

【Quick start】

```
1 | ./rkmedia_vmix_vo_test
```

【Options】

Option	Description	Default value
-a --aiq	Enable built-in ISP function, Enter this option to enable built-in ISP function, When there is no parameter, it will use the default value; the parameter is the folder path where the aiq file is located.	/oem/etc/iqfiles/
-I --camid	camera id	0
-M --multictx	Enable multi-channel camera	0

【Notice】

None

17.34 rkmedia_vmix_vo_dvr_test

【Description】

rkmedia_vmix_vo_dvr_test mainly realizes 8-channel video capture and encoding, 8-channel video synthesis display, supports 8-channel video switching to front 4-channel and back 4-channel display, supports regional frame, supports RGN cover, supports screen OSD, supports channel display and hiding, support area brightness capturing of the channel.

【Code path】

external/rkmedia/examples/rkmedia_vmix_vo_dvr_test.c

【Quick start】

```
1 | rkmedia_vmix_vo_dvr_test
```

【Options】

None

【Notice】

None

17.35 rkmedia_vi_uvc_test

【Description】

Examples of uvc usage. This example shows how the rkmedia interface is associated with the uvc_app interface. For uvc related interface description, please refer to external/uvc_app/doc/zh-cn/Rockchip_Introduction_Linux_UVCApp_CN.pdf

【Code path】

external/rkmedia/examples/rkmedia_vi_uvc_test.c

【Quick start】

```
1 | rkmedia_vi_uvc_test
```

【Options】

None

【Notice】

None

17.36 rkmedia_multi_ao_test

【Description】

Example of multi-channel audio playback. The two audio channels in the example correspond to two speakers respectively. This example is mostly used in DVR scenes.

【Code path】

external/rkmedia/examples/multi_audio_test/rkmedia_multi_ao_test.c

【Quick start】

```
1 | rkmedia_multi_ao_test
```

【Options】

None

【Notice】

1. The running of this example depends on the corresponding asound.conf. Please refer to external/rkmedia/examples/multi_audio_test/ReadMe.txt for configuration.
2. When running on the official EVB board, only a certain channel will be heard. Because there is only one speaker on the EVB board, so it is normal.

17.37 rkmedia_multi_ai_test

【Description】

Example of multi-channel audio collection. Collect the audio data of the two channels separately and save them as pcm files. This example is mostly used in DVR scenes.

【Code path】

external/rkmedia/examples/multi_audio_test/rkmedia_multi_ai_test.c

【Quick start】

```
1 | rkmedia_multi_ai_test
```

【Options】

None

【Notice】

The operation of this example depends on the corresponding asound.conf. Please refer to external/rkmedia/examples/multi_audio_test/ReadMe.txt for configuration.

17.38 rkmedia_muxer_test

【Description】

This example demonstrates how to package audio and video streams into MP4 files.

【Code path】

external/rkmedia/examples/rkmedia_muxer_test.c

【Quick start】

```
1 | rkmedia_muxer_test
```

【Options】

None

【Notice】

None

17.39 rkmedia_vi_electrostatic_protection

【Description】

A sample program for camera electrostatic protection.

【Code path】

external/rkmedia/examples/rkmedia_vi_electrostatic_protection.c

【Quick start】

```
1 | rkmedia_vi_electrostatic_protection
```

【Options】

None

【Notice】

None

17.40 rkmedia_vi_vp_vo_test

【Description】

Video one in four out sample program.

【Code path】

external/rkmedia/examples/rkmedia_vi_vp_vo_test.c

【Quick start】

```
1 | rkmedia_vi_vp_vo_test -a /etc/iqfiles -i 45 -m 5
```

【Options】

Option	Description	Default value
-a --aiq	Enable the built-in ISP function, Enter this option to enable the built-in ISP function, if there is no parameter, it will use the default value, the parameter is the folder path where the aiq file is located.	/oem/etc/iqfiles/
-I --camid	camera id	0
-M --multictx	Multi-channel camera enable	0
-i --input	Input video node number	45
-m --media	media node number	5

【Notice】

None

18. Build Instructions

18.1 How to Configure RKMedia Build Options

```
1 | # SDK root directory, to select environment
2 | source envsetup.sh rockchip_rv1126_rv1109
3 | # Use the following command in the SDK root directory to enter the console
   | and edit the build options of RKMedia
4 | make menuconfig
5 | # Use / to enter the search mode, search BR2_PACKAGE_RKMEDIA, and use the
   | corresponding number to select BR2_PACKAGE_RKMEDIA, and use Select to enter
   | the RKMedia build option selection interface
```

18.2 Build Option Functions Description

Options	Description
camera capture	VI function switch
camera capture with rkaiq api	This option is visible after enabling camera capture. When VI data stream is obtained via AIQ, this macro needs to be turned on.
drm output	VO function switch
rk mpp wrapper	MPP codec switch, MPP codec function can be selected after it is turned on.
rk mpp encoder	MPP encoding switch, corresponding to VENC function.
rk mpp decoder	MPP decoder switch, corresponding to VDEC function.
audio capture and playback	Audio capture and playback function switch.
alsa playback	ALSA playback switch, corresponding to AO function.
alsa capture	ALSA capture switch, corresponding to AI function.
audio algorithm	Audio algorithm switch.
audio encoder and decoder	Audio codec master switch.
audio encoder	Audio encoding switch, corresponding to AENC function.
audio decoder	Audio decoder switch, corresponding to ADEC function.
rkgga	Built-in RGA function switch, corresponding to OSD, privacy cover, graphics overlay function.
rknn	RKNN face function switch, corresponding to rkmedia_vi_rknn_venc_rtsp_test , which is mainly used in customer face models.
rockface	ROCKFACE face detection function switch, corresponding to the face application in MediaServer.
enable face recognize	When rockface is turned on, it is visible, the face recognition function switch corresponds to the face application in MediaServer.
rockx	ROCKX face function switch, corresponding to the face function in rkmedia_vi_rockx_venc_rtsp_test .
rk movedetection wrapper	Motion detection function switch.
rk occlusion detection wrapper	Occlusion detection function switch.
enable rkmedia examples	Examples build switch.
enable rkmedia uvc demo	uvc demo switch.
utils for debug rkmedia	DEBUG function switch.
enable rkmedia sanitizer tools with dynamic linker	sanitizer tool dynamic library build switch.

Options	Description
enable rkmedia sanitizer tools with static linker	sanitizer tool static build switch.
Output log by minilogger	minilogger switch, minilogger will output log after opening.
live555	live555 master switch, corresponding to the live broadcast function in MediaServer.
rtsp server	It is visible after opening live555. The rtsp master switch corresponds to the rtsp live broadcast function in MediaServer.
rtsp server h264 session	It is visible after opening rtsp, playing H264 switch by rtsp.
rtsp server h265 session	It is visible after opening rtsp, playing H265 switch by rtsp.

18.3 RKMedia Build Introduction

```

1  # SDK root directory, to select environment
2  source envsetup.sh rockchip_rv1126_rv1109
3  # Re-build rkmedia source code
4  make rkmedia-dirclean && make rkmedia
5  # rkmedia library/program is packaged to the file system (oem.img)
6  ./build.sh rootfs
7  # Re-build oem.img, if there are other basic package configuration updates,
   you need to re-build rootfs.img

```